

USE AND CARE GUIDE

CAMBRIDGE 48IN ROUND DINING TABLE



Questions, problems, missing parts? Before returning to the store, call Hampton Bay Customer Service 8 a.m. - 6 p.m., EST, Monday-Friday

1-855-HD-HAMPTON

HAMPTONBAY.COM

THANK YOU

Table of Contents

Table of Contents	2
Safety Information	2
Set Up Your Furniture Properly	
Examine Your Furniture	2
Observe Weight Limits	2
Warranty	2
What is Covered	
What is Not Covered	2

Pre-Assembly	3	
Planning Assembly		
Hardware Included	3	
Package Contents	4	
Assembly	5	
Care and Cleaning		

Safety Information

SET UP YOUR FURNITURE PROPERLY

- Ensure that all parts are assembled properly and fully tightened as per the instructions.
- When placing in the desired location, ensure that all legs are resting on the same surface.

EXAMINE YOUR FURNITURE

Examine occasionally to ensure that there are no loose parts. If loose parts are found, they must be re-tightened fully before additional use.

OBSERVE WEIGHT LIMITS

The weight limits for the following products are listed below:

- □ Chair: 300 lbs Sofa: 700 lbs
- Swivel Chair: 300 lbs Rocking Chair: 300 lbs Loveseat: 500 lbs Chaise Lounge: 300 lbs Ottoman: 150 lbs Dining Table: 100 lbs Table: 50 lbs Dining Chair: 200 lbs

CAUTION: If you overload your furniture, injuries can occur.

Warranty

TWO YEAR FRAME, WEAVE AND FABRIC LIMITED WARRANTY

WHAT IS COVERED

We warrant the frame, weave and fabric to be free of manufacturing defects to the original purchaser for two years. For glass table top we warrant 30 days from the date of purchase.

WHAT IS NOT COVERED

This warranty does not cover commercial use, hardware, acts of nature, fire, freezing and abusive use. In addition, purchased parts are not covered under this warranty.

We reserve the right to make substitutions with similar merchandise, if the model in question is no longer in production.


Contact the Customer Service Team at 1-855-HD-HAMPTON or visit www.Hamptonbay.com.

Pre-Assembly

PLANNING ASSEMBLY

To prevent damage, place all parts on a soft surface during assembly. Remove all protective caps before beginning assembly.


HARDWARE INCLUDED

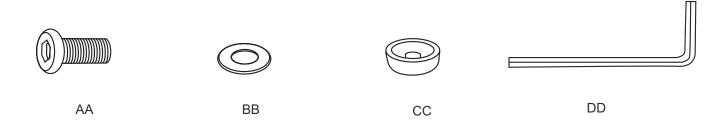

Part	Description	Quantity
AA	Bolt (48x16mm)	12
BB	Washers (8
CC	Caps for bolts (8
DD	Hex wrench (5mm)	1

Pre-Assembly (continued)

PACKAGE CONTENTS

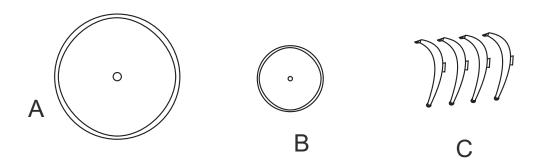


Part	Description	Quantity
Α	Table top	1
В	Lower shelf	1
С	Legs	4

Assembly


1 Attaching the leg to the shelf

- \Box Use the bolt (AA) to attach shelf (C) to leg (B).
- ☐ Tighten half way using the Hex wrench (DD).

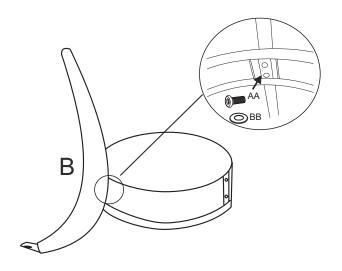


Attaching the other legs

□ Repeat step 1 for the other legs.

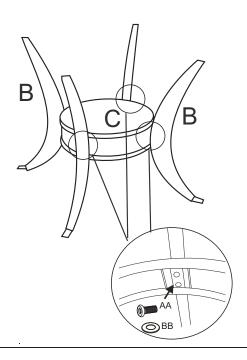

3 Attaching the leg to the top


- \Box Place the top (A) on a soft surface.
- \Box Use the bolt (AA) to attach leg (B) to top(A).
- ☐ Fully tighten all the bolts (AA) with Hex wrench(DD).

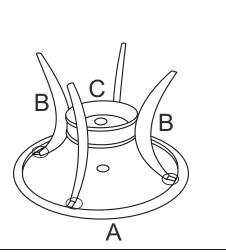



3 Adding the caps

- Check and make adjustments as needed.
- ☐ Fully tighten all the bolts (AA) with Hex wrench(DD)
- □ Place the table right side up.
 - This table is now ready for your enjoyment

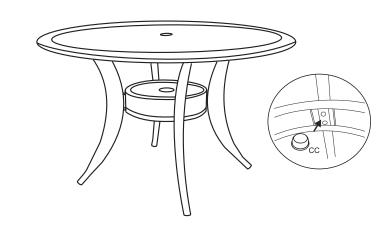

Care and Cleaning

- □ Before using, wipe with a clean, dry cloth. Do not use bleach or solvents. When not in use, store furniture in a cool, dry place.
- ☐ If your set includes cushions or mesh fabric, they may be cleaned by hand with a mild solution of soap and water. Rinse cushion thoroughly and allow to drip dry. Do not machine wash or tumble dry, as cushions may shrink.
- □ Do not use bleach or solvents on fabrics. When cleaning the table top make sure to use a soft, clean cloth that does not bleed color as well.



Questions, problems, missing parts? Before returning to the store, call Hampton Bay Customer Service 8 a.m. - 6 p.m., EST, Monday-Friday

1-855-HD-HAMPTON HAMPTONBAY.COM

Retain this manual for future use.