

FEATURES AND BENEFITS

1. **Blue Backlit LCD Digital Display**

Shows selected function, shade setting, temperature, and cooking time. Includes PREHEATING and READY readouts.

2. **Selector Dial/Button**

Lets you choose cooking functions and set baking time, clock, temperature, and toast shade.

3. **+30 Second Button (+30s)**

Lets you add 30 seconds of cooking time to any function.

4. **Oven Light Button**

Illuminates interior for 2 minutes so you can better monitor cooking progress.

5. **Convection Button (Conv)**

Starts convection fan for most cooking functions.

6. **Start/Stop Button**

Starts or stops a cooking function. It also activates the oven when it is in the dormant mode (plugged in but not lit).

7. **Speed Convection Button (Speed Conv)** – Eliminates preheating.

See page 11 for more detailed description.

8. **Dual Cook Button** – Combines 2 cooking functions or 2 temperatures to create more cooking options and flexibility.

9. **Front Pull-Out Crumb Tray**

The crumb tray slides out from the front of the Chef's Convection Toaster Oven for easy cleaning.

10. **Easy-Clean Interior**

The sides of the oven are specially coated, making it easier to wipe and clean the interior of the oven.

11. **Oven Racks**

Your oven includes two cooking racks. There are four positions to insert the racks into the oven. The upper positions have a stop feature so the rack stops halfway out of the oven. Racks can be removed by lifting the front of the rack and sliding out.

12. **Baking/Drip Pan**

A baking/drip pan is included for your convenience. Use with the broiling pan when broiling. Use alone when baking or roasting.

13. **Broiling Pan**

Fits into the baking/drip pan to use when broiling.

14. **Pizza Stone**

Your oven includes a 13-inch pizza stone to use when baking pizza, pastry or breads.

15. **Cord Storage (not shown)**

Takes up excess cord and keeps countertop neat.

16. **BPA Free (not shown)**

All materials that come in contact with food are BPA free.

