

IMPORTANT NOTES

Care and Maintenance

Cleaning

Frames -- Use mild soap and warm water. Do not use abrasive materials, cleansers or bleach products. Rinse with clean water and dry thoroughly.

**When cleaning or moving table, always have two people work together. Never drag table.*

Maintenance

Periodically clean your frames and dry thoroughly. Be sure to drain any water accumulated inside the frames. To thoroughly drain frames, remove foot caps and tilt the frames, if necessary, to remove all water. This is critical. Water allowed to accumulate inside the frames and then exposed to sub-freezing temperatures can cause damage to the frame tubing. Such damage is not covered under warranty. Always clean, drain and dry thoroughly before storing for the winter. Glossy frame finishes may be maintained by applying a coat of high quality auto wax after cleaning. Do not use wax on textured, matte or multi-step frame finishes. For best results, always store or cover your furniture when not in use. We recommend commercially available outdoor furniture covers.

SPECIAL WARNINGS!!!

- Always make sure product is assembled correctly before using.
- This product is not a toy and is designed for outdoor use in well ventilated areas only. It is not intended for use indoors or in enclosed areas such as enclosed patios, sheds or garages.
- Do not use on wooden decks or near flammable or combustible materials.
- Burn charcoal or wood logs at maximum of 8 Lbs in the fire bowl.
Do not burn gasoline, kerosene, coal, leaves, other flammable fuels or combustible materials in the firebowls.
- Always put the charcoal bit by bit for heating, avoid any serious burn and injury! eg.1 lb each time, after it almost extinguished, add another 1 lb.
- Not for use by children. Keep children and pets away from the firebowl area.
- Do not use the firebowl during windy conditions.
- Firebowl area is hot. Use with caution. Never touch area near firebowl with bare hands.
- Always use the fire pit poker to handle the mesh cover and charcoal.
- Never leave a burning fire unattended. Always extinguish fire before leaving the area of table firebowl.
- Use with extreme care and at your own risk. As with all products involving an open flame, improper use can result in a fire.

By purchasing and using this product, consumer accepts all liability for safety. We and all affiliates assume no liability for any direct, indirect, special, punitive, incidental, exemplary or consequential damages resulting from the use, incorrect use, or misuse of torch items we produce.

1 YEAR LIMITED WARRANTY

FIRE PIT FRAMES ARE WARRANTED UNDER THE FOLLOWING TERMS:

Frames. frame construction is warranted against defects in material and workmanship for one year from purchase date. Damage to frames or welds resulting from improper assembly or exposure to water and/or sub-freezing temperatures is not covered.

Paint finishes for 30-days against defects in materials or workmanship only provided the item has not been

Fire bowl and mesh cover and grate for 30-days against defects in materials or workmanship only. General rusting is not covered.

Fire pit top and center panel for 30-days against defects in materials or workmanship only. Fire pit top and center panel breakage is not covered. Please take precautions to protect the fire pit top surface.

This warranty excludes the following: fire pit used for any purpose other than private residential use; furniture damaged by acts of nature, abuse, lack of proper care and maintenance, or improper assembly; fire pit tops materials against breakage; hardware against rust or corrosion; loss of use, inconvenience or any other incidental damages. In no event shall our responsibility exceed the value of the replacement product. Warranty is to the original purchaser only and is not transferable. Copy of dated register receipt required for all warranty claims. For quality control purposes, we reserve the right to request images of the damaged items. In the event of discontinued items, we reserve the right to substitute with an item of our choice of similar style and quality.

ASSEMBLY INSTRUCTIONS

IMPORTANT

STOP! PLEASE READ THE INSTRUCTIONS CAREFULLY BEFORE ASSEMBLY. MAKE SURE YOU HAVE ALL THE PARTS & HARDWARE AS IDENTIFIED ON THE PARTS LIST.

MISSING PARTS? DAMAGED PARTS? DON'T GO BACK TO THE RETAILER. WE CAN HELP YOU FASTER!

CALL OUR CUSTOMER SERVICE CENTER AT 1-800-206-8095 BETWEEN 8:00AM AND 8:00PM (EASTERN TIME) MONDAY THROUGH FRIDAY (CLOSED HOLIDAYS).

IMPORTANT!! PLEASE READ ENTIRE INSTRUCTION SHEET BEFORE ASSEMBLY!!

TO EXPEDITE ANY FUTURE WARRANTY CLAIMS, PLEASE KEEP INSTRUCTION SHEET, WARRANTY CARD AND RECEIPT

Step 1: Remove all protective materials and set parts on a flat, non-abrasive surface. Identify parts packed in carton against the parts list. If you are missing any parts or are unsure how to proceed with the assembly, call our Customer Service Center at 1-800-206-8095. **Do not attempt to assemble table if any parts are missing or damaged.**

Step 2: Place the table top upside down on a flat, non-abrasive surface. Attach table leg (C) to table rim (A) using bolts (I) and washers (K) as shown in *Figure 1*. Guide bolt through hole in table leg, into pre-drilled hole in the table rim. Hand tighten three or four turns only. **Do not tighten completely.** Some adjustments may be necessary to ensure proper alignment of the table legs. Repeat for other three legs.

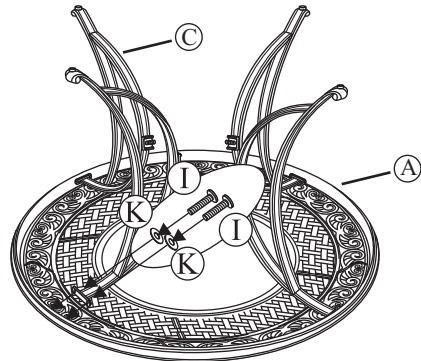


Figure 1

Step 3: Attach a leg (C) to the leg connector (B) bracket by carefully guiding the bolts already in place on the table legs (each leg has two bolts) through the holes in the leg connector bracket. Add a washer and a nut to the end of each bolt as shown in *Figure 2*. **Hand tighten three to four turns only. Do not tighten completely.** Repeat on other three legs.

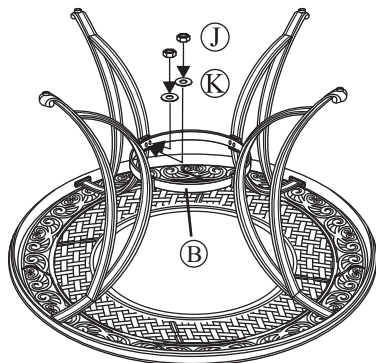


Figure 2

Step 4: After making any necessary adjustments to the alignment of the table legs and the leg connector bracket, use the hex bolt driver and hex wrench to tighten all nuts and bolts. Note: each bolt and nut must be tightened a few revolutions at a time. In order to apply equal pressure to all bolt joints, we recommend working in a cross corner (X fashion). Repeat until all bolts are tight. Do not over tighten. Over tightening may strip bolts. Cover all nuts and bolts with PVC covers.

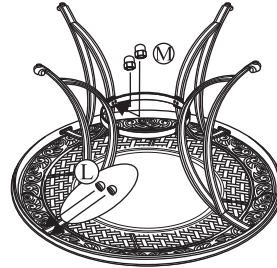


Figure 3

Step 5: Remove nuts, washers and spring washers from the handle as shown in *Figure 4*. Attach handle (N) to mesh cover (G) using bolts, washers and spring washers as shown in *Figure 5*. Tighten but do not over tighten nuts.

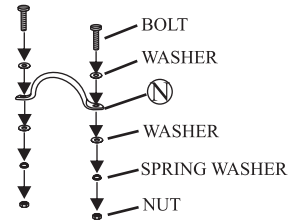


Figure 4

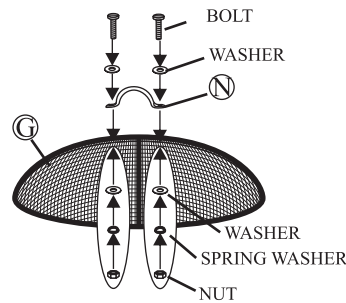


Figure 5

Step 6: With the help of another person, turn the table in the upright position. Careful place the fire bowl inside the center table rim. Place steel grate and aluminum cast cover in the steel fire pit as shown in *Figure 6*.

Your fire pit is now ready for use.

* NOTE: PARTS SHOWN ON PARTS LIST ARE NOT TO SCALE

	<u>PARTS LIST</u>	<u>DESCRIPTION</u>	<u>QTY</u>
A		TABLE TOP	1
B		LEG CONNECTOR BRACKET	1
C		TABLE LEG	4
D		ALUMINUM CAST COVER	1
E		FIRE BOWL	1
F		STEEL GRATE	1
G		MESH COVER	1
H		FIRE PIT POKER	1
I		1/4" X 15 MM BOLT	8
J		1/4" NUT	8
K		Ø6.5 X 1.0 MM WASHER	16
L		PVC BOLT COVER	8
M		PVC NUT COVER	8
N		HANDLE (included washer, spring washer & nut)	1
O		HEX WRENCH	1
P		HEX BOLT DRIVER	1
Q		TOUCH-UP PAINT	1

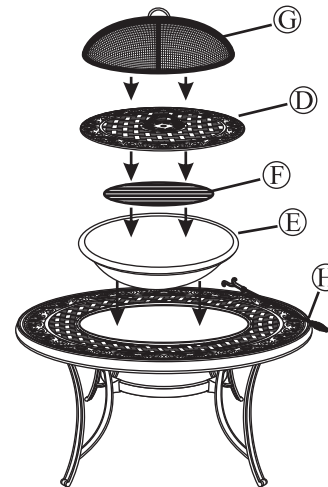 


Figure 6