




Item#100051631 /  
100051635  
Model#F319001A ROB /  
CFL-F319001A ROB

# USE AND CARE GUIDE

---

## SWING-ARM FLOOR LAMP

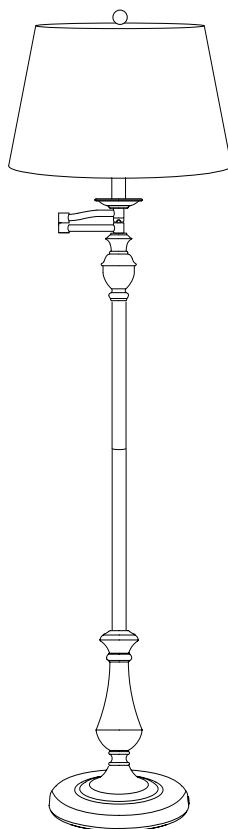

Questions, problems, missing parts? Before returning to the store,  
call Hampton Bay Customer Service  
8 a.m. - 6 p.m., EST, Monday-Friday

**1-855-HD-HAMPTON**

**HAMPTONBAY.COM**

---

### **THANK YOU**




*We appreciate the trust and confidence you have placed in Hampton Bay through the purchase of this floor lamp. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing Hampton Bay!*

# Table of Contents

Table of Contents .....	2	Package Contents .....	3
Safety Information.....	2	Assembly .....	4
Warranty.....	2	Operation .....	5
Pre-Assembly .....	3	Care and Cleaning .....	5
Planning Assembly .....	3	Troubleshooting.....	5

# Safety Information

- Consult a qualified electrician if you have any electrical questions.

	<b>CAUTION:</b> Inspect the wire insulation for any cuts, abrasions, or exposed copper that may have resulted during shipping. If there is a defect in the wire, do not attempt installation. Please call our Customer Service Team at 1-855-HD-HAMPTON.
	<b>CAUTION:</b> Suitable for damp locations. Not for use with dimmers.
	<b>CAUTION:</b> Use only on 120 volt 60Hz circuits. Not for use where directly exposed to the weather. Starting temperature -20°F. Optimum operating temperature -10°F to 140°F. This device is not intended for use with emergency exit fixtures or emergency exit lights. Do not use with dimmers, photocontrols or electronic timers. Never use more than 25 lamps per 20 amp branch circuit.
	<b>WARNING:</b> Before starting installation of this fixture or removal of a previous fixture, disconnect the power by turning off the circuit breaker or by removing the fuse at the fuse box.

# Warranty

The manufacturer warrants this lighting fixture to be free from defects in materials and workmanship for a period of five (5) years from date of purchase. This warranty applies only to the original consumer purchaser and only to products used in normal use and service. If this product is found to be defective, the manufacturer's only obligation, and your exclusive remedy, is the repair or replacement of the product at the manufacturer's discretion, provided that the product has not been damaged through misuse, abuse, accident, modifications, alterations, neglect, or mishandling. This warranty shall not apply to any product that is found to have been improperly installed, set-up, or used in any way not in accordance with the instructions supplied with the product. This warranty shall not apply to a failure of the product as a result of an accident, misuse, abuse, negligence, alteration, faulty installation, or any other failure not relating to faulty material or workmanship. This warranty shall not apply to the finish on any portion of the product, such as surface and/or weathering, as this is considered normal wear and tear. The manufacturer does not warrant and specially disclaims any warranty, whether express or implied, of fitness for a particular purpose, other than the warranty contained herein. The manufacturer specifically disclaims any liability and shall not be liable for any consequential or incidental loss or damage, including but not limited to any labor / expense costs involved in the replacement or repair of said product.


Contact the Customer Service Team at 1-855-HD-HAMPTON or visit [www.hamptonbay.com](http://www.hamptonbay.com).

# Pre-Assembly

## PLANNING ASSEMBLY

- Read all instructions before assembly.
- To avoid damaging this product, assemble it on a soft, non-abrasive surface, such as carpet or cardboard.
- Keep your receipt and these instructions for proof of purchase.

## PACKAGE CONTENTS

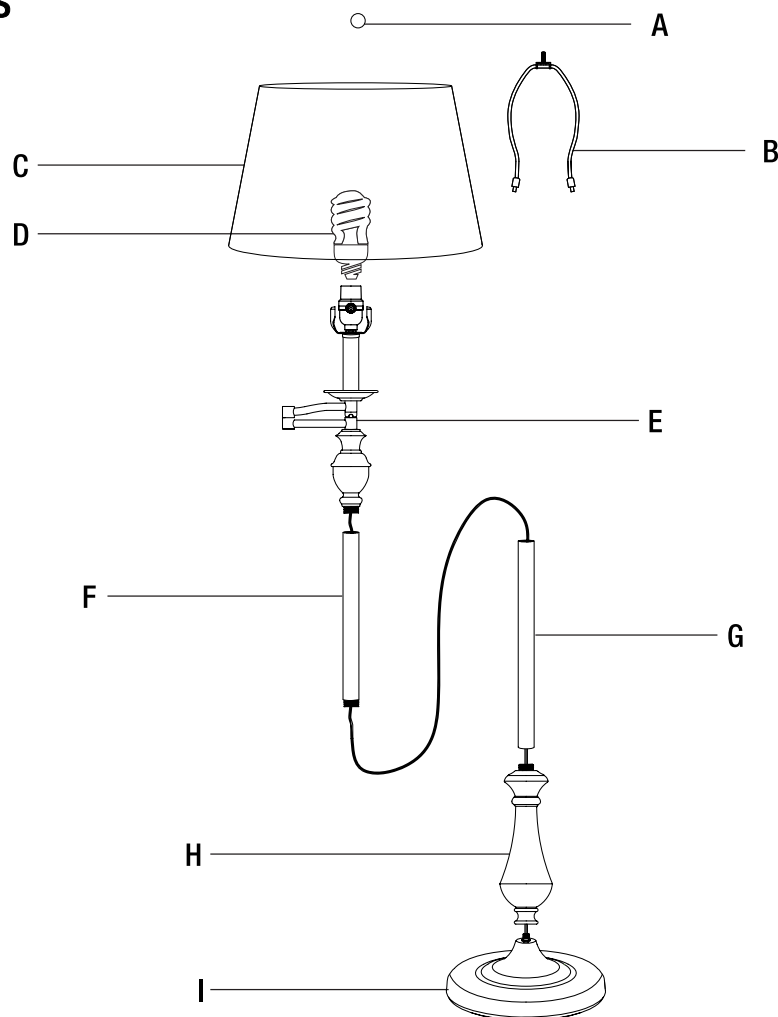


Part	Description	Quantity
A	Finial	1
B	Harp	1
C	Lamp Shade	1
D	Bulb (only included with item #1000051635)	1
E	Socket Assembly	1
F	Top Pole	1
G	Center Pole	1
H	Bottom Pole	1
I	Base	1

# Assembly


## 1 Assembling the floor lamp

- Start by screwing the bottom pole (H) to the base (I) and the center pole (G) to the bottom pole (H).
- Pull the slack from the power cord as required.
- Connect the top pole (F) to the center pole (G).
- Pull the slack from the power cord as required.

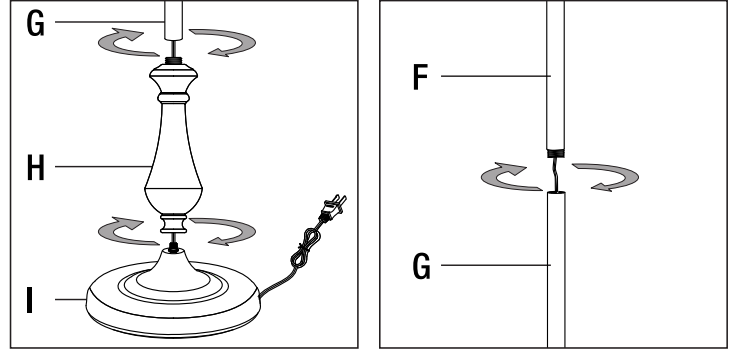


## 2 Connecting the socket assembly

- Connect the socket assembly (E) to the top pole (F).
- Pull the slack from the power cord as required.

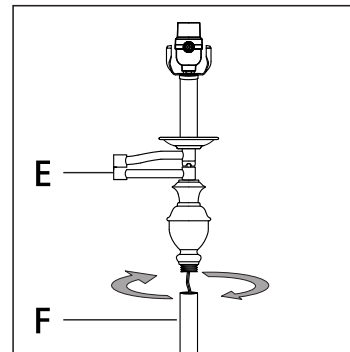


## 3 Installing the harp

- Install the harp (B) into the socket assembly (E).

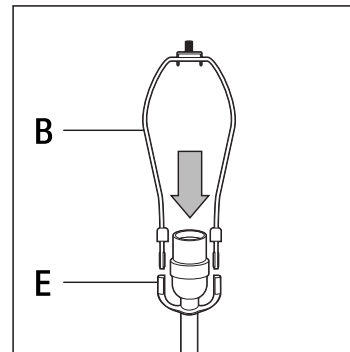

## 4 Installing the lamp shade and light bulb

- Place the lamp shade (C) over the screw at the top of the harp. Secure the lamp shade (C) with the finial (A).
- Install one 23 watt max CFL bulb. (included with item #1000051635)

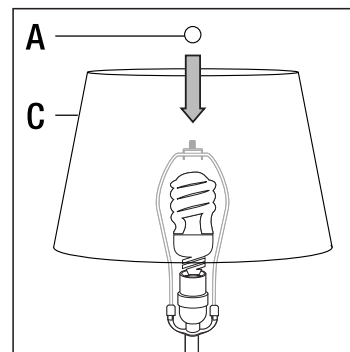

## Operation

### 1 Turning the light on

- Turn the light switch on to activate the fixture.

## Care and Cleaning

- Clean the lamp with a soft, dry cloth.
- Do not use any cleaners with chemicals, solvents, or harsh abrasives.

## Troubleshooting

Problem	Possible Cause	Solution
The bulb will not light.	The bulb is burned out.	Replace the light bulb.
	The power is off.	Ensure the power supply is On.
	There is a faulty wire connection.	Check the wiring.
	The circuit breaker is off.	Ensure the circuit breaker is in the On position.
The fuse blows or circuit breaker trips when the light is turned on.	There are crossed wires or the power wire is grounding out.	Check the wire connections. Contact a qualified electrician or call the Customer Service Team at 1-855-HD-HAMPTON.



Questions, problems, missing parts? Before returning to the store,  
call Hampton Bay Customer Service  
8 a.m. - 6 p.m., EST, Monday-Friday

**1-855-HD-HAMPTON**

**HAMPTONBAY.COM**

Retain this manual for future use.