


SUPER COMBO

DIRECTIONS FOR USE

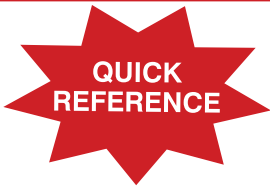

1

INSTALLATION

- Remove 2 Shipping Rods (located on back panel)
- Connect Hot & Cold Water hoses.
Note: Cold water hookup is needed for condensing drying.
- Plug power cord into a 110V/60Hz outlet
- Place drain hose (using U-Connector provided) into a sink or standpipe - 28"-40" high
- Attached 4" vent host (not included) on the exhaust outlet if Venting option will be used
- Venting/Condensing button - Press to select drying option.

2

LAUNDRY PREP

- Load the machine to a maximum of 2/3 full
- Use High Efficiency (HE) detergent - approximately 1 tablespoon.
- Use liquid fabric softener - items tumble more freely and dry faster.

3

OPERATION

- WASH & DRY: Turn knob clockwise to setting - Set Dryer time (+/-) Select Options - Press START
- WASH ONLY: Turn knob clockwise to setting - Press START
- DRY ONLY: Turn knob to Dry Selection - Set Dryer time (+/-) - Press START
Note: Heat will not come on in wool cycle.
- Water Saver button - Press to decrease water for small loads.

4

WASHING TIPS

- DETERGENT: Use HE Detergent, Equator® is recommended.
- FABRIC SOFTENER: Downey® is recommended to reduce wrinkles.
- DELAY START: Press to delay start time upto 24 hours.



5

DRYING TIPS

- Drying is 30% faster if liquid fabric softener is used.
- In condensing dryer mode, fabrics will be damp to the touch when unloaded.
- Over-Drying will cause wrinkles.
- Wrinkle Guard - Drum will tumble every 5 mins after end of Dryer cycle to reduce wrinkles.

Cycle	Wash Times		Suggested Dry Times	
	H	M	H	M
Heavy	1	10	2	00
Towels	1	00	2	00
NORMAL	0	55	1	30
Quick Wash	0	40	1	00
Kids	0	40	1	30
Delicate	0	40	1	00
Wool	0	40	TUMBLE ONLY NO HEAT	

For Questions, Warranty registration or Detergent orders, please contact:

www.ApplianceDesk.com

1-800-776-3538