



OUTDOOR FURNITURE

Resin Wicker Furniture Care Instruction

- Using a soft brush with firm bristles to clean the dust.
- Using a soft cloth and water to wipe down the surface of wicker or hose it down to remove the dirt without the risk of ruining the furniture. Do not use bleach or other solvents.
- If the cushions have zippers, please remove the cushion cover and wash them separately. Do not wash the foam inner part of the cushion as this may lead to shrinkage or damage. Note: The cushions are non-waterproof.
- If the cushion covers are not removable, please use a soft brush and scrub the surface with a solution of mild detergent and water, and wipe away with a soft, wet cloth. Ensure the cushions are completely dry to keep it from mildew.
- Do not use bleach or other chemical solvents on fabrics.
- Please keep the furniture in a dry place indoors, or cover it when not in use, and store properly during inclement weather and winter/rainy seasons.

