

IMPORTANT SAFEGUARDS

Basic safety precautions should always be followed when using electrical products, especially when children are present.

WARNING: TO AVOID THE RISK OF ELECTRICAL SHOCK, ALWAYS MAKE SURE THE PRODUCT IS UNPLUGGED FROM THE ELECTRICAL OUTLET BEFORE ASSEMBLING, DISASSEMBLING, RELOCATING, SERVICING, OR CLEANING.

When using an electrical appliance, basic safety precautions should always be followed, including the following:

1. Read all instructions before use.
2. To protect against risk of electrical shock, do not immerse cord, plug, or any non-removable parts of this slow cooker in water or other liquid.
3. Close supervision is necessary when appliance is used near children.
4. Unplug from the socket when not in use, before adding or removing attachments, and before cleaning.
5. The use of attachments or tools not recommended by supplier may cause fire, electric shock or injury.
6. Do not use outdoors.
7. Do not let the power cord hang over the edge of the table or work-top, and keep it away from any hot surfaces.
8. KEEP YOUR APPLIANCE AWAY FROM ANY HOT PLATES, BURNERS AND HEATED OVENS.
9. Extreme caution must be used when moving an appliance containing hot food, water, or other hot liquids.
10. Do not use the appliance for anything other than intended use.
11. Do not switch on the cooker if the stoneware pot is empty.
12. Allow lid and stoneware pot to cool before allowing it to touch water or any cool surface.
13. Never touch the outer enclosure of the slow cooker during its operation or before it cools. Use the handles or knobs. Do not touch hot surfaces. Use oven mitts or a cloth when removing lid or handling contents.
14. Never cook directly in the base of the unit. Always use the stoneware pot included with your appliance.
15. Do not use stoneware pot or glass lid if cracked or chipped.
16. Never leave the appliance connected to the socket outlet when not in use.
17. Do not switch on the appliance when it is upside down or on its side.
18. The glass lid and ceramic pot are fragile. Handle them with care.
19. Certain countertop and table surfaces, such as Corian®, laminate and other surfaces, are not designed to withstand the prolonged heat generated by certain appliances. If you plan to use the product for a prolonged period of time, we highly recommend placing a hot pad or trivet under your appliance beforehand to prevent possible damage to the surface. And never leave the appliance unattended.

SAVE THESE INSTRUCTIONS

THIS PRODUCT IS FOR HOUSEHOLD USE ONLY!