

Care and Cleaning

- Cover the furniture with outdoor furniture covers when not in use.
 - Before using your table and chairs for the first time, wipe frames with a clean, dry cloth. For regular cleaning, wash with mild soap and water and rinse. Do not use abrasive materials or strong detergents.
 - Before storing your outdoor furniture, drain all water that may have accumulated in or around the furniture frame. If not drained properly, water can cause freeze damage.
-