
 
REMOTE FUNCTIONS AND SET UP INSTRUCTIONS:

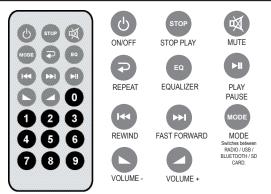

NOTE: Remote will not work unless doors are open.



BLUETOOTH PLAYER

- 1. Press we to change to bluetooth player.
- 2. You will hear a startup tone when you are in the bluetooth mode.
- 3. Make sure the bluetooth is ON on your phone. If it is not, the player cannot detect the your phone.
- 4. Go to the bluetooth menu on your phone. "ZTV-CT02EA" will show up to pair with.
- 5. You will hear another tone when the pairing is complete.

NOTE: If your phone is not a smart phone, you will need to enter the password "0000" to connect.

SD CARD AND USB

1. Insert USB or SD Card then press web to find.

TO SET CLOCK

- 1. Make sure the knob is powered on.
- 2. Press until you see "00:00".
- 3. Hold profession of two seconds until the hours start to blink.
- 4. Press 🚾 or 🔛 to adjust the hour.
- 5. Hold D again for two seconds until the minutes start to blink.
- 6. Press 🚾 or 🗪 to adjust the minutes.
- 7. Once the time has stopped blinking, the time is saved.

NOTE: If you power off with the main knob, the time will reset. Powering off with control will save setting.

FM RADIO

- 1. Hold p for two seconds and radio will search for working FM stations in your area.
- 2. The radio will automatically save working FM stations as presets.
- 3. Press 🚾 to choose last station.
- 4. Press 💿 to choose next station.
- 5. You can also type in any radio station using the numbers on the remote.



WHEEL 7089-S • WHEEL 8069-S



FEATURES AT A GLACE:



TOOLS AND FITTINGS (not supplied with the product):

- Drill
- Screwdriver
- Leveling Ruler

CARE AND MAINTENANCE:

1. Cabinet should always be cleaned with a soft, damp cloth. All parts must be wiped dry after use or cleaning. A little mild liquid soap can be added to lukewarm water to remove stubborn stains.

 Δ Never use acetic or citric, scrubbing powder or solvent-base cleaners or other chemicals.


2. Mirrors should only be cleaned with a damp, soft cloth. Do not use commercial glass-cleaing agents. The mirror edges should be wiped dry only.

NOTE: We reserve the right to change the features, packing and fittings of the product without notice.


Mhitehaus


INSTALLATION INSTRUCTIONS:

NOTE: Contact an electrician for wiring of this product.

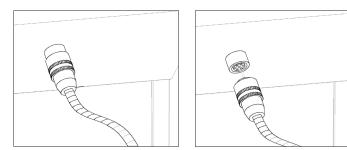


A Prior to wiring installation, disconnect/unplug the defogger cable. Reconnect after installation.

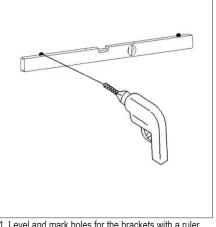

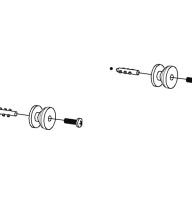

 Level and mark holes for the brackets with a ruler. Align to recommended or prefered height.
* Take proper measurements for installation brackets. 2. Screw bracket into wall.

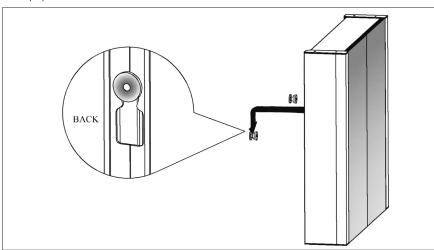

12 13 ന (11

7

8

934

6

6

1 1. Dual-mirrored cabinet door 2. 165-degree soft-closing hinge 3. USB, SD Card, Bluetooth, FM Radio 4. Volume knob 5. Adjustable tempered glass shelves 6. Mirrored internal backsplash 7. Heavy-duty defogger cable 8. Built-in electric outlet (located inside) 9. Defogger switch 10. LED Illuminating Light 11. LED power button/dimmer for lights * To use light dimmer, hold button to dim light. 12. 4 built-in speakers 13. Anodized aluminum