


HOME
DECORATORS
COLLECTION

Item # 000-000
Model # FG-BTB5PCFC

USE AND CARE GUIDE

NORTH LAKE 5PC FIREPIT CHAT SET

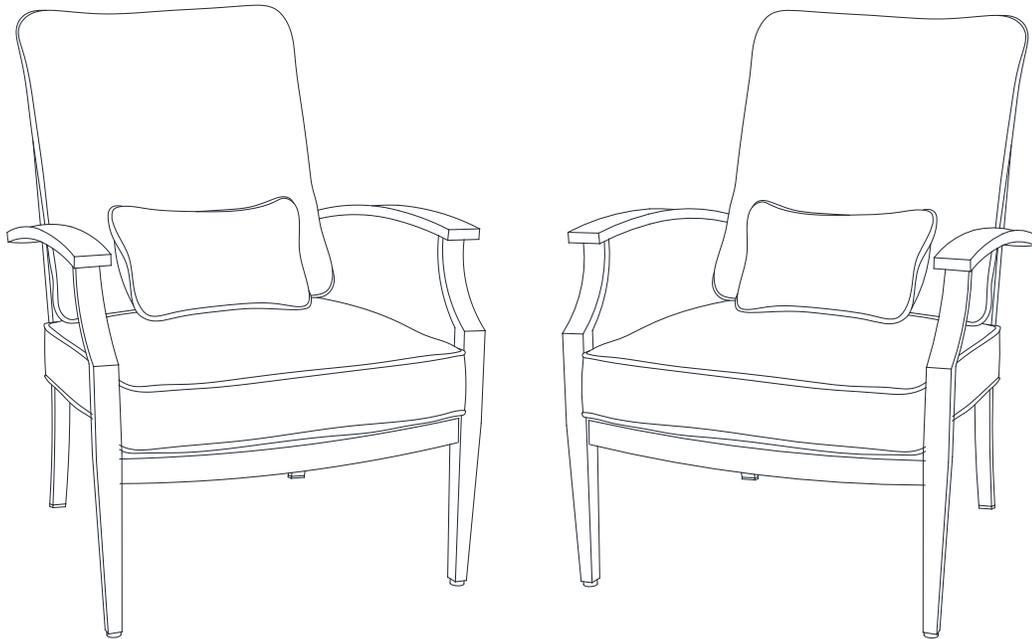

Questions, problems, missing parts? Before returning to the store,
call Home Decorators Collection Customer Service
8 a.m. – 7 p.m., EST, Monday – Friday, 9 a.m. – 6 p.m., EST, Saturday

1-800-998-7021

[HOMEDEPOT.COM/HOMEDECORATORS](https://www.homedepot.com/homedecorators)

THANK YOU

We appreciate the trust and confidence you have placed in Home Decorators Collection through the purchase of this dining set. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing Home Decorators Collection!

Table of Contents

Table of Contents	2	Planning Installation	4
Safety Information.....	2	Hardware Included	4
Warranty	3	Chair Package Contents	5
What is Covered	3	Assembly	6
What is Not Covered	3	Care and Cleaning	9
Pre-Assembly	4		

Safety Information

 **DANGER:** Please keep children out of the assembly area before assembly.

 **IMPORTANT:** Please check the tightness of the bolts at least every 90 days.

 **WARNING:** Do not put heavy objects on the chair.

Warranty

7 YEAR LIMITED WARRANTY

WHAT IS COVERED

Residential use of this furniture is warranted for a seven (7) year limited warranty period for the frame construction. The warranty is valid from the date of purchase and applies only to the original purchaser. If your Home Decorators Collection outdoor furniture fails structurally during normal use (other than damage as a result of dropping or breaking a cast part) within seven (7) years of purchase, the manufacturer will repair or replace the frame at its discretion with the same or similar product if the original product is discontinued, at no charge. Cushions are warranted for a one (1) year period against seams separating or tearing. Cushions are covered under the Sunbrella® 5 year limited warranty. The finish is warranted against peeling, cracking or blistering for a period of one (1) year provided the product has not been scratched or abraded. Scratches and chips resulting from normal wear and tear are not covered. Straps and/or wicker weave are warranted for a period of one (1) year against separation or tearing. Fading of the finish, straps and/or wicker weave resulting from exposure to elements is not covered. Stains as a result of chemical spills and certain food items are not covered.

WHAT IS NOT COVERED

The following are expressly excluded from warranty coverage: failure caused by unreasonable or abusive use; furniture that was sold as clearance items, display models, or items purchased in "as is" condition; freight damage; furniture damaged by acts of nature, vandalism, fire, abuse, lack of proper care and maintenance, or improper assembly; normal fading of straps and fabric; discoloration of frame or fabric from exposure to elements, oils, spills, fluids or chemicals; table top breakage; hardware corrosion or rusting; buckling or splitting of tubing resulting from exposure to water and freezing temperatures; glass table tops; purchased or replacement parts; and plastics. Also excluded from warranty coverage is lost time of use and/or money, inconvenience, travel, packaging, or any other consequential or incidental damages. In no event shall the manufacturer's responsibility exceed the value of the replacement product. Warranty is to the original purchaser when items are purchased from one of our authorized retailers, and is not transferable. All warranty claims must be submitted with a dated register receipt within the warranty period. Should replacement of the warranted item be unavailable, the manufacturer reserves the right to substitute items of its choice similar in style, color and quality. For quality control purposes and verification, we reserve the right to request photographs of the damaged item(s). The terms of this warranty are subject to change without notice. Shipping and handling charges are at all times the responsibility of the claimant. We do not ship outside of the North American continent.

Contact the Customer Service Team at 1-800-998-7021 or visit www.HomeDepot.com/HomeDecorators.

Pre-Assembly

PLANNING INSTALLATION


It will take one or two people about 60 minutes to complete the assembly process.

PLEASE READ COMPLETE INSTRUCTION MANUAL PRIOR TO ASSEMBLY! Identify all parts packed in the carton against the parts list. Remove all protective materials and place the parts on a nonabrasive surface to avoid scratching.

HARDWARE INCLUDED




NOTE: Hardware not shown to actual size.

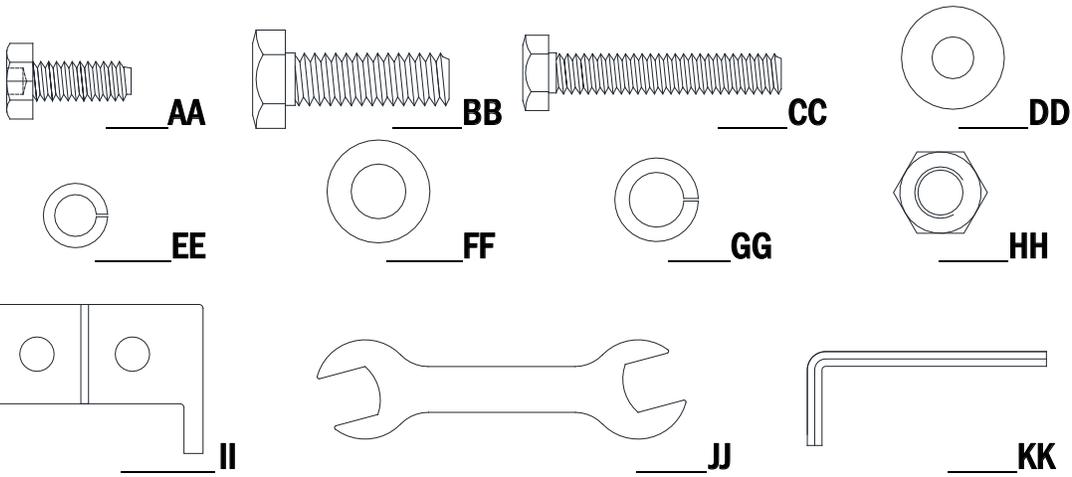

Part	Description	Quantity
AA	Bolt (1/4 in. x 15 mm)	8
BB	Bolt (5/16 in. x 25 mm)	8
CC	Bolt (5/16 in. x 45 mm)	8
DD	Flat Washer (1/4 in.)	8
EE	Lock Washer (1/4 in.)	8
FF	Flat Washer (5/16 in.)	24
GG	Lock Washer (5/16 in.)	16
HH	Nut (5/16 in.)	8
II	C Clamp Plate	4
JJ	Hex Wrench	2
KK	Hex Screw Driver	2

Pre-Assembly (continued)

CHAIRPACKAGE CONTENTS

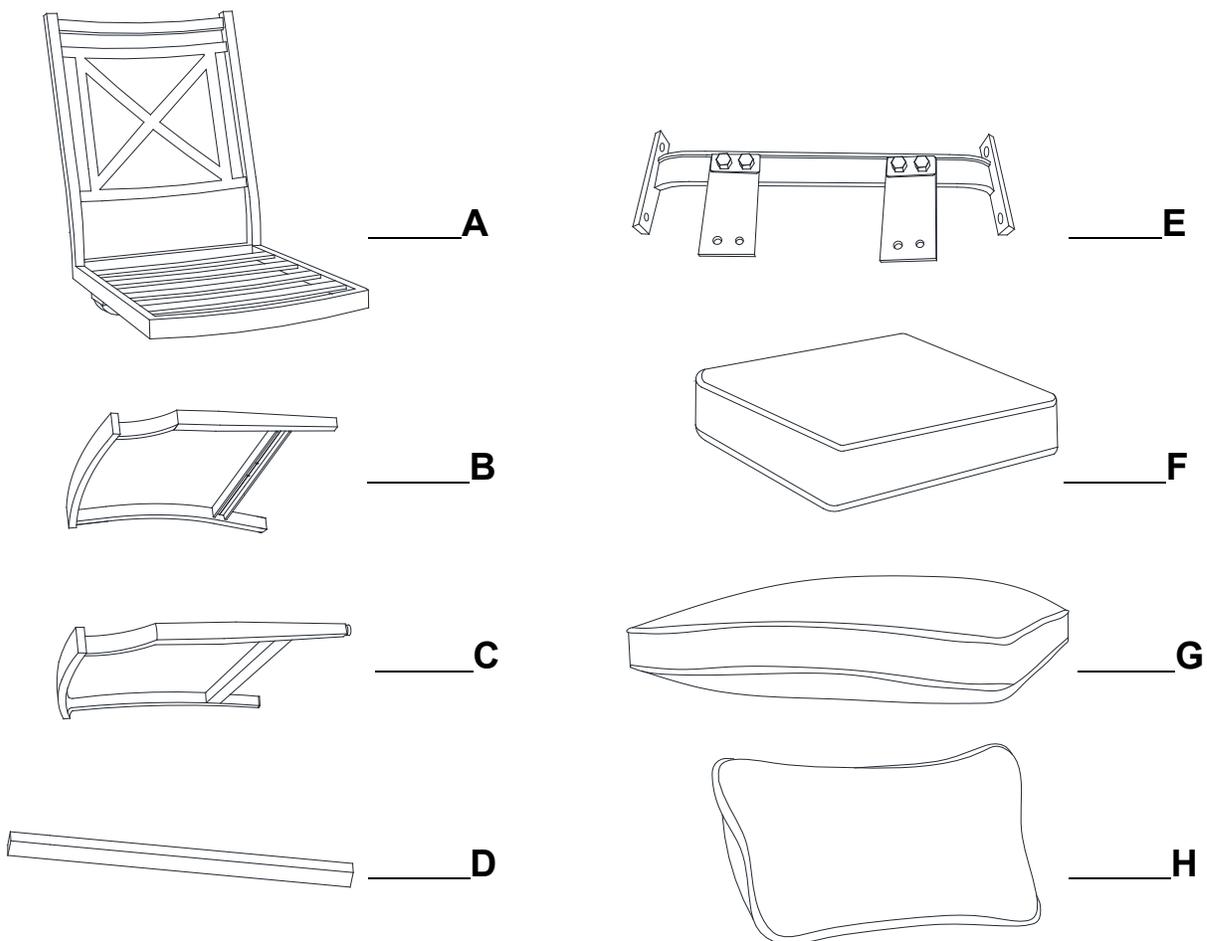

Part	Description	Quantity
A	Chair Seat	2
B	Left Arm	2
C	Right Arm	2
D	Back Cross Bar	2
E	U Support Bar	2
F	Seat Cushion	2
G	Back Cushion	2
H	Lumbar Pillow	2


Assembly

1 ATTACHING THE BACK CROSS BAR TO THE RIGHT AND LEFT ARMS

- Remove all protective material carefully. Avoid cutting the surface of the furniture while removing the packaging material on all components.
- Loosely attach the Back Cross Bar (D) to the Left Arm and Right Arms (B&C) with Bolts (AA) through the Lock Washers (EE) and Flat Washers (DD). See figure.




NOTE: Do not tighten bolts completely until assembly is completed.

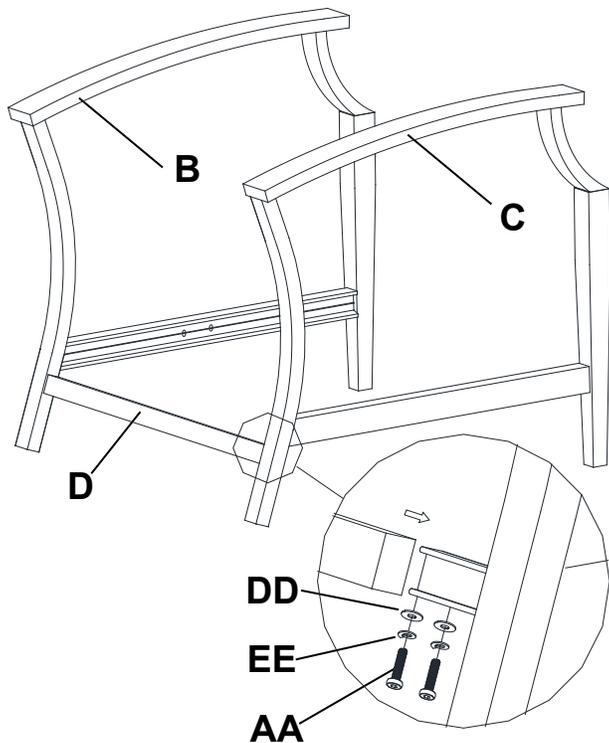

2 ATTACHING THE U SUPPORT BAR TO THE LEFT AND RIGHT ARMS

- Loosely attach the U Support Bar (E) to the Left Arm and Right Arms (B&C) with Bolts (BB) through the Lock Washers (GG) and Flat Washers (FF).
- Once all the bolts are in place, securely tighten Bolts (AA) with the Hex Screw Driver (KK) and tighten Bolts (BB) with the Hex Wrench (JJ). See figure.

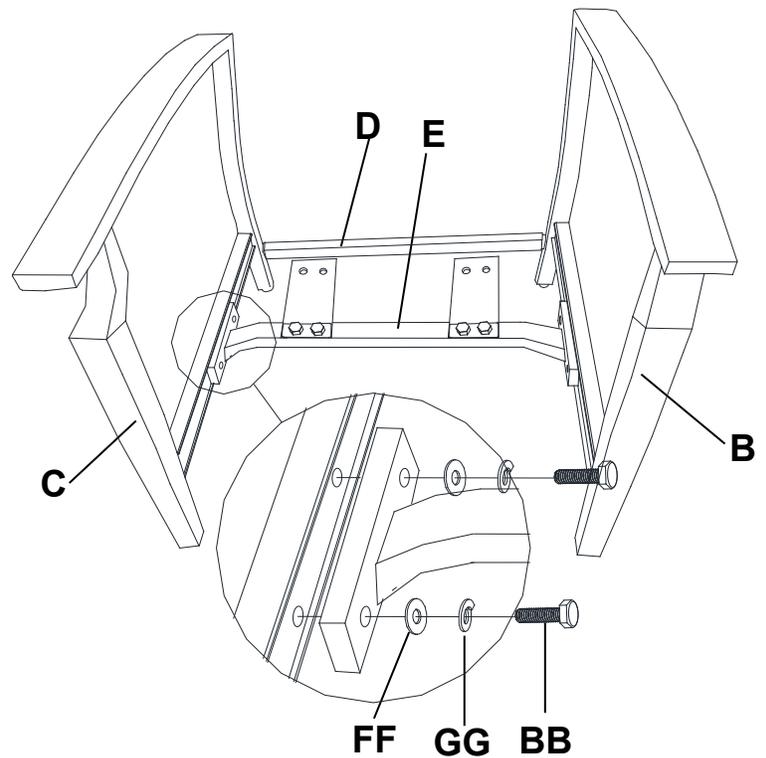



Assembly (continued)

3 ATTACHING THE CHAIR SEAT TO THE CHAIR BASE

- Place the Chair Seat (A) on a non-abrasive flat surface. Align the holes on the support bar on the underside of the chair seat with the holes on the Spring Plates which are pre-attached to the chair base. Insert Bolts (CC) through the Flat Washers (FF), C Clamp Plate (II), and Support Bar attached to the underside of the seat, and Spring Plates attached to the U Support Bar (E) as the diagram shows.
- Secure the bolts with Flat Washers (FF), Lock Washers (GG), and Nuts (HH). The support bar and spring plate should be sandwiched in between the C Clamp Plates (II). See figure.
- Once all the Nuts (HH) and Bolts (CC) are in place, securely tighten all the Bolts (CC) and Nuts (HH) with the Hex Wrench (JJ).



WARNING: Improper assembly may result in serious personal injury.

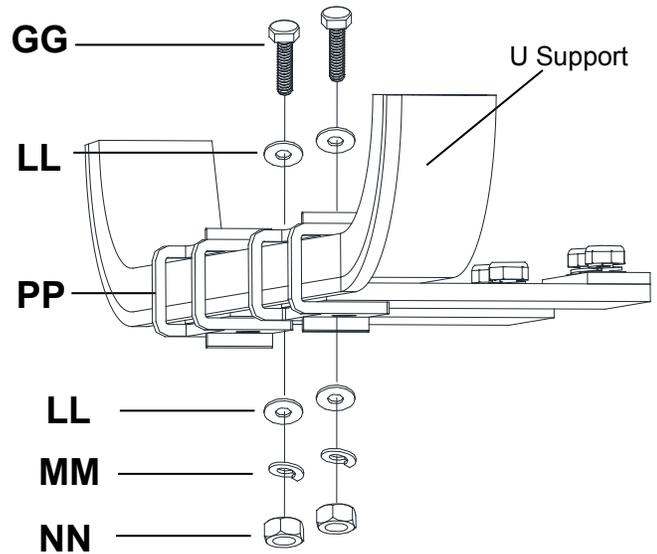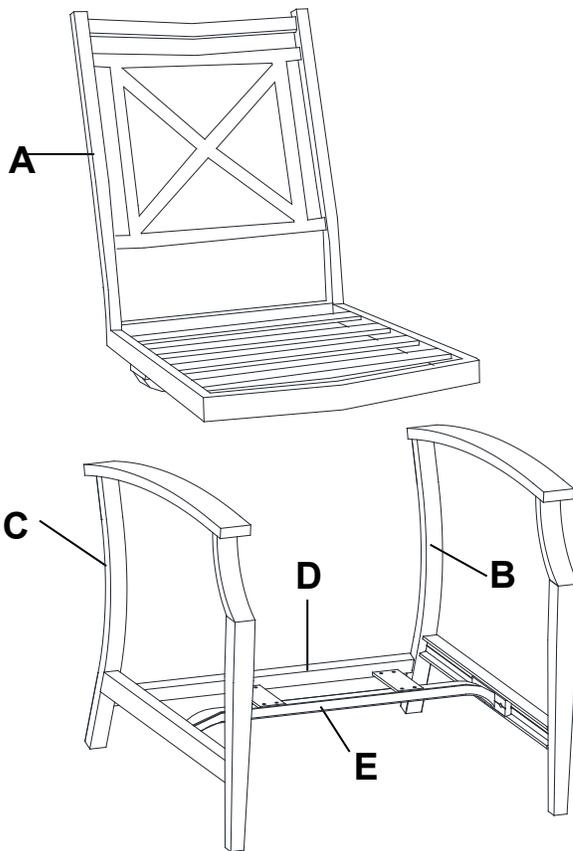


Assembly (continued)

4 COMPLETING THE ASSEMBLY

- Place the Seat Cushion (F), Back Cushion (G), and Lumbar Pillow (H) on the chair.
- The chair is ready for your enjoyment.
- Repeat steps 1-4 to assemble the other chair.



NOTE: Periodically check to make sure all bolts are tight after long periods of usage.

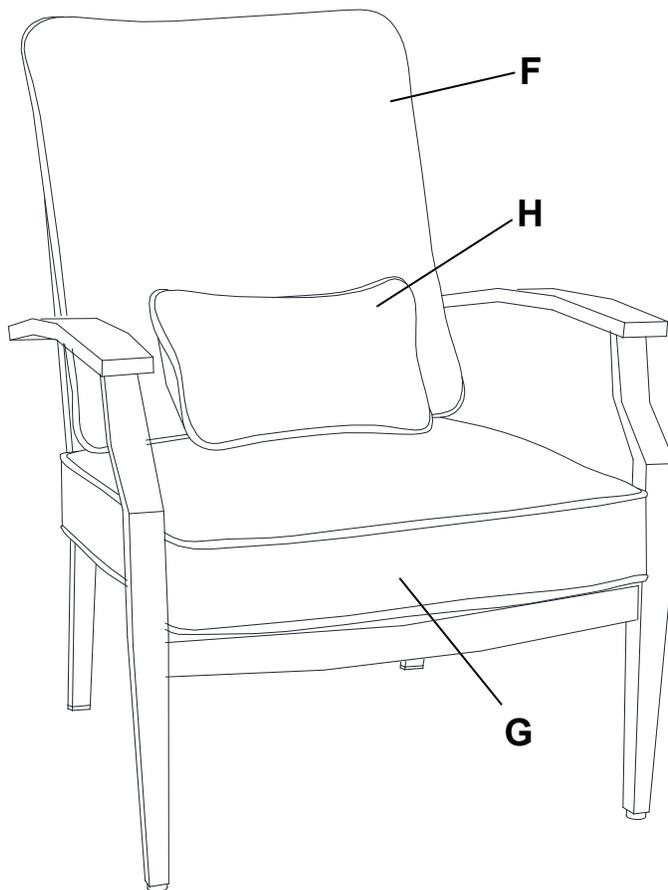

Care and Cleaning

Clean the furniture frame with a wet towel using a mild soap and water solution. Dry completely with a soft towel. Clean the cushions and sling seat material with a mild solution of soap and water and hang cushions to drip dry completely. It is recommended that cushions be stored in a dry area during rain and if they are not in use and in direct sunlight. Do not machine wash or dry. Do not use bleach or strong solvents to clean any of your patio furniture. It will harm both fabrics and metal finishes. Caution should be used when using oils, lotions and other chemicals such as chlorine or repeated exposure to extreme weather conditions (including heat), which may cause permanent discoloration to the fabric. To maintain and protect the furniture, always cover it with an outdoor furniture cover or store in a safe dry area when not in use for long periods of time.

HOME DECORATORS COLLECTION

Questions, problems, missing parts? Before returning to the store,
call Home Decorators Collection Customer Service
8 a.m. – 7 p.m., EST, Monday – Friday, 9 a.m. – 6 p.m., EST, Saturday

1-800-998-7021

HOMEDEPOT.COM/HOMEDECORATORS

Retain this manual for future use.