

Parts List

- 1. Carry Handle
- 2. Pressure Gauge
Indicates internal air pressure of tank.
- 3. Open/Close Valve
Prevents air from leaking out of the air hose and/or tire chuck, when in the close position.
- 4. Filler Valve
Fill tank with compressed air through this point.
- 5. Safety Pressure Relief Valve
Prevents tank from being over-pressurized.
- 6. Air Hose
Delivers compressed air from the tank.
- 7. Steel Legs
Support tank in an upright stable position.
- 8. Tire Chuck
Used to inflate tires and other items.



Replacement Parts

Item No(s).	Part No.	Description	Qty.
2	E103747	Pressure Gauge	1
3, 4, 5	E100177	Manifold Assembly	1
6, 8	E104701	Air Hose w/Chuck	1
For replacement parts call 1-888-895-4549			