

## Important Safeguards

***This product is designed for household use only***

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions.
2. Do not touch hot surfaces.
3. To protect against electrical shock, do not immerse power unit or any part of the dehydrator cord and plug, in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow the unit to cool before putting on or taking off parts.
6. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions, or has been damaged in any manner. Return the appliance to the nearest authorized service facility for examination, repair or adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
8. Sharp utensils should not be used inside the dehydrator.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not use outdoors. Always dehydrate indoors on a flat surface to allow sufficient airflow. Never place base on carpet, towel, newspaper, etc., which can block airflow to the bottom of base and cause failure. Never cover entire unit with anything, as that will cause failure. The dehydrator needs an open, breathable space to function properly.
11. Do not place on or near a hot gas or electric burner or in a heated oven.
12. Do not use this appliance for other than its intended use.