

TROUBLESHOOTING:

	Possible Cause	Corrective Action
Bulb will not light	1. Bulb is burned out	1. Replace light bulb
	2. Power is off	2. Make sure power is on
	3. Faulty wire connection	3. Check wiring
Fuse blows or circuit breaker trips when light is turned on	Crossed wires or power wire is grounding out	Check wire connections

PRODUCT MAINTENANCE:

1. To clean the outside of the lamp, use a dry or slightly dampened clean cloth (use clean water, never a solvent) to wipe the shade and surface of the lamp.
2. To clean the inside of the fixture, first disconnect power to the fixture by turning off the circuit breaker or by removing the fuse at the fuse box. Next, use a dry or slightly dampened clean cloth (use clean water, never a solvent) to wipe the inside shade and interior surface of the fixture.
3. Do not use any cleaners with chemicals, solvents or harsh abrasives. Use only a dry soft cloth to dust or wipe carefully.


LIMITED WARRANTY

The manufacturer warrants this lighting fixture to be free from defects in materials and workmanship for a period of five (5) years from date of purchase. This warranty applies only to the original consumer purchaser and only to products used in normal use and service. If this product is found to be defective, the manufacturer's only obligation, and your exclusive remedy, is the repair or replacement of the product at the manufacturer's discretion, provided that the product has not been damaged through misuse, abuse, accident, modifications, alterations, neglect or mishandling. This warranty shall not apply to any product that is found to have been improperly installed, set-up, or used in any way not in accordance with the instructions supplied with the product. This warranty shall not apply to a failure of the product as a result of an accident, misuse, abuse, negligence, alteration, or faulty installation, or any other failure not relating to faulty material or workmanship. This warranty shall not apply to the finish on any portion of the product, such as surface and/or weathering, as this is considered normal wear and tear. **The manufacturer does not warrant and specially disclaims any warranty, whether express or implied, of fitness for a particular purpose, other than the warranty contained herein. The manufacturer specifically disclaims any liability and shall not be liable for any consequential or incidental loss or damage, including but not limited to any labor expense costs involved in the replacement or repair of said product.**

HOME DECORATORS COLLECTION

INTERIOR 6 LIGHT CHANDELIER
DENHOLM

HOME DEPOT SKU 522-945 (UPC 773546217163)
BRONZE FINISH

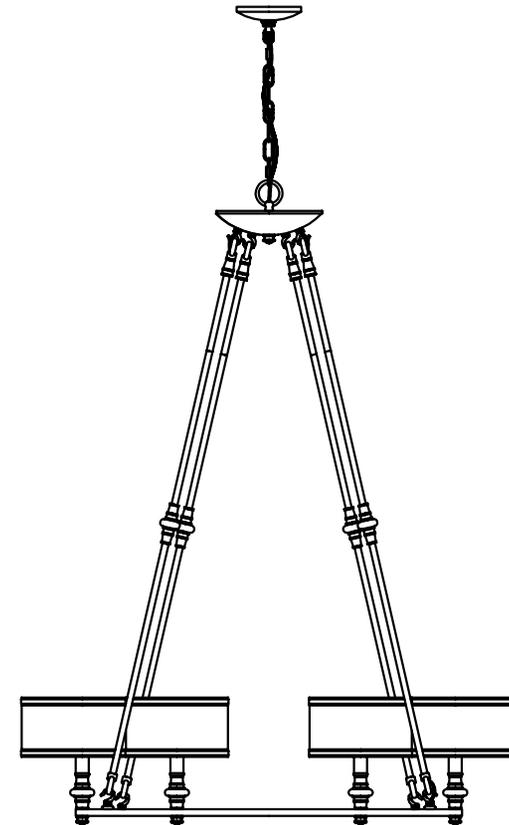

INSTRUCTION MANUAL

Thank you for purchasing this Home Decorators Collection Lighting. This product has been manufactured with the highest standards of safety and quality.

FEATURES:

A Bronze finish and zen like design makes this expressive chandelier a welcome addition to the home.

Standard: 72" wire and 60" chain for open entry-way and cathedral ceiling installations.

Also includes two Quick Links to easily adjust length of chain.

The Satin champagne fabric shade creates an elegant feel to the home décor.

QUESTIONS, PROBLEMS, MISSING PARTS:

Before returning to your local Home Depot, please call our Customer Service Team at 1-877-527-0313 or visit www.homedepot.com. Please reference your **SKU 522-945** or **(UPC 773546217163)**.

CAUTION:

1. Before starting installation of this fixture or removal of a previous fixture, disconnect the power by turning off the circuit breaker or by removing the fuse at the fuse box.
2. CONSULT A QUALIFIED ELECTRICIAN IF YOU HAVE ANY ELECTRICAL QUESTIONS.
3. If you have any non-electrical question about this fixture, please contact our Customer Service Team at 1-877-527-0313 or visit www.homedepot.com. Please reference your **SKU 522-945** or **(UPC 773546217163)**.
4. Keep your receipt and these Instructions for Proof of Purchase.

INSTALLATION:



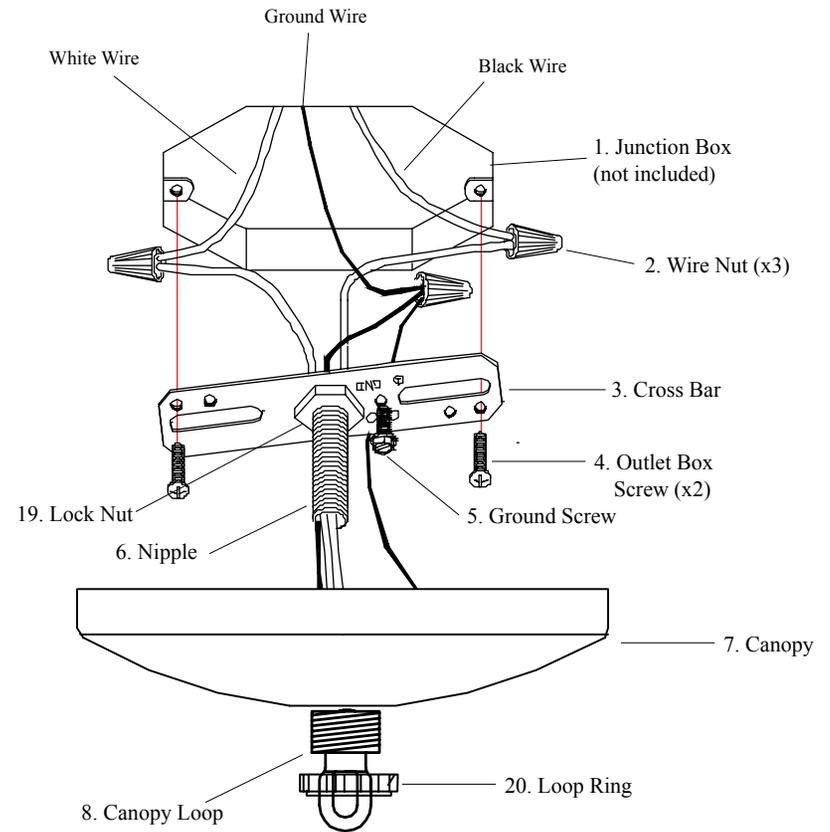


Figure #1

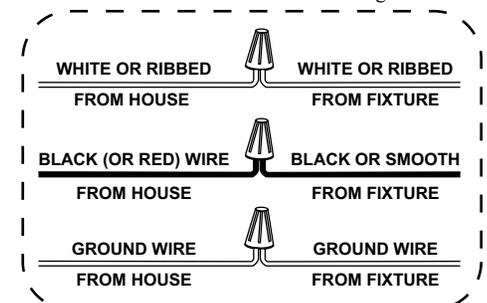

ADDITIONAL PARTS FOR INSTALLATION (included):

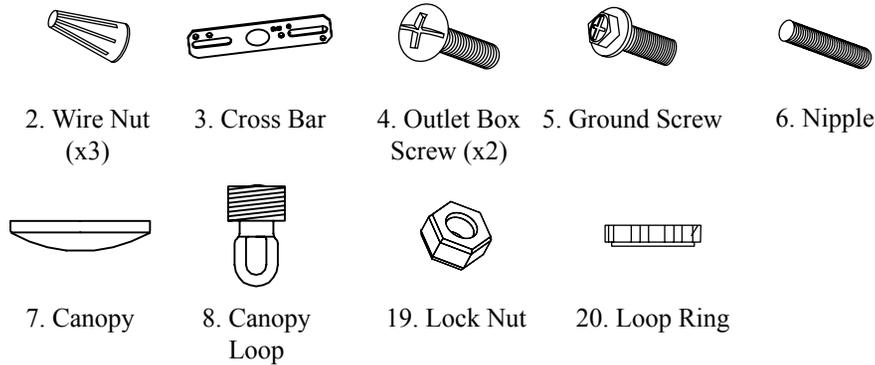


INSTALLATION INSTRUCTIONS:

1. Turn off power at main fuse box.
2. Install cross bar (3) assembly complete with nipple (6) and canopy loop (8) to junction box (1) as one complete assembly.
3. Remove loop ring (20) from canopy loop (8). Slip canopy (7) over Canopy loop (8) and secure by fastening loop ring (20). Adjust the height of the nipple (6) so canopy (7) will sit flat against ceiling and tighten lock nut (19) against cross bar (3).
4. Remove loop ring (20) and canopy (7) from ceiling. Hold chandelier up against canopy loop (8) with chain and adjust to desired height. Remove excess chain.
5. Before fastening chain onto canopy loop (8) weave chandelier wire through every second link. Let the canopy loop ring (20) slip to the bottom of chain. Repeat this step for canopy (7).
6. Secure chain onto canopy loop (8). Weave wire through the canopy loop (8) and into junction box (1).
7. Install both ground wires of chandelier [one from the canopy (7) and one from the lead wire of the chandelier] to ground screw (5) or ground wire of junction box (1) or ground screw (5) on cross bar (3). (Ref. to Figure #1)
8. Connect black or other wire of power supply to the smooth side of the wire (flexible cord) from the chandelier and connect white wire of power supply to the knobbed side of the wire from the chandelier. (Ref. to Figure #1)


NOTE: Always use wire nuts (2) marrettes (included) to connect wires and push all excess wire and connections back into junction box (1).

9. Lift canopy up to ceiling covering junction box (1) and secure by using canopy loop ring (21).

TOOLS REQUIRED FOR ASSEMBLY & INSTALLATION (not included):

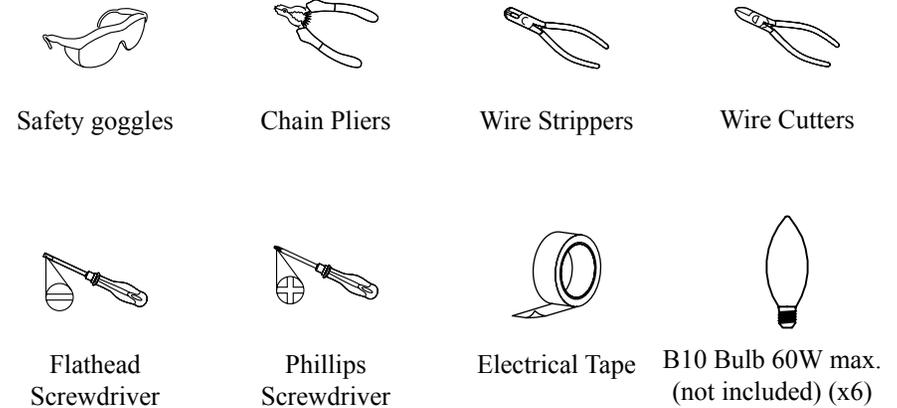

ADDITIONAL PARTS FOR ASSEMBLY (included):

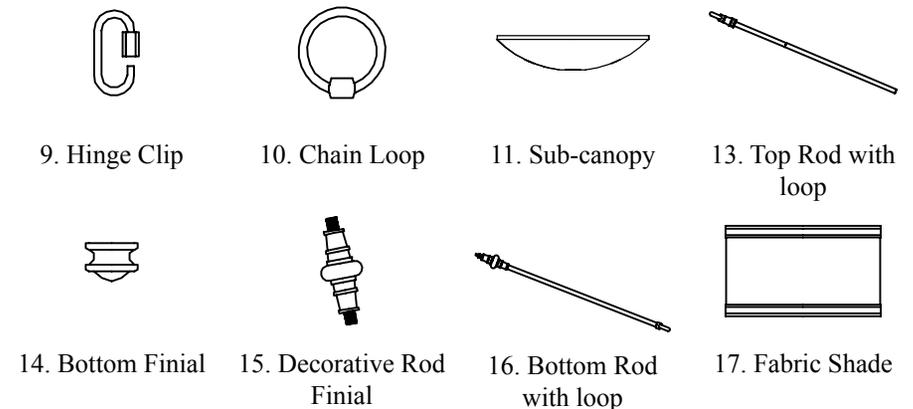

ASSEMBLY INSTRUCTIONS:

1. Carefully unpack the fixture. Lay out all parts on a clean surface.
2. Tighten chain loop (10) to sub-canopy (11).
3. Connect top rod with loop (13) to decorative rod finial (15) to complete rod length.
4. Attach bottom rod with loop (16) end of the complete rod length to fixture hook (18) on fixture main body.
5. Attach top rod with loop (13) end of the complete rod length, to sub-canopy hook (12).

SHADE AND BULB INSTALLATION:

1. Secure each fabric shade (17) to each socket on fixture main body.
2. Once the fixture is installed in place, install 60W B10 bulbs (maximum, not included) into each socket (part of fixture body).

ASSEMBLY:

