




1200W EMULSIFIER BLENDER



# INSTRUCTION MANUAL

Read entire manual before operating this product.  
Use only as directed.

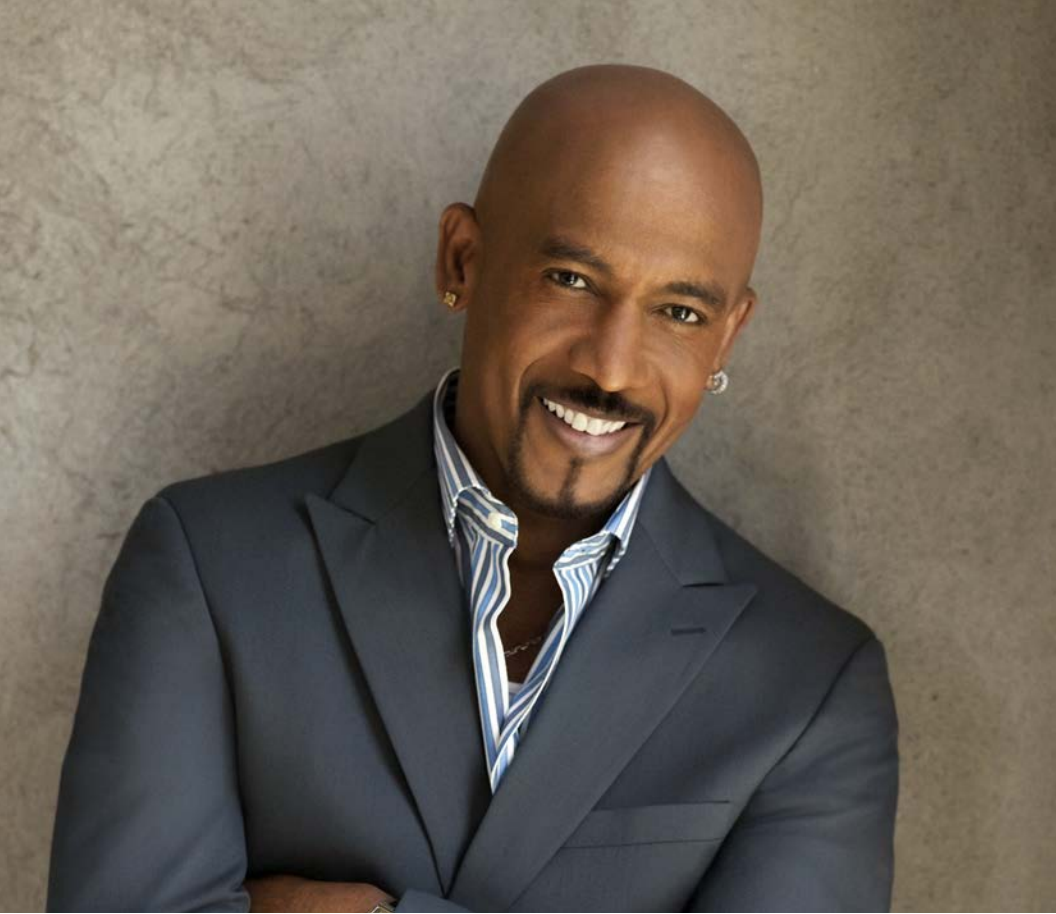

## **MONTEL WILLIAMS**

Living Well Products LLC promotes Montel Williams' message of living well physically, emotionally, and spiritually. Our goal is to make healthy living simple, convenient, and accessible to everyone by offering quality products at a great value. We strive to make "Living Well" a simple, easy, and affordable daily choice for our family of consumers.

## **INTRODUCTION**

Congratulations! Creating healthy smoothies, shakes, and more is as simple as pushing a button with the 1200W Emulsifier/Blender. Living a healthy lifestyle just got a lot easier and faster!

# WARNINGS

- Read all the instructions and warnings completely before operation. Keep the instructions for future reference.
- Not intended to be used by children. Close supervision is necessary when any appliance is used near children.
- Keep unit unplugged when not in use, when removing or putting on parts, and when cleaning.
- Take precaution to not let the cord hang over the edge of a counter or table or come into contact with a hot surface.
- Only operate Blender with Lid, Lid Plug, and Pitcher securely on.
- Plunger should only be used when Blender is assembled correctly.
- Blades are sharp. Handle with extreme care to ensure there are no injuries.
- Do not put fingers, hands, or any utensil or tool near Blades when in motion or when they are slowing to a stop. Injury to yourself and damage to the unit will occur.
- It is recommended to use a rubber spatula/scraper if needed once the Blades have come to a complete stop and the unit has been turned off and unplugged.
- Do not submerge the Blender Base or electrical cord in water. Electrical shock will occur and cause damage and injury to yourself, surrounding areas, and unit.
- If product is damaged, contact customer service. Only operate unit if it is in proper working condition. Do not operate if dropped, has cord damage, damaged Blades, or is malfunctioning.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or personal injury.
- Do not disassemble or reconstruct Base, Blades, or any parts of the Blender. This may cause personal injury, damage to the unit and its surroundings, and make the warranty void.
- Do not over blend your ingredients. This can cause overheating and damage to the unit. Use extreme attention to this when creating nut-butters or oil-based foods.
- Use caution when using hot liquids and ingredients. Escaping steam and spraying/splashing of liquid may occur. Fill liquids below max line and begin blending at slowest speed. It is recommended to keep hands away from Lid when in use and to use oven mitt or potholder to prevent possible burns. Keep all exposed skin away from hot liquids and ingredients when being used in the Blender.
- Blender is intended for indoor, household use only. It is not intended to be used outdoors or for commercial use.
- Do not leave unattended when operating.
- Electrical Shock Hazard Warning:



- ◇ Use grounded outlet only
- ◇ Do not use adapter, remove ground, or use an extension cord
- ◇ Failure to follow instructions can cause death or electrical shock

# SPECIFICATIONS

Model	1200W Emulsifier/Blender
Weight	3.46kgs (7.6lbs)
Materials	Stainless Steel, ABS, Steel, PC, Silicone

# UNIT DIAGRAM

1. Pitcher Lid

2. Lid Plug

3. Pitcher

4. Blender Base

5. Plunger

6. 20oz Personal Cup

7. Personal Cup Blade Base

8. Personal Cup Lid



## Using Your 1200W Emulsifier/Blender:

Before using your Blender, follow the Cleaning Guidelines and read the Instruction Manual (including all warnings) completely.

Remove all packing material from all parts of the Blender before assembling.

## To Assemble Your Blender:

Place Base on flat, stable surface that is not near water or extreme heat.

### ***For Pitcher***

- Securely put the Pitcher onto the Base. The Base has a peg in each corner that fits into the corner of the Pitcher. Line these up and press Pitcher into Base. You should hear a click to know it is secure.
  - ◊ The Base of the Blender has a Safety Lock. The Safety Lock is engaged when the Pitcher is mounted properly. The Safety Lock will prevent the Blender from functioning if not properly assembled.
- Push the Lid Plug into the opening in the Lid. It fits securely and should not be loose.
- Place ingredients inside Pitcher and close the Lid and Lid Plug tightly.
- Push the Lid into the Pitcher. The Lid should fit securely. You should feel the suction as you are putting the Lid onto the Pitcher.

### ***For Personal Cup***

- Fill Personal Cup with desired ingredients. Do not fill past the MAX line.
- Screw the Personal Cup Blade onto the Personal Cup. Ensure it is tight and on properly to prevent leaking.
- Once the Personal Cup Blade is securely on the Personal Cup, turn it over so the Personal Cup Blade is at the bottom.
- Put the Personal Cup Blade with Personal Cup onto the Blender Base by first locating the orange triangle on the Personal Cup Blade and the Blender Base. Align the triangles, and press the Personal Cup Blade into the Blender Base. It is a snug fit and fits securely if assembled properly.
  - ◊ The Personal Cup Blade has a Safety Lock. The Safety Lock is engaged when the Personal Cup Blade is mounted properly. The Safety Lock will prevent the Blender from functioning if the triangles are not aligned.

### ***Final Assembly***

- Once properly assembled, plug Blender in.
- Push the Power button to turn Blender on. The indicator light will light up.
- Select Correct Program Setting based on desired outcome (see below section Choose the Correct Program Setting).
- When Program is finished the indicator light will flash. Select another Program or after 3 minutes the Blender will power off automatically.

## Choose the Correct Program Setting:

- Single Serve – this program is specifically designed to be used with the included Personal Cup. It will run for 60 seconds and then automatically turn off.
- Puree – Use this function to blend ingredients into a smooth, thick, soup-like consistency. It will run for 60 seconds and then automatically turn off.
- Crush – Use this function to crush ice and frozen ingredients. It will run for 60 seconds and then automatically turn off.
- Soup – Use this function to create healthy soups from fresh ingredients. The Blender will run for 7 minutes and then automatically turn off. Take caution when using hot ingredients. Ensure Lid and Lid Plug are securely on to prevent splashing. It is suggested to use a pot holder or oven mitt. If Blender runs for full 7 minute cycle, allow time for the Blender to cool before running again. This will prevent overheating.
- Smoothie/Clean – This button has 2 functions. Use to create healthy smoothies from fresh ingredients or follow the Cleaning Guidelines. It will run for 60 seconds and then automatically turn off.
- Power – This powers the Blender on and off.
- Low – This is a manual function. It is the lowest speed. Do not run for more than 7 minutes. If used for the full 7 minutes, allow time for the Blender to cool before running again. This will prevent overheating.
- Medium – This is a manual function. It is a medium speed. Do not run for more than 7 minutes. If used for the full 7 minutes, allow time for the Blender to cool before running again. This will prevent overheating.
- High – This is a manual function. It is the fastest speed. Do not run for more than 7 minutes. If used for the full 7 minutes, allow time for the Blender to cool before running again. This will prevent overheating.
- Pulse – This is a manual function. It is a fast speed. It will run for as long as you hold the button down. Do not run for more than 7 minutes. If used for the full 7 minutes, allow time for the Blender to cool before running again. This will prevent overheating.

## How To Use the Plunger:

- If the ingredients in your Blender are having a hard time circulating, using the Plunger can help. Only use the Plunger that came with your Blender, do not use anything else.
- The Plunger should be used in combination with the Blender Lid.
- Carefully remove the Lid Plug and insert the Plunger.
- The Pitcher cannot be more than 2/3 full when using the Plunger. Otherwise, overflow may occur. This may cause injury to you, the Blender, and surrounding areas.
- Do not use the Plunger for more than 30 seconds at one time. Overusing the Plunger may cause overheating.
- If using the Plunger straight down does not help to move the ingredients, move it side to side. Do not force the Plunger to the bottom of the Pitcher. This can cause injury to the Blender, Plunger, you, and the surrounding area.

## Automatic Overload Protection:

The Blender is designed to automatically turn off if it begins to overheat. If this occurs, follow these steps:

- Power off and unplug your Blender for at least 60 seconds to allow it time to reset itself.
- If after 60 seconds your Blender will not turn back on, power off and unplug again. Remove Pitcher and use a blow dryer on cool setting to blow air into the blade area and underneath the Base of your Blender.

## Cleaning and Storing Blender:

Before using your 1200W Emulsifier/Blender for the first time, please follow the Care and Cleaning Instructions below.

- Remove unit from packaging, discard any packing material, and review all warnings and instruction manual in its entirety.

### ***Cleaning Pitcher Lid, Pitcher Lid Plug, Personal Cup Lid, and Plunger:***

- Separate the Lid Plug from the Lid.
- Wash all parts with warm, soapy water.
- Rinse thoroughly with water and dry.

### ***Cleaning Pitcher and Personal Cup:***

- Assemble unit according to diagram and instructions.
- Fill the Pitcher half full with warm water and a small amount (a couple drops) of mild liquid soap.
- Ensure Lid and Lid Plug are securely in place.
- Press the Smoothie/Clean button.
- Let Clean cycle run completely (60 seconds)
- When finished and Blades are completely stopped, remove Pitcher Pour out water.
- Rinse Personal Cup and Personal Cup Blade thoroughly with water and dry.
- Personal Cup Lids may be washed by hand with mild soap and sponge.
- Personal Cup Blade, Sports Lids and Personal Cup are also (top shelf) dishwasher safe.
- Ensure all parts are clean and dry before storing at room temperature.

### ***Cleaning Blender Base:***

- Power off the Base, remove Pitcher/Personal Cup and unplug.
- Use damp cloth with mild soap to clean the Base.
- Wipe down with damp cloth and water.
- Dry completely.
- Do not oversaturate or immerse in water. This will cause damage to the unit and possible injury to yourself and surrounding areas.

*• Do not use scrubber or wire bristle brushes on any parts of the 1200W Emulsifier/Blender. This can cause damage to the unit and make it malfunction.*

*• Use caution when washing and drying Blades on the Pitcher and Personal Cup. They are extremely sharp and can cause injury if not handled properly.*

## Storing your 1200W Emulsifier/Blender:

- Ensure Blender and accessories have all been cleaned per the Cleaning Instructions outlined.
- Blender and accessories should be stored at room temperature. They should not be exposed to high heat or moisture.
- Keep Instruction Manual and Recipe Guide with stored Blender
- Blender is designed to conveniently fit in your lower kitchen cabinet.

## Warranty Information

Living Well Products, LLC warrants this product to be free of manufacturing defects. Should any such defect develop or become evident within one year from the date of purchase, Living Well Products, LLC will replace the entire product or, at its option, repair or replace the defective part(s) without charge. Contact Living Well Products, LLC customer service at 888.784.2835 to determine whether it is necessary to return the unit. To return, securely pack the entire unit. Be sure carton clearly identifies sender by name and address. Attach a letter or card describing defect and original sales receipt, along with your contact information. Mail prepaid to the address shown below.

Returns: **LIVING WELL PRODUCTS, LLC, ATTN: RETURNS DEPT., 6011 Century Oaks Dr. Chattanooga, TN 37416**

This warranty is void if damage or malfunction is due to abuse or failure to operate product in accordance with instructions and on recommended electrical current. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

Model No. MWBLND01

REV-062916

PATENT PENDING

For customer service call 888.784.2835 (+1.423.402.9010 for outside the United States) or visit us online at [livingwellwithmontel.com](http://livingwellwithmontel.com)

Pour le service a la clientele appelez le 888.784.2835 (+1.423.402.9010 a l'extérieur des États-Unis) ou visitez [livingwellwithmontel.com](http://livingwellwithmontel.com)

Para servicio al consumidor llame al 888.784.2835 (fuera de Estados Unidos marque +1.423.402.9010) o visite [livingwellwithmontel.com](http://livingwellwithmontel.com)



**Read Instructions  
Before Operating**

**MADE IN  
CHINA**



**DO NOT DISPOSE OF BATTERIES IN FIRE. ALWAYS DISPOSE OF BATTERIES PER LOCAL & FEDERAL GUIDELINES**

© 2016 LIVING WELL PRODUCTS, LLC. All specifications are subject to change without notice. All rights reserved. LIVING WELL PRODUCTS, LLC. 6011 Century Oaks Dr. Chattanooga, TN 37416