



## TYPICAL INSTALLATION AND SYSTEM LOCATION

The system needs to be installed by a licensed plumber in your area.

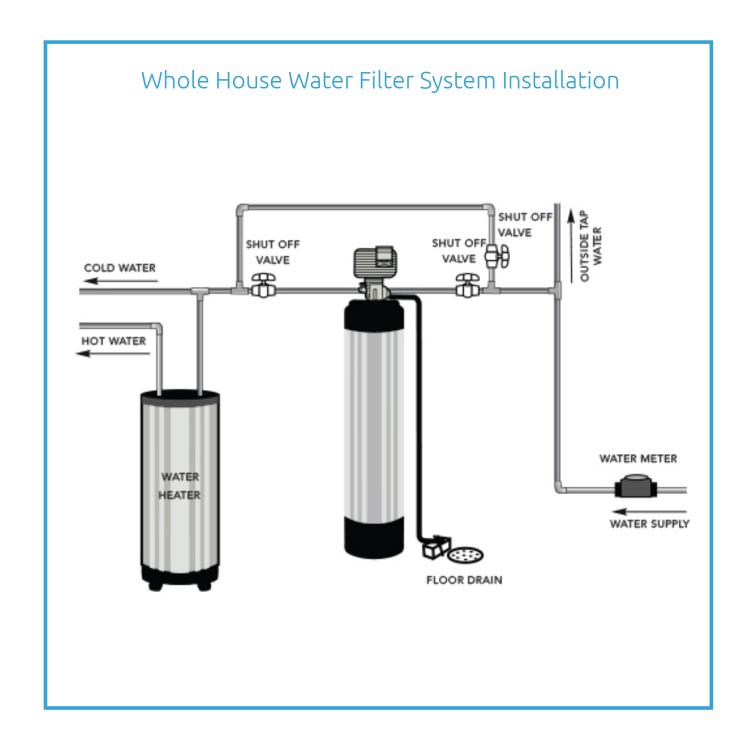



## DOWNFLOW WITH NO BACKWASH WATER FILTER SYSTEMS

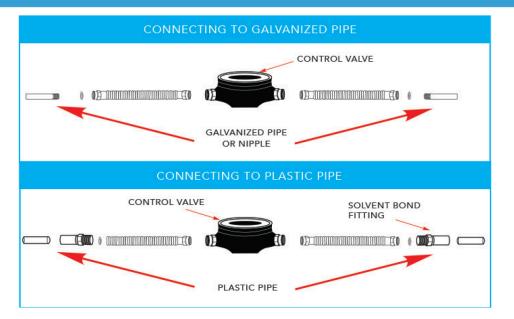

## PROGRAMMING MUNICIPAL WATER SYSTEM CONTROL VALVE



(For municipal water we recommend the system being backwashed every 5 days at 2am, or whenever your family is most likely to be asleep.)

- 1) Use the up or down arrows to set the time 12:01 PM. Once the time is changed to 12:01 PM, push the Recycle button (refer to Figure A1) to lock it in.
- 2) Push and hold both arrow buttons until screen changes to read "GAL".
- 3) Push Recycle button. Screen will read"FLTR". This is set at factory and will not need to be changed. If not, use up/down arrows to set to "FLTR".
- 4) Push Recycle button. Screen should read "tc". If not, use up/down arrow buttons to set to "tc".
- 5) Push Recycle button. Screen will read "NT-1". This is the number of tanks the timer is controlling (one tank). Do not change this.
- 6) Push Recycle button. Screen should read "DO 7". If not, use up/down arrow buttons to set number to 7.
- 7) Push Recycle button. Screen should read "RT 2:00". \* If not, use up/down arrow buttons to set to 2:00.
- 8) Push Recycle button. Screen should read "BW 10". If not, use up/down arrow buttons to set to 10.
- 9) Push Recycle button. Next screen will be "RR 10".
- 10) Push Recycle button. Screen will change to time display and programming is locked in.