




PARTS IDENTIFICATION

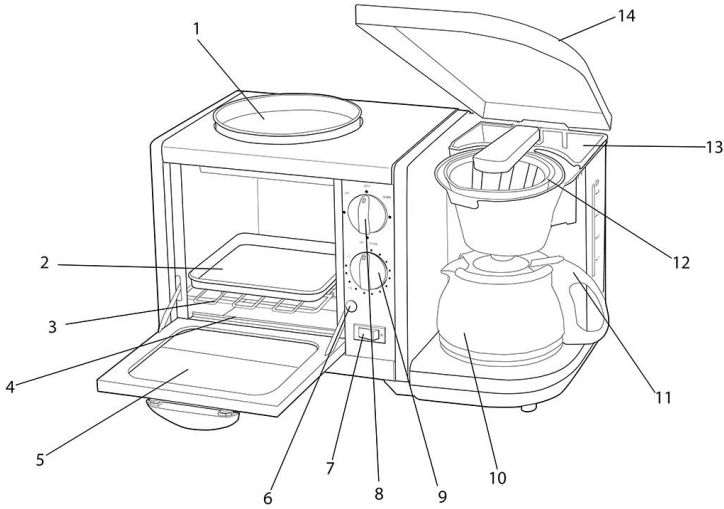

1. Oven-Top Griddle
2. Toaster Oven Baking Pan
3. Chrome Baking Rack
4. Crumb Tray
5. Oven Glass Door and Handle
6. Indicator Light
7. Coffeemaker ON/OFF Switch
8. Mode Selector Knob
9. Timer Control Knob
10. Coffeemaker Carafe
11. Carafe Handle
12. Coffeemaker Filter
13. Coffeemaker Water Tank
14. Coffee Tank Lid