

SR 25.9\_PLUS

SR 18.5

# Forzaspira®

## MANUALE DI ISTRUZIONI

INSTRUCTION MANUAL

MANUAL DE INSTRUCCIONES

MANUEL D'INSTRUCTIONS

BEDIENUNGSANLEITUNG

MANUAL DE INSTRUÇÕES

**REGISTRA IL TUO PRODOTTO**  
**REGISTER YOUR PRODUCT**  
**ENREGISTREZ VOTRE PRODUIT**  
**REGISTRA TU PRODUCTO**  
**GERÄTREGISTRIERUNG**  
**REGISTE O SEU PRODUTO**  
[www.polti.com](http://www.polti.com)

 **POLTI®**  
NATURAL HOME FEELING

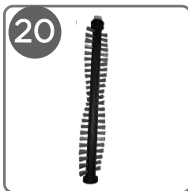
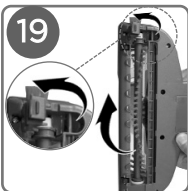
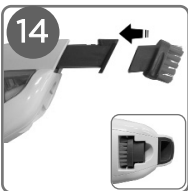
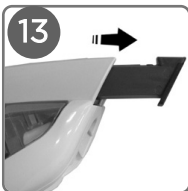
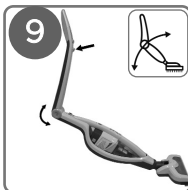
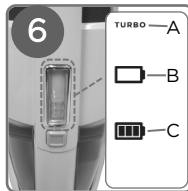
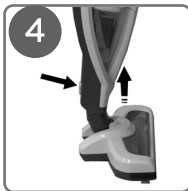
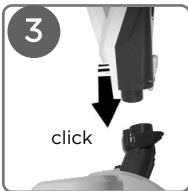
# FORZASPIRA SR25.9\_PLUS

# FORZASPIRA SR18.5



**SPAZZOLINO ASPIRAPOLVERE PORTATILE**  
 PORTABLE VACUUM BRUSH  
 PETITE BROSSE D'ASPIRATEUR PORTABLE  
 CEPILLO ASPIRADOR PORTÁTIL  
 BÜRSTE FÜR TRAGBAREN STAUBSAUGER  
 ESCOVINHA ASPIRADOR DE PÓ PORTÁTIL

**ALIMENTATORE**  
 POWER SUPPLY  
 CHARGEUR  
 ALIMENTADOR  
 NETZTEIL  
 ALIMENTADOR

# OPTIONAL

PAEU0325



**BATTERIA 18.5V**  
18.5V BATTERY  
BATTERIE 18,5 V  
BATERÍA 18.5V  
18.5-V-AKKU  
BATERIA 18.5V

PAEU0326



**BATTERIA 25.9V**  
25.9V BATTERY  
BATTERIE 25,9 V  
BATERÍA 25.9V  
25.9-V-AKKU  
BATERIA 25.9V

PAEU0327



**CARICABATTERIA 18.5V**  
18.5V BATTERY CHARGER  
CHARGEUR DE BATTERIE 18,5 V  
CARGADOR DE BATERÍA 18.5V  
LADEGERÄT FÜR 18.5-V-AKKU  
CARREGADOR DE BATERIA 18.5V

PAEU0328




**CARICABATTERIA 25.9V**  
25.9V BATTERY CHARGER  
CHARGEUR DE BATTERIE 25,9 V  
CARGADOR DE BATERÍA 18.5V  
LADEGERÄT FÜR 25.9-V-AKKU  
CARREGADOR DE BATERIA 25.9V

PAEU0329



**GRUPPO FILTRO**  
FILTER UNIT  
GROUPE FILTRE  
GRUPO FILTRO  
FILTERGRUPPE  
GRUPO FILTRO

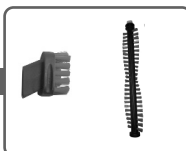PAEU0330



**SPAZZOLINO ASPIRABRICIOLE + INSERTO SPAZZOLA ROTANTE**  
HAND VACUUM BRUSH + ROTARY BRUSH INSERT  
PETITE BROSSE POUR MIETTES + INSERT BROSSE ROTATIVE  
CEPILLO ASPIRADOR DE MIGAS + ACCESORIO CEPILLO GIRATORIO  
KLEINE BÜRSTE FÜR KRÜMEL + DREHBÜRSTENAUFSATZ  
ESCOVINHA ASPIRADOR DE MIGALHAS + ACESSÓ RIO ESCOVA ROTATIVA

Gli accessori optional sono disponibili all'acquisto nei migliori negozi di elettrodomestici, nei Centri Assistenza autorizzati e sul sito [www.polti.com](http://www.polti.com).

The optional accessories are on sale at all the best domestic appliance retailers, an Authorised Polti Service Centre or online at [www.polti.com](http://www.polti.com).

Les accessoires en option sont disponibles dans les meilleurs magasins d'appareils électroménagers, un SAV agréé ou sur le site [www.polti.com](http://www.polti.com).

Los accesorios opcionales están en venta en las mejores tiendas de electrodomésticos, Centros de Asistencia Autorizadoo en la página web [www.polti.com](http://www.polti.com).

Die optionalen Zubehörteile sind in gut geführten Haushaltsgeschäften, bei den Autorisierten Kundendienstcenter oder auf [www.polti.com](http://www.polti.com) erhältlich.

Os acessórios opcionais estão disponíveis para compra nas melhores lojas de eletrodomésticos, um dos Centros de Assistência Autorizados ou no site [www.polti.com](http://www.polti.com).



# WELCOME TO THE WORLD OF FORZASPIRA:

THE FAMILY OF POLTI VACUUMS

SR is the range of rechargeable, wireless uprights in two 25.9V and 18.5V models.  
Lightweight, manageable, bagless. The power of simplicity



## ACCESSORIES FOR ALL NEEDS

Visiting our site [www.polti.com](http://www.polti.com) or any of the top household appliance stores, you will find a vast range of accessories to enhance the performance and convenience of your appliance and make cleaning your home even simpler.

To check compatibility with your appliance, look for the PAEUXXXX/ code next to each accessory listed on Page 3. If the code of the accessory you want to buy is not included in this manual, please contact our Customer Services department for more information.



## REGISTER YOUR PRODUCT [www.polti.com](http://www.polti.com)

Visit our website [www.polti.com](http://www.polti.com) or call our Customer Services department to register your product.

You can get useful recommendations on using the products, and updates on innovations, as well as finding all the accessories that make the family of Polti products even more valuable for looking after your home.

To register your product, in addition to your personal information, you must enter the serial number (SN) which you will find on the silver label, located on the box and underneath the appliance. To save time and have your serial number to hand, write it in the space provided on the back cover of this manual.



## OFFICIAL YOUTUBE CHANNEL

Do you want to know more? Visit our official channel: [www.youtube.com/poltispa](http://www.youtube.com/poltispa). We will show you the effectiveness of the natural and ecological power of steam in cleaning and ironing operations.

Register on the channel so you are always up-to-date on our video content!

# SAFETY WARNINGS

## IMPORTANT PRECAUTIONS FOR USE



WARNING! BEFORE USING THE APPLIANCE, CAREFULLY READ ALL THE INSTRUCTIONS AND WARNINGS IN THIS MANUAL, AND ON THE APPLIANCE ITSELF.



Polti S.p.A. declines all liability for any accident deriving from any improper use of this appliance.

Only usage as detailed in this instruction manual constitutes correct usage.

Any use which does not comply with these instructions will invalidate the warranty.

- Never disassemble or carry out maintenance on the appliance apart from that indicated in this manual. In the event of a fault or malfunction, do not try and repair the appliance yourself. In the event of a heavy knock, fall, damage or fall into water, the appliance may not longer be safe to use. Incorrect use or a lack of respect for the instructions herein may lead to serious accidents. Always contact Authorised Service Centres.
- This appliance can be used by children over 8 years old, by people with reduced physical, sensory or mental abilities or by inexperienced persons only where they are instructed in advance on its safe use and only if informed of the dangers related to the product. Children must not play with the appliance. The cleaning and maintenance of the appliance may not be done by children without the supervision of an adult. Store the appliance and battery charger away from children under 8 years of age.
- Keep all the parts of the packaging out of the reach of children; they are not toys. Keep the plastic bag out of the reach

of children: danger of suffocation.

- This appliance is destined exclusively for indoor domestic use. **In order to reduce the risk of accidents, including: fires, electrocution, personal injury and scalding, both during use and during preparation, maintenance and storage, always take the fundamental precautions listed in this manual.**
- The batteries must be removed from the appliance before its disposal.
- The appliance must be disconnected from the mains when the batteries are removed.
- The batteries must be removed safely (see paragraph “Disposal of the battery”).

## RISKS CONNECTED TO THE POWER SUPPLY ELECTRIC - ELECTROCUTION

- The earthing system and highly sensitive residual-current circuit breaker, complete with magnetothermic cut-out for your domestic system, guarantee safe use of electrical appliances. Therefore, for your own safety, check that the electrical system to which the battery charger is connected complies with current laws.
- The battery charger is used to charge the batteries located inside the appliance. Do not use the appliance with the battery charger connected.
- Do not connect the battery charger to the mains if the voltage does not correspond with that of the domestic electrical circuit in use.
- Do not overload the sockets with adaptors and/or transformers. Only connect the product to a single socket with current that is compatible with the supplied plug.
- Electrical extension leads that are unsuitable for the power rating or which are not compliant with law may overheat and

possibly lead to short-circuiting, fire, power outage or damage to the equipment. Only use certified extensions, suitable for the power rating, that support at least 10A.

- To remove the battery charger from the socket, do not pull the power cable, but hold the plug itself to avoid damage to the plug and the cable.
- Always disconnect the battery charger from the socket when it is not in use.
- Do not pull or jerk the cable of the battery charge or expose it to stress (twisting, crushing or stretching). Keep the cable away from hot and/or sharp surfaces and elements. Avoid crushing the cables in doors and windows. Do not pull the cable tight around corners. Avoid treading on the cable. Do not pass over the cable with the appliance.
- If the battery charger and the power cable are damaged, they must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid all possible hazards.
- Do not use the battery charge barefoot and/or with wet body or feet.
- Do not use the battery charger near containers full of water, e.g. sinks, baths and swimming pools.
- Do not immerse the battery charger including the plug, in water or other liquids.
- Do not insert objects in the contacts of the battery.

## RISKS DURING USE OF THE PRODUCT - INJURIES/SCALDING

- The product should not be used in areas where there is a danger of explosions or in the presence of toxic substances.
- Do not vacuum liquid substances or damp dirt.
- Do not vacuum toxic substances, acids, solvents, detergents or corrosive substances. The handling and removal of dangerous substances must be carried out according to the indica-



tions of the manufacturers of these substances.

- Do not vacuum explosive powders or liquids, hydrocarbons, open flames and or extremely hot objects.
- Keep all body parts away from the vacuum intake and from any moving parts.
- Do not use the vacuum function on people and/or animals.
- Do not position the product near sources of heat such as fireplaces, stoves and ovens.
- Do not obstruct the openings and grills on the product.
- Do not expose the appliance, the battery charger or the battery to temperatures under 0°C or over 40°C.

## CORRECT USE OF THE PRODUCT

This appliance is intended for internal home use as a vacuum of dry material, in accordance with the descriptions and instructions contained in this manual. Please read these instructions carefully and keep them. If this manual is lost, it can be consulted and/or downloaded from the website [www.polti.com](http://www.polti.com). Only vacuum domestic dirt.

Do not vacuum up liquids.

Do not use on debris or chalk, cement or residues from building sites or brick laying.

Do not use on earth and sand/soil, etc.

Do not use on ash, soot and combustion residues (fireplaces, barbecues, etc.).

Do not use on printer, photocopier or fax toner and ink powder.

Do not vacuum pointed, sharp or stiff objects.

The appliance only functions correctly with the collector inserted, and complete with all its parts.

Only usage as detailed in this instruction manual constitutes correct usage. Any other use may damage the appliance and invalidate the warranty.

Polti S.p.A. reserves the right to change equipment or accessory specification without prior notice.

## INFORMATION FOR USERS

Pursuant to European Directive 2012/19/EU, regarding electric and electronic appliances, this appliance must not be disposed of with domestic waste, but sent to an official collection facility. This appliance complies with EU Directive 2011/65/EU.



The crossed-out bin symbol on the appliance indicates that, at the end of its useful lifespan, the product must be disposed of separately from other waste. Therefore, at the end of its life, the user must handover the appliance to an appropriate collection centre for electric and electronic waste. Proper separate waste collection to facilitate the subsequent recycling, treatment and environmentally compatible disposal of the appliance helps to prevent negative effects on the environment and human health, and promotes recycling of the materials the product is made of. Unlawful disposal by the owner involves the application of the administrative sanctions envisaged by current legislation.

## DISPOSAL OF THE BATTERY

The batteries supplied contain substances which are potentially harmful to the environment.

Before disposing of the appliance, remove the batteries, do not throw them away with household waste but take them to an official collection centre.

The Li-ion batteries can explode if exposed to high temperatures or thrown into a fire.

Before disposing of the battery, make sure that it is discharged, leaving the appliance operating until it is off.

To remove the battery, press the two side buttons of the battery and pull upward (21).

## IMPORTANT

Forzaspira SR is a practical vacuum that can be used both as an electric upright and as a portable, wireless vacuum guaranteeing maximum freedom of movement. It is lightweight, manageable and reaches everywhere thanks to the folding handle.

## 1. PREPARATION OF THE APPLIANCE

Remove the appliance from the packaging, checking that the product is intact and that all the parts are present.

### 1.1 APPLIANCE ASSEMBLY


 

- Attach the handle to the central body (1) and fasten it with the screw supplied (2).
- Attach the brush (3). To remove the brush, press the locking button (4).
- Push the unlock button of the portable vacuum cleaner in order to detach itself from the body (11).
- Assemble the battery to the portable vacuum cleaner (22).
- Assemble the portable vacuum cleaner to the body.

### 1.2 CHARGING APPLIANCE

The battery has to be charged before the product is used for the first time.

- Make sure that the switch is off and connect the battery charger connector to the plug of the appliance (5).
- Connect the plug of the battery charger to an easily accessible mains socket.

It is normal for the power supply to heat up during charging.

- The indicator light  (B) will start to flash. When both indicator lights are on ( C  B), the battery is charged (6). The recharge time of the battery, when fully discharged, is around 5 hours.
- Before removing the battery charger from the mains socket, disconnect the connector from the appliance.

## BATTERY DURATION


The duration of the battery depends on use. Below are the duration times of the battery based on various uses:

## ELECTRIC UPRIGHT

FUNCTION	SR 25.9_PLUS	SR 18.5
FLOOR	up to 56 min	up to 45 min
CARPET	up to 40 min	up to 30 min
TURBO	up to 20 min	up to 20 min

## PORTABLE VACUUM

SR 25.9_PLUS	up to 20 min
SR 18.5	up to 20 min

When the indicator light  (B) flashes, turn the appliance off and charge it (see paragraph 1.2).

**WARNING:** After using the appliance, wait for the battery to cool before recharging.



## 2. ELECTRIC UPRIGHT USE


- 2.1 Ensure that Chapter 1 has been followed.
- 2.2 To turn on the appliance move the cursor to the Floor or Carpet position, based on the type of surface to be cleaned (7).

**Floor:** all types of floor (ceramic, parquet, terracotta).

**Carpet:** rugs and carpets

The rotary brush is activated with the Carpet function. The bristly cylinder will start to turn for a better suction action against the surfaces.

- 2.3 For greater suction power, the **Turbo** function can be activated by pressing the **Turbo**  (8) button. The indicator light A will come on (6). To disable it just press the **Turbo**  (8) button, the indicator light A will switch off (6).

- 2.4 By pressing the button  on the handle it is possible to tilt the vacuum to reach under


furniture and beds, letting you clean without getting tired from bending (9).

- 2.5 To turn off the appliance, return the cursor to the OFF position.

- 2.6 For **Model SR 25.9\_Plus** only, the brush has LED lights which turn on when it is started (10), ideal to help you identify dirt on the surfaces.

## 3. PORTABLE VACUUM USE

- 3.1 Ensure that Chapter 1 has been followed.

- 3.2 Press the release button  of the portable vacuum to remove it from the handle (11).

- 3.3 Press the ON/OFF button to turn it on (12).

- 3.4 To clean the most difficult spots, move the suction lance forward (13). It is possible to attach the small brush, located under the portable vacuum (14), to the suction lance.

- 3.5 To turn the appliance off, press the ON/OFF button again (12).

Suction cannot be adjusted.

## 4. EMPTYING AND CLEANING THE DUST CONTAINER TANK

**WARNING:** Never exceed the "FULL" level shown on the dust container, otherwise the filters will clog reducing the suction power of the appliance.

**WARNING:** To empty the dust collector, the appliance must always be removed from the handle.

- 4.1 When the dust-collector tank is full, turn the appliance off.

- 4.2 Press the PUSH (15) button to open the tank and remove the dirt collected (15).

**WARNING:** Pressing the PUSH button opens the base of the tank, it is therefore recommended that this operation be carried out over a waste bin.

- 4.3 Close the door again on the dust-collector tank.

Clean after every use.

## 5. GENERAL MAINTENANCE

Ensure that the appliance is switched off and disconnected from the mains.

To clean the outside of the appliance, only use a damp cloth and tap water.

Do not use detergents of any type.

Store the appliance in a cool, dry place, avoiding extreme cold and heat, to protect battery performance.

### 5.1 CLEANING THE FILTERS

To clean the filters, proceed as follows:

- Empty the dust-collector tank as described in Chapter 4.
- Press the dust-collector tank release button (16).
- Remove the filter unit (17).
- Separate the filter protection mesh from the filter (18).
- Rinse all the components under running water and let them dry naturally away from sources of heat for at least 24 hours.
- Replace everything repeating the steps described previously in reverse order.

**WARNING:** Check that all the components of the dust-collector tank are dry before reassembling them.

**WARNING:** Check the filters during cleaning. Replace the filters when visibly damaged.

**WARNING:** Do not clean the filter with the brush as it can be damaged, thereby reducing the filtering capacity. Do not use detergents, do not rub the filter, and do not wash it in a dishwasher.

The filter should be replaced every 6 months. The filters are sold at household appliance stores, at Polti authorized service centres and at **[www.polti.com](http://www.polti.com)**.

### 5.2 CLEANING THE BRUSH

To clean the brush, proceed as follows:

- Separate the brush from the vacuum unit by pressing the release button (4).
- Turn the brush over and lift the cylinder lock hook (19).
- Remove the bristly cylinder (19).
- Clean the bristly cylinder of the brush (20).
- Reposition everything and close the brush again by performing the operations described previously in reverse order.

## **6. STORAGE**

6.1 Ensure that the appliance is switched off and not charging.

6.2 Empty the dust-collector tank.

6.3 Replace the appliance in the vertical position.

## 7. TROUBLESHOOTING

PROBLEM	CAUSE	SOLUTION
The vacuum cleaner does not turn on	Battery empty. Appliance turned off.	Charge the appliance. Turn on the appliance.
The brush is not working	The brush is not attached correctly. Something is obstructing the rotation of the bristles of the brush.	Check and correctly connect the brush. Clean the interior of the brush as described in the maintenance paragraph.
During vacuuming, power is reduced.	Dust-collector tank is full.	Empty the dust-collector tank.
Battery charger hot during recharge phase.	This is normal when the battery is recharging	-----
Should the problems persist, contact an Authorised Polti Service Centre (see <a href="http://www.polti.com">www.polti.com</a> for the up-to-date list) or Customer Services.		

## WARRANTY

This appliance is for domestic use only and is guaranteed for two years from the date of purchase against any defects present at the time the goods are handed over; the date of purchase must be proven via a proof of purchase document valid for tax purposes and issued by the seller.

For repairs, the appliance must be accompanied by proof of purchase.

This warranty does not affect the consumer rights deriving from European Directive 99/44/EC as regards some aspects of sale and warranty of consumer goods, rights which the consumer should uphold with respect to the seller.

This warranty is valid in the countries which adhere to European Directive 99/44/EC. For other countries, local regulations on warranties apply.

### WHAT THE WARRANTY COVERS

During the warranty, Polti guarantees free repair of a product with a manufacturing or factory defect and, therefore, the client is not liable to pay for any work or materials.

In case of irreparable defects, Polti may replace the product free of charge.

To avail of the warranty, the customer should visit one of the Polti Authorised Service Centres with proof of purchase from the seller valid for tax purposes and bearing the date of purchase of the product. Without proof of purchase and the relative date of purchase, the work will be charged for. Store the proof of purchase document safely for the whole duration of the warranty.

### WHAT THE WARRANTY DOES NOT COVER

- Any fault or damage not deriving from a manufacturing defect.
- Any fault due to improper use or use other than that indicated in the instruction booklet, an integral part of the product sales contract.
- Any defect resulting from *force majeure* (fires, short circuits) or caused by third parties (tampering).
- Damage caused by the use of non-original Polti parts, and repairs or modifications performed by staff or service centres not authorised by Polti.
- Damage caused by the customer.
- Parts (filter, brush, hose, battery, etc.) damaged by use (consumable goods) or normal wear and tear.
- Any damage caused by limescale.
- Defects resulting from lack of maintenance/cleaning according to the manufacturer's instructions.
- Assembly of non-original Polti accessories or those that have been modified or which are not suitable for the appliance.

Inappropriate use and/or use not compliant with the instructions for use and any other warnings or indications contained in this manual invalidates the warranty.

Polti takes no responsibility for any direct or indirect damage to people, objects or animals caused by non-compliance with the instructions indicated in this instruction booklet, regarding warnings for use and product maintenance.

**To see the up-to-date list of the Polti Authorised Service Centres, visit the website [www.polti.com](http://www.polti.com)**



**POLTI**<sup>®</sup>

NATURAL HOME FEELING

Vaporella<sup>®</sup>

Vaporetto<sup>®</sup>

LECOASPIRA

Vaporetto<sup>®</sup>

Forzaspira<sup>®</sup>

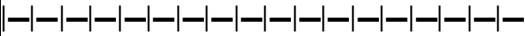
UNICO 

[www.politi.com](http://www.politi.com)



REGISTRA IL TUO PRODOTTO  
REGISTER YOUR PRODUCT  
ENREGISTREZ VOTRE PRODUIT  
REGISTRA TU PRODUCTO  
GERÄTREGISTRIERUNG  
REGISTRE O SEU PRODUTO

SN:



## CALL CENTER

ITALIA SERVIZIO CLIENTI	848 800 806
FRANCE SERVICE CLIENTS	04 786 642 12
ESPAÑA SERVICIO AL CLIENTE	902 351 227
PORTUGAL SERVIÇO AO CLIENTE	707 780 274
UK CUSTOMER CARE	0845 177 6584
DEUTSCHLAND KUNDENDIENST	03222 109 472 9

OTHER COUNTRIES, PLEASE VISIT [WWW.POLTI.COM](http://WWW.POLTI.COM)



POLTI S.p.A, - Via Ferloni, 83  
22070 Bulgarograsso (CO) - Italy  
[www.polti.com](http://www.polti.com)

Follow us:

