

**SSWTABLE, SSWTABLE36, SSWTABLE60, SSWTABLE72**

# **Stainless Steel Work Table Assembly Instructions**



16 Hex Set Screws



Hex Wrench

**1**

Locate the accessory bag and remove the 16 hex set screws and 1 hex wrench. Locate 4 table legs, one table top and one table base.



Table Top

**2**

Place table top upside down on soft cloth surface to prevent scratches. Insert one leg into a corner support.



**3**

Using the hex wrench, loosely tighten the hex set screws (with the HEX side visible) into the corner support.



**4**

Each corner support requires two hex set screws. Wait until the table is completely assembled before securely tightening each hex set screw.



Adjustable Table Base

**5**

After three legs have been loosely attached, lower the adjustable table base and insert each leg through the base holes. Then fix the table base on the marked label position.



**6**

Slide the last leg.



**7**

Each corner support requires two hex set screws. Wait until the table is completely assembled before securely tightening each Hex screw.



**8**

All four legs can be adjusted for surfaces that aren't completely level. Rotate the plastic foot pad to compensate for differences in floor surface.



**9**

Turn the table over AFTER securely tightening each hex set screw. Two people may be required to rotate the table.