



PURE GARDEN




 










PATIO AND GARDEN ESSENTIALS

Assembly Instruction – ITEM#50-106

30'' ROUND FIRE PIT WITH COVER

Please check all packing material carefully before discarding, as some parts may be encased in the packing material.

Part List:

| Part List | Description | Qty. | Drawings |
|-----------|---------------|------|---|
| A | Fire Bowl | 1 |  |
| B | Outer Ring | 4 |  |
| C | Leg | 3 |  |
| D | Log Grate | 1 |  |
| F | Mesh Lid | 1 |  |
| G | Lid Ring | 1 |  |
| H1 | Bolt(M6x8MM) | 8 |  |
| H2 | Bolt(M6x12MM) | 10 |  |
| I | Support Bar | 4 |  |
| J | Connector A | 4 |  |
| K | Connector B | 4 |  |
| L | Poker | 1 |  |
| M | Allen Wrench | 1 |  |
| N | PVC Cover | 1 |  |

Tool required: Allen Wrench (provided)

Special Warnings

- Check local bylaws before using the fire pit.
- This fire pit is intended for Outdoor Use Only! DO NOT use on wooden decks.
- This fire pit is intended to burn Wood Logs Only! DO NOT burn coal, leaves or other combustible materials in the fire pit.
- NOT for use by children. Keep children and pets away from the fire pit.
- Fire pit is hot, use with caution. NEVER touch hot fire pit with bare hands.
- NEVER leave burning fire pit unattended and always extinguish fire completely before leaving the fire pit.
- Maintain a minimum of 5 FT from any structure.
- DO NOT use near flammable or combustible objects or materials.
- Only CHROMED PLATED COOKING GRID is intended for cooking. LOG GRATE is NOT intended for cooking and SHOULD NOT be used for this purpose.

Operation Instructions

- Place wood logs on grate and light with match. DO NOT overload logs.
- Please use Poker (provided) when handling.
- We do not recommend pouring water over the fire unless necessary. The fire should be allowed to expire on its own.
- Tile is fragile so handle with care.

Care and Maintenance

This fire pit is a quality-built product and is made to last for many years. The frame structure of this unit is made of powder-coated steel extrusion and should resist rusting under normal use. Should rusting occur, we suggest using a steel brush on the affected area followed by a spray coating of high temperature anti-rust paint. For additional rust proofing of the bowl, grate and mesh lid we recommend that a coat of high temperature primer (such as rustoleum or similar brand) is applied **before** use. You may cover the fire pit with a Protective Cover (provided) when the fire pit is not in use. Ensure the fire pit has completely cooled down before using the Protective Cover.

WARNING!


- The use of alcohol, prescription or non-prescription drugs may impair the ability to properly assemble or safely operate this fire pit.
- When using this fire pit, exercise the same precautions you would with any open fire.
- Do not use this fire pit for indoor heating. Toxic carbon monoxide fumes can accumulate and cause asphyxiation or death.

DO NOT over tighten hardware

Step 1) Attach the Legs (C) to the Fire Bowl (A) by using bolts (H2). Finger Tighten and do not fully tighten all bolts. (View Fig 1)



Step 2) Attach Support Bar (I) and Connect B (K) to the Fire Bowl (A) by using bolts (H1). Connect 4PCS of Outer Ring (B) to a round ring. Hold the fixed round ring by Connector A (J) and Connector B (K) by using Bolts (H2) . Tighten all the bolts accordingly with the provided Allen Wrench until all pieces fit together securely(View Fig 2)

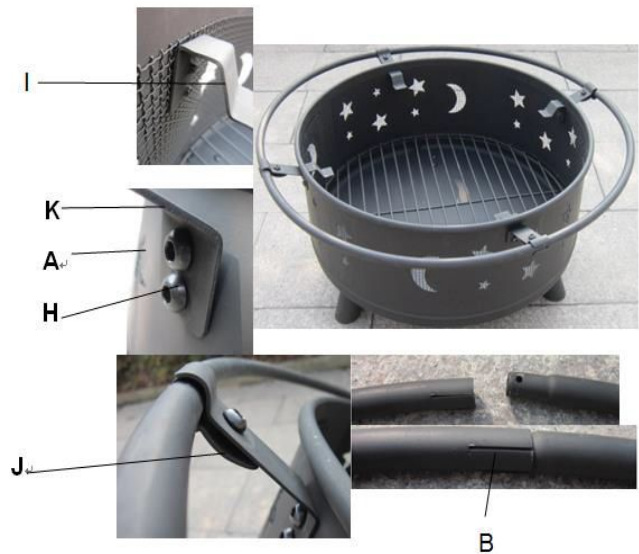

Step 3) Put Log grate (D) into the Fire Bowl (A).Affix Lid Ring (G) to the Mesh Lid (F) by screwing the lid ring into the upper hole of the mesh lid. Then place the mesh lid on the Fire Bowl (A). (view Fig 3)

