



INFLATABLE INSTRUCTIONS

Safety Information

IMPORTANT SAFETY INSTRUCTIONS

When using electrical products, basic precautions should always be followed, including the following:

- a. **READ AND FOLLOW ALL SAFETY INSTRUCTIONS.**
- b. This is an electrical product - not a toy! To avoid risk of fire, burns, personal injury, and electric shock, it should not be played with or placed where small children can reach it.
- c. Do not use seasonal products outdoors unless marked suitable for indoor and outdoor use. When products are used in outdoor applications, connect the product to a Ground Fault Circuit Interrupting (GFCI) outlet. If one is not provided, contact a qualified electrician for proper installation.
- d. This seasonal use product is not intended for permanent installation or use.
- e. Do not mount or place near gas or electric heaters, fireplaces, candles, or other similar sources of heat.
- f. Do not secure product wiring with staples or nails or place on sharp hooks or nails.
- g. Do not let lamps rest on the supply cord or on any wire.
- h. Unplug the product when leaving the house, when retiring for the night, or if left unattended.
- i. Do not use this product for other than its intended purpose.
- j. Do not hang ornaments or other objects from cord, wire, or light string.
- k. Do not close doors or windows on the product, or extension cords, as this may damage the wire insulation.
- l. Do not cover the product with a cloth, paper, or any material not part of the product when in use.
- m. Do not place the product against carpeting, furniture, or any other fabric when in use.
- n. This product has a polarized plug (one blade is wider than the other) as a feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If the plug still does not fit, contact a qualified electrician. Do not use an extension cord unless the plug can be fully inserted. Do not alter or replace the plug.
- o. This product employs overload protection (fuse). A blown fuse indicates an overload or a short-circuit condition. If the fuse blows, unplug the product from the outlet. Also unplug any additional string or products that may be attached to the product. Replace the fuse as per the user servicing instructions (follow product markings for proper fuse rating) and check the product. If replacement fuse blows, a shortcircuit may be present and the product should be discarded.
- p. Read and follow all instructions that are on the product or provided with the product.

q. SAVE THESE INSTRUCTIONS

Package Contents

Part	Description	Quantity
A	Inflatable unit	1
B	Base stakes	6
C	Tether stakes	4
D	Tethers	4
E	Spare fuse	1
F	Spare bulb	1


Installation

Preparing for Installation

- Step 1. Lay the inflatable unit (A) on the ground with the bottom side up in a clear area.
- Step 2. Locate the four clips attached to the bottom of the unit and attach to the plastic legs of the inflatable unit (A).

Securing the unit to the ground

- Step 1. Turn the inflatable unit (A) over so that the bottom is on the ground.
- Step 2. Ensure that the air intake on the inflatable unit (A) is clear of fabric and other obstructions and that the zipper is fully closed.
- Step 3. Insert the base stakes (B) through the plastic legs of the inflatable unit (A) and into the ground.

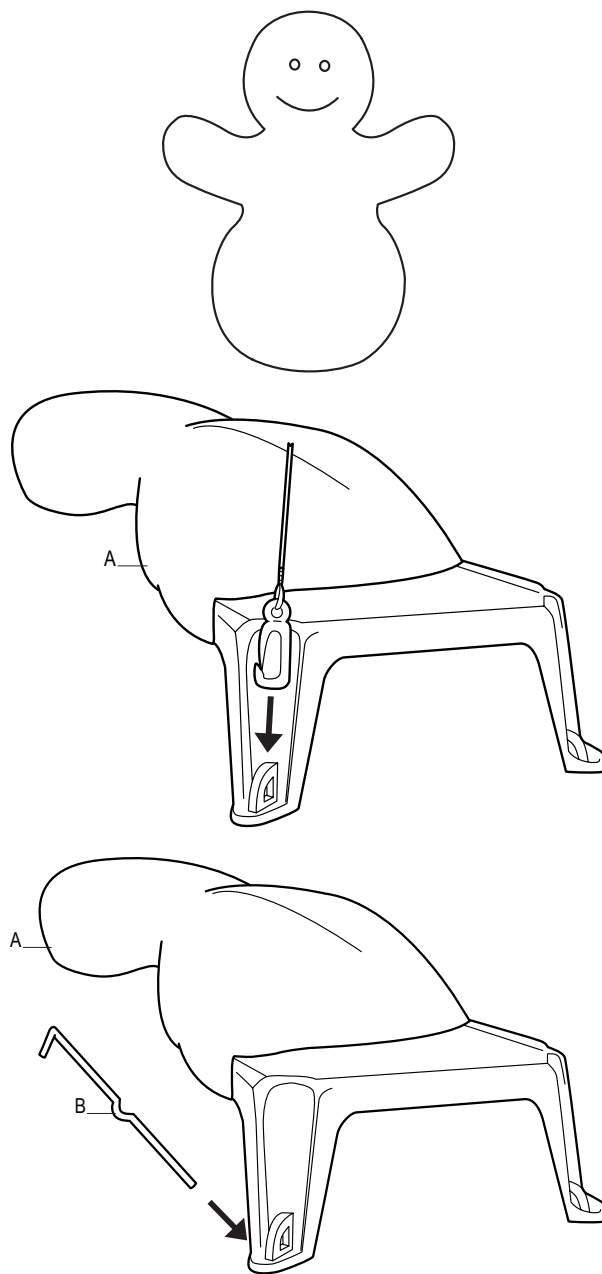

Pre-Operation

CAUTION: Do not attempt to inflate this unit during unusually strong winds. If it becomes too windy for safe operation, allow the unit to deflate and wait for safer conditions.


CAUTION: Protect the fan and power cord from direct exposure to water. This reduces the risk of electrical shock.

CAUTION: When the outdoor temperature is below 14°F (-10°C), the motor may temporarily stop running. The motor will begin to function again with higher outdoor temperatures. Before you use or re-use this product, inspect it carefully. Discard if the product has cuts, damage, frayed wire insulation or cords, cracks in the socket enclosures, loose connections, or exposed copper wire.

Operation

Inflating the unit

- Step 1. Plug the inflatable unit (A) into a receptacle or other outlet device. The unit begins to inflate and remains inflated until you unplug the unit.
- Step 2. Once fully-inflated, clip the tethers (D) to each of the loops on the side of the inflatable unit (A).
- Step 3. Using the loops attached at the bottom of the inflatable unit (A), insert base stakes (B) into the ground.
- Step 4. Insert the tether stakes (C) into the ground and attach the tethers (D).
- Step 5. Drive stake into ground at a 45 degree angle from the inflatable unit (A).

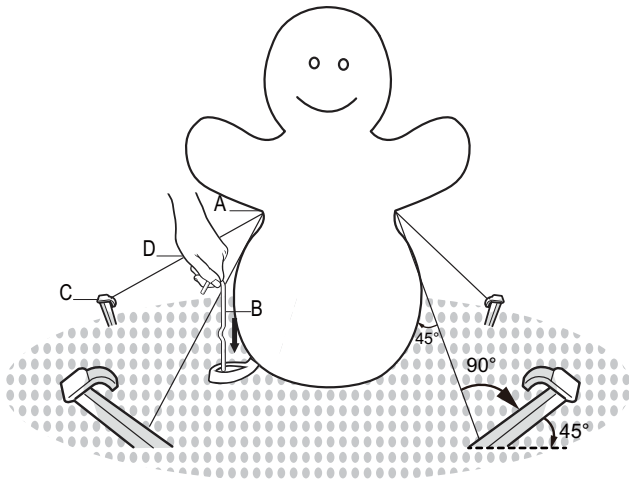


NOTE: To deflate, unplug the unit. For faster deflation, unzip the zipper on the unit after you unplug it. For indoor and outdoor use.
120 V 60 Hz.

Replacing the fuse

CAUTION: Risk of Fire: Replace only with same size and type of fuse.

CAUTION: Risk of Fire: Do not replace the attachment plug. Contains a safety device (fuse) that should not be removed. Discard product if attachment plug is damaged.

- Step 1. Grasp plug and remove from the receptacle or other outlet device. Do not unplug by pulling on the cord.
- Step 2. Open fuse cover. Slide open the fuse access cover on top of the attachment plug towards blades. (See illustration)
- Step 3. Remove fuse carefully.
- Step 4. Replace fuse only with 5 Amp Max, 125 Volt (provided with product).
- Step 5. Close the fuse cover. Slide closed the fuse access cover on top of the attachment plug.

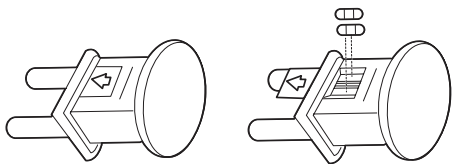

Replacing the bulb

CAUTION: To reduce the risk of overheating, replace burned-out bulbs promptly. Only use C7, 7-Watt Max Candelabra-base 120 Volt UL-Classified bulbs (one is provided).

CAUTION: Unplug the unit and allow the bulb to completely cool before you replace the bulb. Do not touch the bulb when the power is On. The bulb is extremely hot.

Replacing the bulb (continued)

- Step 1. Grasp the plug and remove it from the receptacle. Do not unplug by pulling on the cord.
- Step 2. Open the zipper on the inflatable unit.
- Step 3. Open the protective bulb cover carefully by pressing down on the two locking side tabs simultaneously.
- Step 4. Remove the bulb from the socket and replace.
- Step 5. Do not over-tighten the lamp as this may damage the lamp or lamp holder.

WARNING: This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Operation (continued)

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and Used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the distance between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Care and Cleaning

- a. Wipe the unit with a damp cloth and allow the unit to dry before storing. If necessary, you can use a mild detergent.
- b. When the product is placed on a live tree, the tree should be well maintained and fresh. Do not place on live trees in which the needles are brown or break off easily. Keep the tree holder filled with water.
- c. If the product is placed on a tree, the tree should be well secured and stable.
- d. Before using and reusing, inspect the product carefully. Discard any products that have cut, damaged or frayed wire insulation cords, cracks, lamp holders or enclosures, loose connections, or exposed copper wire.
- e. When storing the product, carefully remove the product from wherever it is placed, including trees, branches, or bushes, to avoid any undue strain or stress on the product conductors, connections and wires.
- f. When not in use, store neatly in a cool, dry location protected from sunlight.

Troubleshooting

Problem: The unit is not inflating.

- a. Ensure that the unit is plugged in.
- b. Check for and remove any debris from the motor.
- c. Ensure that the zipper on the unit is completely closed.
- d. If the outdoor temperature is below 14° F (-10° C), the motor does not work until the outdoor temperature increases.

Problem: The unit is torn.

- a. You can hand sew tears with any type of thread or use clear packing tape to cover the tear.

Problem: The unit deflates after unplug.

- a. The unit will not stay inflated unless it is plugged in and the fan is blowing air.

Problem: I have stored my Airblown® Inflatable for several months and now the motor does not work.

- a. Sometimes the air intake may be blocked by loose grass/leaves or other particles. Gently shake, knock or tap the motor and see if it will operate again.

SKU# 1002404538 1002404556

Model #: 73358 73804

MADE IN CHINA
PRINTED IN CHINA

DISTRIBUTED BY:
HOME DEPOT
2455 PACES FERRY RD., N.W.
ATLANTA, GA 30339
FOR ASSISTANCE, CALL:
1-877-527-0313
HOMEACCENTSHOLIDAY.COM