



SKU # 1004443517 (Instore sku)

Wreath
INDOOR / COVERED ENTRY

Model: SEYI910030THD

INSTRUCTION MANUAL

Assembly Instructions:

- 1) Straighten up the branches. Shape the branches by pointing them in a clockwise direction.
- 2) After shaping the wreath, step back and take an overall look. Shift branches to fill any gaps.
- 3) Disconnect and discard the Try-Me button from the battery box. Open the lid of the battery box by releasing the locks. Insert 4 AA batteries* into the compartment, making sure that the batteries are in the correct orientation. Close the lid by the locks.
- 4) Press the button on the battery box once for timer mode, twice to turn the lights constantly on, and a third time to turn the lights off or reset the timer. The built-in timer mode causes the lights to turn on and off in a cycle: on for 6 hours then off for 18. The user should initially turn on the lights at a specific time of their choice, and then the lights will turn on every day at approximately the same time.
- 5) Replace batteries when the lights become dim. Remove batteries from unit when it is not used.

* Use 1.5V AA batteries or equivalent. Batteries not included.

TROUBLESHOOTING INSTRUCTIONS:

If the lights do not work:

- 1) In cold temperatures, lithium AA batteries must be used. Otherwise, the life-span of the batteries will be greatly reduced, or the lights will not turn on at all.
- 2) Ensure the batteries are new and are inserted correctly into the battery box.

CAUTIONS:

1. Read all instructions and warning tags carefully.
2. This wreath is for indoor and covered entry use. Do not place in uncovered area where there is prolonged exposure to sunlight or where rain/snow accumulates on the wreath for compatibility.
3. Do not place near gas or electric heaters, radiators, fireplaces, candles or other similar sources of heat.
4. Do not use candles on the wreath.
5. Do not install near fountains, bathtubs, sinks, or other wet areas.
6. Remove batteries from product at end of season before storing to avoid battery leakage and corrosion.
7. This is a Christmas decoration. This is not a toy. Keep out of the hands of small children.
8. For festive use only, not intended for consecutive use over 90 days each season.
9. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
10. Children should be supervised to ensure that they do not play with the appliance.
11. The supply cord cannot be replaced. If the cord is damaged the appliance should be scrapped.
12. Do not dispose batteries in fire or other similar sources of heat.
13. Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries, or equivalent.

Please read assembly instructions. The parts for this product have been carefully inspected and packed. If you have any questions or problems regarding this product, please call The Home Depot hotline **1-855-247-9278** for further assistance.

SAVE THESE INSTRUCTIONS

Made in China



Sku # 1004336918 (Dotcom sku)

Wreath
INDOOR / COVERED ENTRY

Model: SEYI910030THD

INSTRUCTION MANUAL

Assembly Instructions:

- 1) Straighten up the branches. Shape the branches by pointing them in a clockwise direction.
- 2) After shaping the wreath, step back and take an overall look. Shift branches to fill any gaps.
- 3) Open the lid of the battery box by releasing the locks. Insert 4 AA batteries* into the compartment, making sure that the batteries are in the correct orientation. Close the lid by the locks.
- 4) Press the button on the battery box once for timer mode, twice to turn the lights constantly on, and a third time to turn the lights off or reset the timer. The built-in timer mode causes the lights to turn on and off in a cycle: on for 6 hours then off for 18. The user should initially turn on the lights at a specific time of their choice, and then the lights will turn on every day at approximately the same time.
- 5) Replace batteries when the lights become dim. Remove batteries from unit when it is not used.

* Use 1.5V AA batteries or equivalent. Batteries not included.

TROUBLESHOOTING INSTRUCTIONS:

If the lights do not work:

- 1) In cold temperatures, lithium AA batteries must be used. Otherwise, the life-span of the batteries will be greatly reduced, or the lights will not turn on at all.
- 2) Ensure the batteries are new and are inserted correctly into the battery box.

CAUTIONS:

- 1) Read all instructions and warning tags carefully.
- 2) This wreath is for indoor and covered entry use. Do not place in uncovered area where there is prolonged exposure to sunlight or where rain/snow accumulates on the wreath for compatibility.
- 3) Do not place near gas or electric heaters, radiators, fireplaces, candles or other similar sources of heat.
- 4) Do not use candles on the wreath.
- 5) Do not install near fountains, bathtubs, sinks, or other wet areas.
- 6) Remove batteries from product at end of season before storing to avoid battery leakage and corrosion.
- 7) This is a Christmas decoration. This is not a toy. Keep out of the hands of small children.
- 8) For festive use only, not intended for consecutive use over 90 days each season.
- 9) This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- 10) Children should be supervised to ensure that they do not play with the appliance.
- 11) The supply cord cannot be replaced. If the cord is damaged the appliance should be scrapped.
- 12) Do not dispose batteries in fire or other similar sources of heat.
- 13) Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries, or equivalent.

Please read assembly instructions. The parts for this product have been carefully inspected and packed. If you have any questions or problems regarding this product, please call The Home Depot hotline **1-855-247-9278** for further assistance.