 


USE AND CARE GUIDE

6-PACK CABINET LIGHT KIT

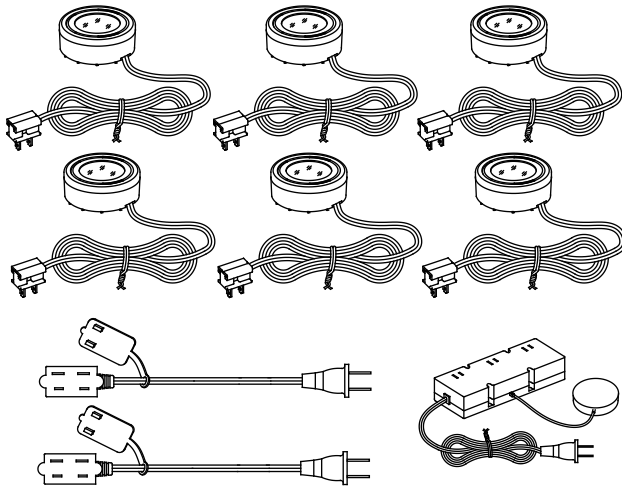

THANK YOU

We appreciate the trust and confidence you have placed in CE Tech through the purchase of this under cabinet light kit. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing CE Tech!

Warranty

The manufacturer warrants this lighting fixture against defects in materials and workmanship for a period of one year from the date of purchase. If within this period the product is found to be defective in material or workmanship, the product must be returned, with a copy of the bill of sale as proof of purchase, to the original place of purchase. The manufacturer will, at its option, repair, replace or refund the purchase price to the original purchaser or consumer. This warranty does not cover light bulbs or the fixture becoming damaged due to misuse, accidental damage, improper handling and/or installation and specifically excludes liability for direct, incidental or consequential damages. As some states do not allow exclusions or limitations on an implied warranty, the above exclusions and limitations may not apply. This warranty gives you specific rights and you may also have other rights that vary from state to state.

Contact the Customer Service Team at 1-877-527-0313 or visit www.homedepot.com.



Questions, problems, missing parts? Before returning to store, call Commercial Electric Customer Service
8 a.m. - 6 p.m. EST, Monday - Friday

1-877-527-0313

HOMEDEPOT.COM

Safety Information

IMPORTANT SAFETY INSTRUCTIONS - (Save these Instructions)

This portable luminaire has a polarized plug (one blade is wider than the other) as a feature to reduce the risk of electric shock. This plug will fit only one way into a polarized outlet. If the plug does not insert fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician for assistance. Never use with an extension cord unless plug can be fully inserted. Do not alter the plug in any way as serious injury or damage may result.

WARNING-To reduce the risk of FIRE, ELECTRIC SHOCK, EXPOSURE TO EXCESSIVE UV RADIATION, OR INJURY TO PERSONS:

1. The bulb becomes hot quickly! Only contact the switch/plug when turning on.
2. Do not touch hot lens, guard, or enclosure.
3. Do not remain in the light if skin feels warm.
4. Do not look directly at a lit bulb.
5. Use only with a 20 watt bulb.
6. Do not operate the unit with a missing or damaged guard, lamp containment barrier, or UV filter.
7. Use only insulated staples or plastic ties to secure the cords.
8. Route and secure cords so that they will not be concealed, pinched or damaged.
9. Do not run the Line-Voltage power supply cord through holes in walls, ceilings, or floors.
10. Not intended for recessed installation in ceilings, or soffits.
11. This cabinet light is not intended for installation in plastic cabinets.
12. This cabinet light is not intended for installation inside enclosed furnishings such as a kitchen cabinets, china cabinets, or trophy cases.

WARNING: Do not install this lighting system in a wet location.

WARNING: The National Electrical Code (NEC) does not permit cords to be concealed where damage to insulation may go unnoticed. To prevent the risk of fire, do not run the cord behind walls, ceilings, soffits, or cabinets where it may be inaccessible for examination. The cord should be visually examined periodically and immediately replaced when any damage is noted.

CAUTION: Turn off/unplug and unplug the light and allow it to cool before replacing the bulb.

 
CAUTION: Keep the lamp away from materials that may burn.

CAUTION: The lighted lamp is hot!

CAUTION: Do not touch the bulb at any time. Use a soft cloth. Oil from skin may damage the lamp.

Pre-Installation


PACKAGE CONTENTS

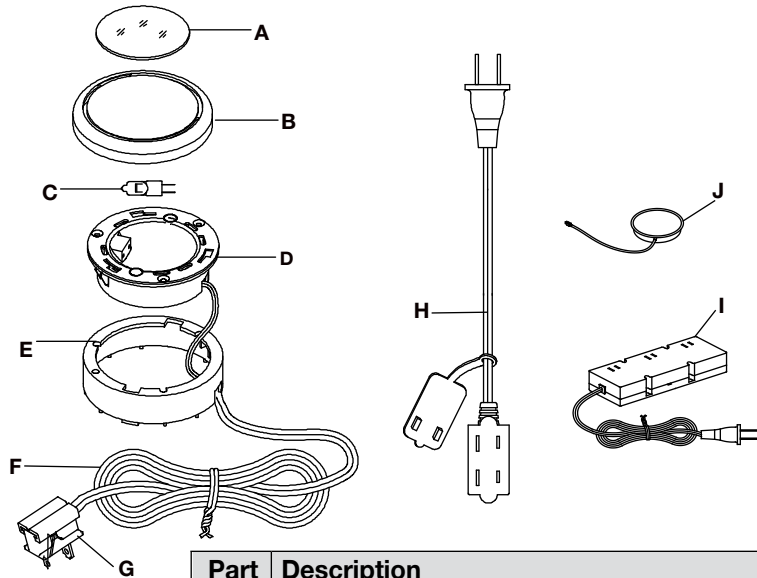

Part	Description	Qty.
A	Glass UV lens [preassembled to lens cover (B)]	6
B	Lens cover [preassembled to fixture body (D)]	6
C	Bulb [preassembled to fixture body (D)]	6
D	Fixture body & Socket [preassembled to plastic housing (E)]	6
E	Plastic fixture housing	6
F	Fixture wire [preassembled to fixture body (D)]	6
G	Quick connector plug [preassembled to fixture wire (F)]	6
H	Extension cord	2
I	Power supply	1
J	Dimmer	1


Pre-Installation

 TOOLS REQUIRED

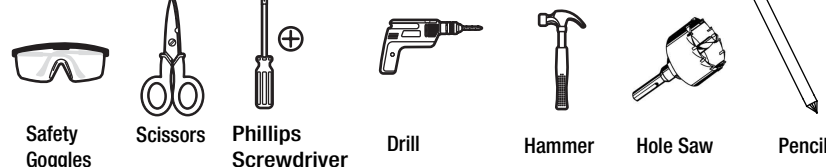

HARDWARE INCLUDED

 
NOTE: Hardware not shown to actual size.

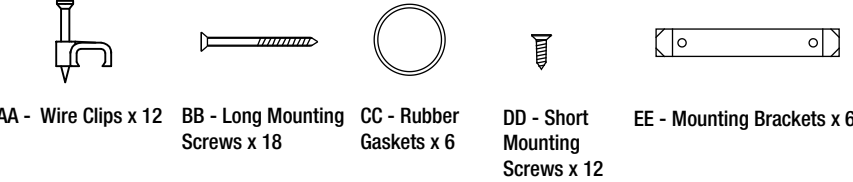

Installation

1 Installing on a surface mount

 
- Remove the lens cover (B) from the fixture body (D) by turning counterclockwise.
- Secure the fixture body (D) to the desired location under the wood cabinet with the three (3) long mounting screws (BB).
- Reinstall the lens cover (B) to the fixture body (D).

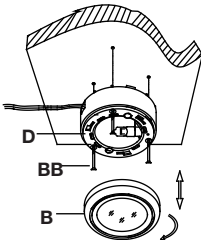

Installation


5 Installing the dimmer

 - Plug the dimmer (J) directly into the power supply (I).
- Mount the dimmer pad (J) to desired surface with the foam tape included.

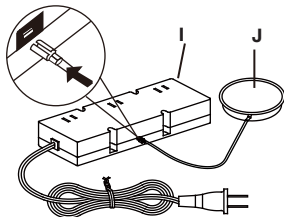


6 Combination installation

 - Plug six of the puck lights into the two extension cords (H).
- The extension cords (H) should be plugged directly into the power supply (I).
- Plug the power supply (I) into a convenience outlet.

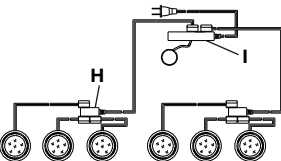

7 Installing or relamping the bulb

 - Unplug the puck light.
- Remove the lens cover (B) from the fixture body (D) by turning counterclockwise.
- Remove the bulb (C) by pulling straight out in a horizontal direction.
- Insert the new bulb (not included) into the fixture body socket (D) using a tissue or soft cloth. (Oil from the skin may damage bulb.)

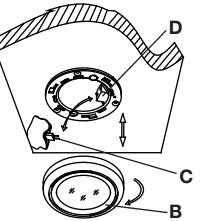


CAUTION: Risk of fire! Use 20 watt,120 volt, type G8 base Xenon bulbs. Do not use low voltage (12 volt) bulbs in this fixture.

Installation


2 Installing on a recessed mount

 - Remove the lens cover (B) from the fixture body (D) by turning counterclockwise.
- Separate the fixture body (D) from the plastic housing (E).
- Install the rubber gasket (CC) to the underside of the fixture body (D).
- Drill a 2 3/8 in. hole into the desired location in the wood cabinet.
- Route the fixture wire (F) through the hole and push the fixture body (D) into the hole.
- Install the mounting bracket (EE) with short mounting screws (DD).
- Reinstall the lens cover (B) to the fixture body (D).

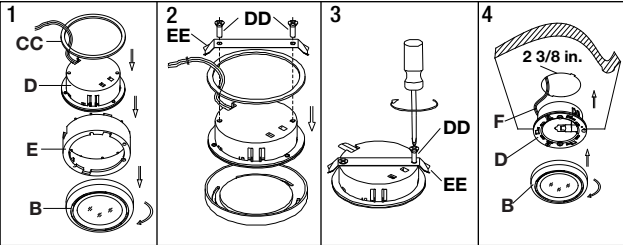


3 Installing the quick connector plug (optional)

 - The fixture wire (F) can be cut to desired length if necessary. This helps to minimize the amount of wire underneath the cabinets.
- Remove the plug cover (1) from the plug (G).
- Press the fixture wire (F), with the grooved side (2) to the right (neutral side) down and into the front of the plug (G).
- Press the fixture wire (F) down onto the metal prongs. Slide the plug cover (1) back onto the plug over the fixture wire (F).

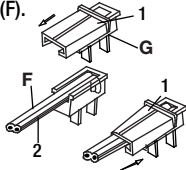

4 Installing the wire clip

 - Wire clips (AA) are provided to secure the fixture wire (F) to the bottom of the wood cabinet.
- Insert the fixture wire (F) into the wire clips (AA). Secure the wire clips to the wood cabinet with a hammer (not included).

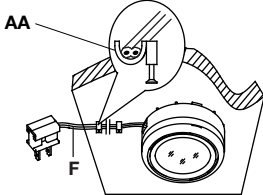

Care and Cleaning

- Before attempting to clean the fixture, disconnect the power to the fixture by unplugging the fixture.
- To clean the fixture, use a dry or slightly dampened clean cloth.
- Do not use any cleaners with chemicals, solvents, or harsh abrasives as damage to the fixture may occur.
- Do not touch a new or existing light bulb with bare hands. Oil from skin will damage the bulb and shorten the life of the bulb.
- Bulb replacement: Use 20 watt, 120 volt, G8 Xenon or Halogen bulb.

CAUTION: Do not use chemical solvents or harsh abrasives to clean the fixture as damage to the fixture or various components may occur rendering the fixture inoperable.

Troubleshooting

Problem	Possible Cause	Solution
The fixture does not work.	☐ The light bulb is burned out.	☐ Replace the bulb.
	☐ There is a bad wire connection.	☐ Check the wire connections.
	☐ There is a faulty switch.	☐ Test or replace the switch.
	☐ The quick connector plug may not be properly installed.	☐ Unplug the fixture and ensure the fixture wire is properly pierced inside the quick connector plug.
	☐ The power is off	☐ Check that the power supply is on and check the circuit breakers.
	☐ The slow melt replaceable fuse inside the power supply has blown.	☐ Contact customer service for a replacement fuse. The fuse should be installed by a qualified electrician.

