

Usage

Start

Before you begin:

! DO NOT leave steam plate unattended, or face down on any surfaces.

! DO NOT operate the steamer once the water container is empty. Make sure to wear gloves and eye protection.


! Before unscrewing the filler cap and filling the reservoir, make sure any remaining water has cooled for at least twenty (20) minutes. Empty any remaining water to avoid over-filling.

! Do not look directly down into the fill hole when filling. Keep your free hand and others at a safe distance.

! The spray handle may become warm to the touch during usage.

Note: Before using, trigger the spray handle into a sink or empty bucket to purge any remaining cold water.




Using the trigger

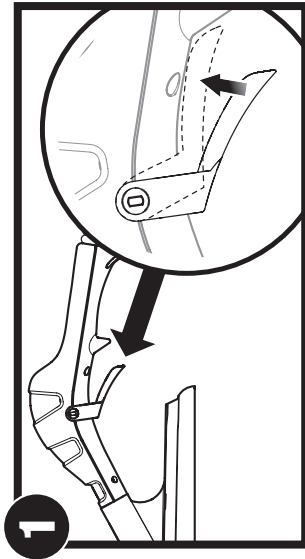

1. You can control the flow of steam from the accessory by activating the trigger. The trigger will also relieve any built-up pressure remaining in the system after the steamer has been shut off.

Note: Just turning the power OFF does not relieve steam pressure. During cool down, treat the unit as if it is under pressure. Always activate the trigger before removing the fill cap.

Cooling / refilling

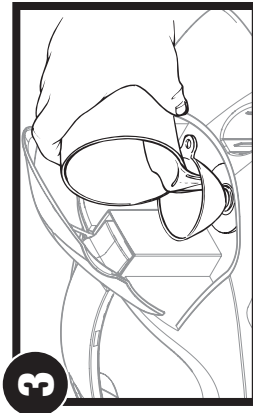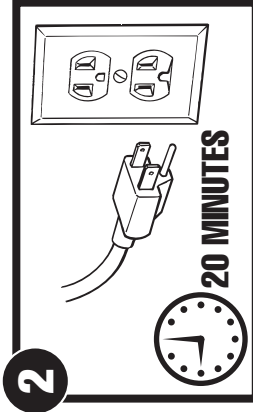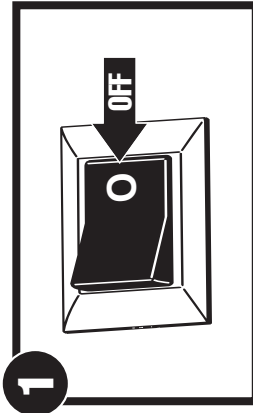


1. Shut the unit OFF. Activate trigger until all pressure has been released.

2. Unplug power cord. Allow steamer to cool for at least twenty (20) minutes.


* See NOTE, above.

3. Once unit has sufficiently cooled, repeat steps 4-6 in Setup to continue.

Wallpaper removal

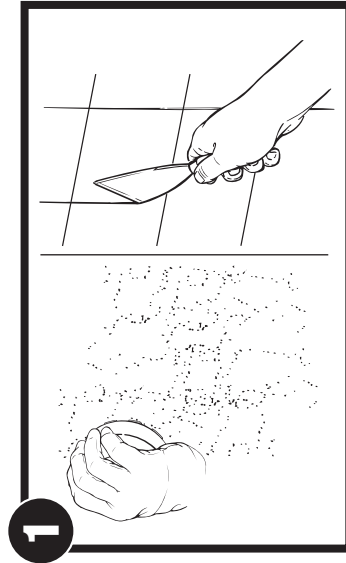

1. For best results, use a scoring tool or a putty knife (sold separately) and gently score the wallpaper in a crisscross pattern before removal. The perforations will allow the steam to penetrate the wallpaper.

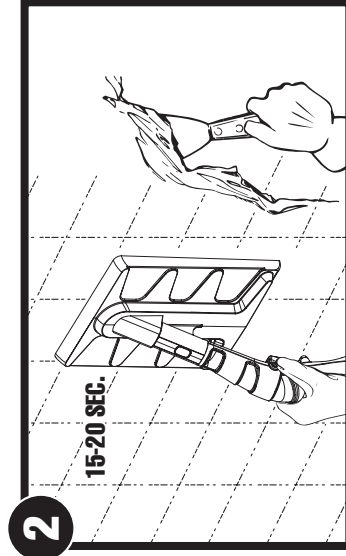

2. To remove wallpaper, hold the steam plate flat against the scored wallpaper. Pull the trigger and hold for 15-20 seconds. Move the steam plate to a new section and remove the steamed section with a scraper blade (sold separately).

Steam Cleaning

General Notes:

Using Steam on Delicate Materials

Always check the suitability of materials before steam cleaning. Steam is being generated at temperatures in excess of 212°F (100°C). Do not use on any surfaces that cannot withstand this temperature. Always test a small area of the material, preferably an area that is normally out of view. Do not soak materials being cleaned. Only a light application of steam is required. See below for more information on steam cleaning.

DO NOT attempt to use the steam plate included with this unit as a cleaning for wallpaper removal only. This unit is not recommended to be used on self-adhesive vinyl tiles.

Pressurized steam may bounce back off cleaning surface.

- Using the cleaning accessories generally require less water than wallpaper removal. Using less water will decrease time it takes for the unit to make steam.
- Activate the trigger as needed for sufficient steam supply. Use the soft bristles to brush away dirt, grease, unwanted dried paint, etc. **DO NOT** over-scrub the surface unless you are cleaning tiles or stone.
- Use only clean tap water or distilled water when using the steamer. No detergents or any other additives are needed.
- When cleaning upholstery or clothing, **DO NOT** soak the material. Try cleaning an inconspicuous area that is normally not in view and wait 24 hours before checking whether the material has been affected. If material has been adversely affected, **DO NOT CONTINUE!**

Using the Cleaning Accessories:

The accessories are excellent tools for cleaning a variety of surfaces.

Note: Using the optional accessories for cleaning generally requires less water than wallpaper removal. Using less water will decrease time it takes for the unit to make steam.

The Large Cleaning Brush (a)

The large cleaning brush and towel can be used to clean large, solid areas or upholstery. It can be used on surfaces such as ceramic, stone, parquet, marble, linoleum and carpet (see **Steam Cleaning Tips**, below, before cleaning).

Window / Tile squeegee (b)


The squeegee is an excellent tool for cleaning windows and also tiles. The rubber blade can be used to scrape away dirt and other particles as steam is applied.

The Extensions (c)

The extensions can be used for floor cleaning and to help you reach into higher or harder to reach areas. Do not use more than two (2) extensions.

The Jet Nozzle with Brush (d)

The jet nozzle is recommended for steam cleaning smaller, harder to reach areas.

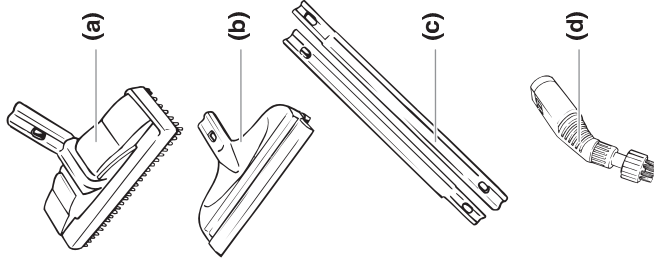

Steam Cleaning Tips - Read before starting

Flooring and Carpeting:

- This unit is not recommended for use on surfaces that can be damaged by heat or water, such as self-adhesive vinyl tiling, or wood flooring as the steam may cause the floor boards to swell. Always check with floor manufacturer before using steamer.
- Some carpets contain stain resistant treatments which may be affected by steam cleaning. Try cleaning a small, normally unseen area of carpet, and allow 24 hours to verify any unusual effects on the carpet. If this occurs, do not continue to use. Check with your carpet supplier for further information.

Windows and Tiles:

- Be careful not to pick up dirt or grit particles on the rubber blade as this could scratch the glass.
- Antique and stained glass may be brittle and may crack under extreme temperatures.
- Do not use on glass when the temperature is below 32°F (0°C). Glass may crack in cold temperatures.
- If your window has been treated or coated in any way, check with manufacturer before using steamer.

Upholstery and Fabrics:

- Some upholstery and fabrics contain stain resistant treatments which may be affected by steam cleaning. Try cleaning a small, normally unseen area and allow 24 hours to verify any unusual effects. If this occurs, do not continue to use. Check with material supplier for further information.
 - Always check the suitability of materials before steam cleaning. Do not use on any surfaces that cannot withstand temperatures in excess of 212°F (100°C).
 - On clothing, always check the garment label or check with the clothing retailer before steam cleaning.
 - When cleaning upholstery or clothing, do not soak the material. Only a small amount of steam is sufficient for cleaning. Too much steam can leave water marks or other damage.
- General:**
- Activate the trigger as needed for sufficient steam supply. Use the soft bristles on the accessories to brush away dirt, grease, unwanted dried paint, etc. Do not over-scrub the surface unless you are cleaning tiles or stone.
 - Use only clean tap water or distilled water when using the steamer. No detergents or any other additives are needed.
 - Read this manual for complete instructions. Follow all warnings.