

USE AND CARE GUIDE

RECTANGLE 4 LEG WOOD TABLE



Questions, problems, missing parts?

Before returning to the store, call Customer Service.

8 a.m. - 7 p.m., EST, Monday - Friday, 9 a.m. - 6 p.m., EST, Saturday

1-877-527-0313

HOMEDEPOT.COM

THANK YOU

Table of Contents

Table of ContentsSafety Information	
Warranty	
1 Year Warranty	
What is Covered	2
What is Not Covered	
Pre-assembly	
Planning Assembly	3

Tools Required	3
Hardware Included	
Pre-assembly (continued)	4
Package Contents	4
Assembly	5
Maintenance	6
Care and Cleaning	

Safety Information



DANGER

- Keep small parts away from children during assembly.
- Read and follow instructions carefully.



WARNING

- TO GUARANTEE THE SAFE USE OF THIS PRODUCT, FOLLOW THE WARNINGS, GUIDELINES AND RECOMMENDATIONS IN THIS MANUAL.
- Adult assembly required.
- Small parts may present choking hazard prior to assembly.

CAUTION

- Do not use power tools to assemble your furniture. Power tools may strip or damage parts/product.
- Do not overtighten connectors (screws, bolts, etc.).
 Overtightening can lead to product damage.
- Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment. If parts are missing, contact THE HOME DEPOT to obtain any missing parts.
- □ DO NOT USE SUBSTITUTE PARTS.
- This product should only be used on a flat, level surface.
- Some assembly may involve attaching glass or mirrors.
- Be very careful handling the glass or mirrors, as severe injury may result if the glass or mirror breaks.
- Never handle large pieces ofglass or mirrors by yourself.
- Assembly requires two people; assembly alone may cause injury.

Warranty

1 YEAR WARRANTY

WHAT IS COVERED

We guarantee this product to be free of manufacturing defects to the original purchaser for one year.

WHAT IS NOT COVERED

This warranty does not cover commercial use, acts of nature, and abusive use.

Pre-assembly

PLANNING ASSEMBLY


- Remove all Packaging materials , staples and packing straps form the carton .
- $\, \square \,$ Refer to Parts List and Hardware List , and $\,$ ensure parts and hardware are correct before assembly .
- Contact customer service for missing parts .
- Place all wooden parts on a clean , flat , and soft surface (e.g. carpet or rug) to prevent scratch and damage to parts .

TOOLS REQUIRED



HARDWARE INCLUDED


NOTE: Hardware notshown to actual size.

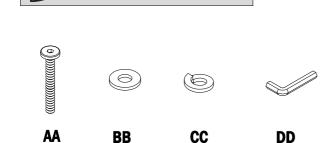

Part	Description	Quantity
AA	Screw	8
BB	Washer	8
CC	Washer	8
DD	Allen Key	1

Pre-assembly (continued)

PACKAGE CONTENTS

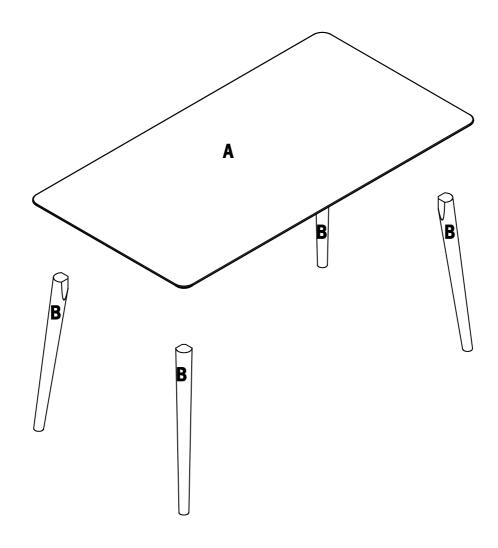


Part	Description	Quantity
А	Table Top	1
В	Legs	4

Assembly

Preparing the table top and 4 legs

- Use an allen key (DD) to tighten all the legs (B) to the table top (A) with screws (AA) and washers (BB, CC) as shown.

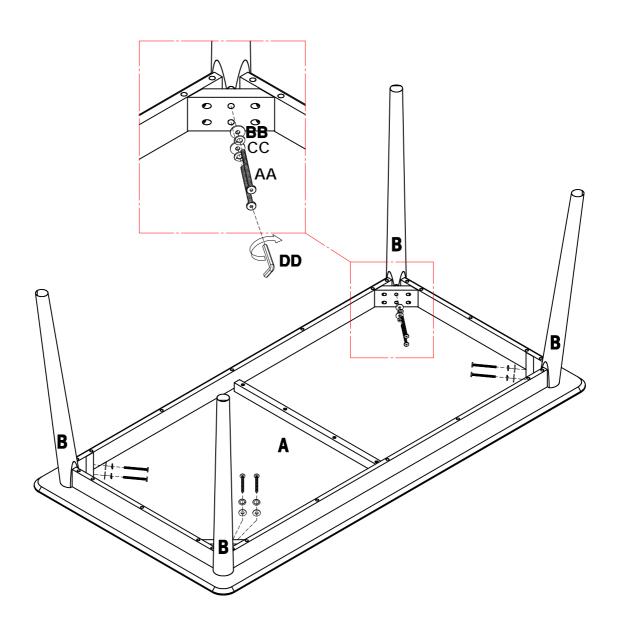

Maintenance				
 Keep the product away from direct heat and sunlight . Prolonged exposure to heat sources may cause scorching, or even cause color to fade . Regular vacuuming or light brushing helps to remove dirt and prevent soil build-up, which increases the appearance of wear . Periodically (every 90 days) make sure that the screws arefully tightened . 				
Care and Cleaning				
 □ Handle with care. □ Use a slightly damp cloth to clean the product. Do not use bleach or use abrasive cleaning material. □ Check all the fittings periodically and re-tighten as necessary. Do not us the product if any of the parts are damaged or broken. □ Never allow any kind of liquid to remain on your furniture. □ Absorption can make wood wrap or delaminate. □ Do not place hot items (e.g. hot drinks) directly onto the wood surface. □ Do not drag and /or pull the furniture. 				
 Never use harsh chemicals or solvents on y Marks and stains from pens, crayons and in we recommend that you consult a profession 	nk markers are difficult	damage the metal. to remove. In the event that your products become permanently stained		

StyleWell.

Questions, problems, missing parts?

Before returning to the store, call Customer Service
8 a.m. - 7 p.m., EST, Monday - Friday, 9 a.m. - 6 p.m., EST, Saturday

1-877-527-0313

HOMEDEPOT.COM

Retain this manual for future use.