


Marseille Outdoor Fireplace

Model No. S-FT1236PST

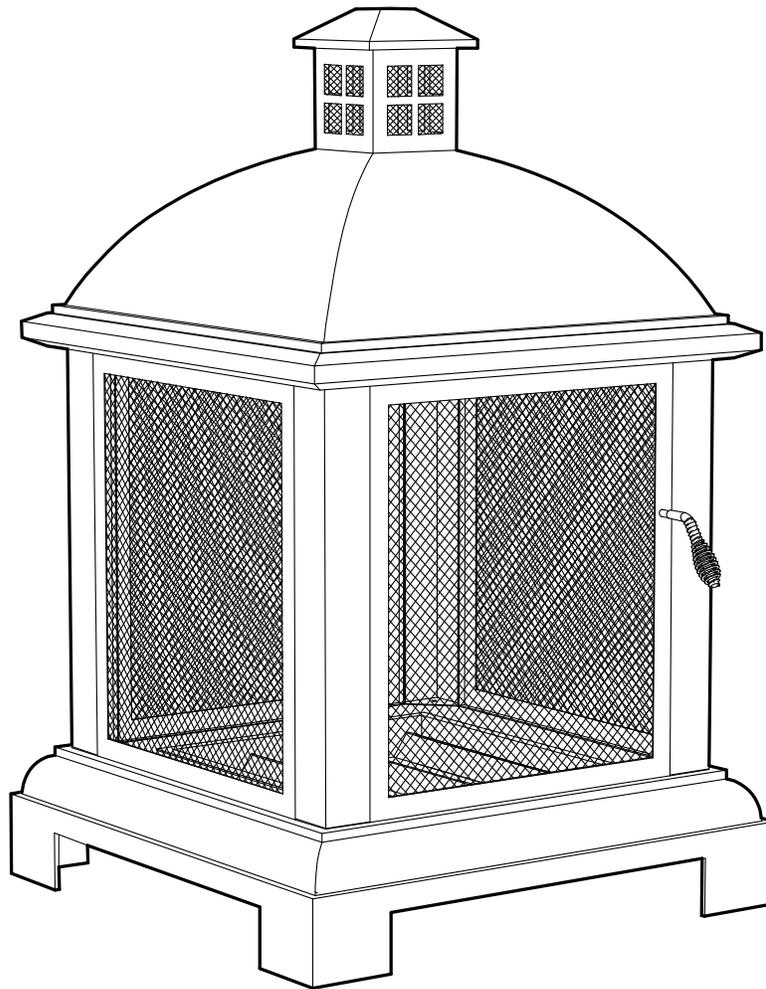

Assembly Instructions

Toll-free: 1-866-578-6569

IMPORTANT: Please read this manual carefully before beginning assembly of this product.

Keep this manual for future reference.

前四位销售季2019，后四位是工厂代码

Production Number: xxxxxxxx

Table of Contents	3
Important Safety Instructions	3
Part List	4
General Requirements	5
Assembly	6
Cleaning and Maintenance	11
Technical Data	11
Warranty	12
WARNING	12



Warning! Please read and understand this entire manual before attempting to assemble or operate this product.

Caution! Some parts may contain sharp edges. Please wear protective gloves during assembly and use.

- This fireplace is intended for outdoor use only. NEVER LEAVE A FIRE UNATTENDED.
- DO NOT use the fireplace to cook food. The fireplace is not designed for grilling food.
- DO NOT allow children or pets near the fireplace without supervision.
- DO NOT touch the surface of the fireplace while in use as it may cause burns.
- NEVER burn in vehicles, tents or indoors. CARBON MONOXIDE HAZARD.
- Use a poker and / or heat-resistant gloves to open / close the mesh cover while in use.
- DO NOT use water to extinguish as this is dangerous and can cause damage to the fireplace.
- Burn only untreated wood or fire logs in this fireplace.
- DO NOT use gasoline or kerosene to start the fire in this fireplace.
- DO NOT use this fireplace on a wood deck, long or dry grass and / or leaves, or on a combustible surface.
- DO NOT attempt to move the fireplace while it is hot or in use.
- Place the fireplace no closer than 8 ft. from walls or combustibles during use.
- Adequate fire extinguishing material should be readily available.
- Always ensure that the mesh cover is secured over the fire bowl while in use.
- The poker handle may become hot during and after use.
- Check local fire regulations and municipal by-laws for information regarding the safe use of this

 
e. c a l p e

 
IMPORTANT: RETAIN FOR FUTURE REFERENCE, AND READ CAREFULLY


A1 P11137A01130 
Post 1 - 2

A2 P11138A01130 
Post 2 - 1

A3 P11139A01130 
Post 3 - 1

B1 P21111A01130 
Mesh - 3

 
B2 P20910A01130 
Door - 1

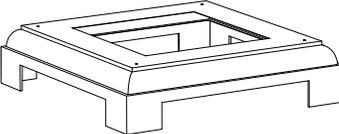
C P20609A01130 
Base - 1

D P21403A01130 
Upper Base - 1

E P21606A01130 
Chimney - 1

F P21503A01130 
Chimney Top - 1

 
G P20208A01130 
Fire Bowl - 1

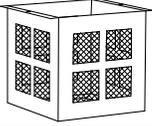
H P21507A01130 
Chimney Top1 - 1

J P22601A01130 
Locker - 1

 
K P22501A01130 
Handle - 1

L P20501A01001 
Poker - 1

AA H09010C11 
Bolt M6*10 - 16+2 Spare

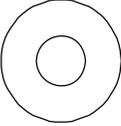BB H12001C11 
Flat Washer M6 - 16+2 Spare

DD H16001C11 
Nut M6 - 5+1 Spare

EE H09012C11 
Bolt M6 * 12 - 8+1 Spare

WW H00001C12 
Wrench M6 - 1

**Caution!**

- Proper placement of your fireplace is essential.
- Keep children away during assembly.

This product contains small parts which can be swallowed by children.

- Keep fingers away from the places where they can be pinched or trapped. Please wear protective gloves during assembly.
- Do not attempt to assemble the fireplace if any parts are missing.




IMPORTANT: Please read and understand this manual before any assembly.

Place all parts from the box in a cleared area and position them on the floor in front of you. Remove all packing materials and place them back into the box. Do not dispose of the packing materials until assembly is complete. Read each step carefully before beginning any assembly and make sure you understand each step.




Needed for assembly: The Screwdriver is not included in the package







Screwdriver

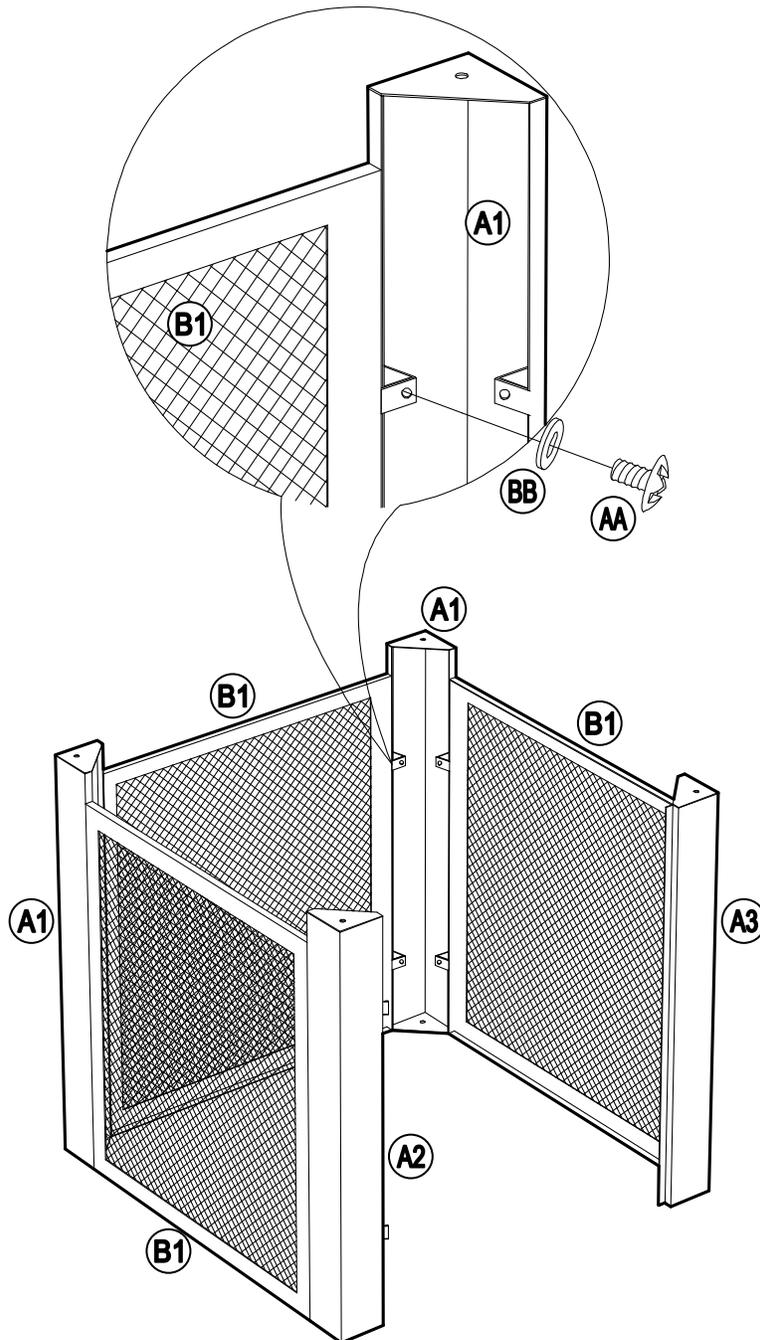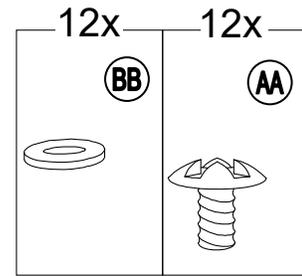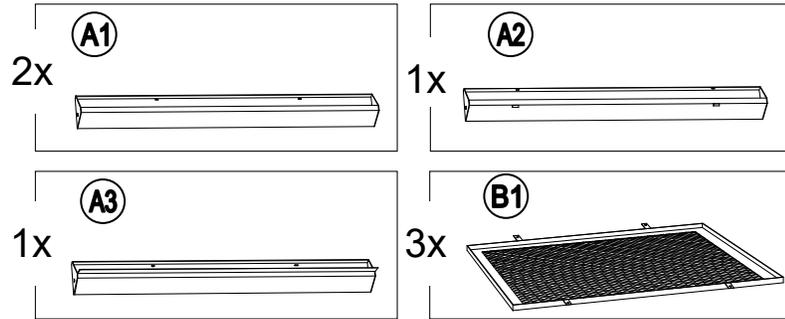STEP 1: Assembly of Post and Mesh






STEP 2: Assembly of Base

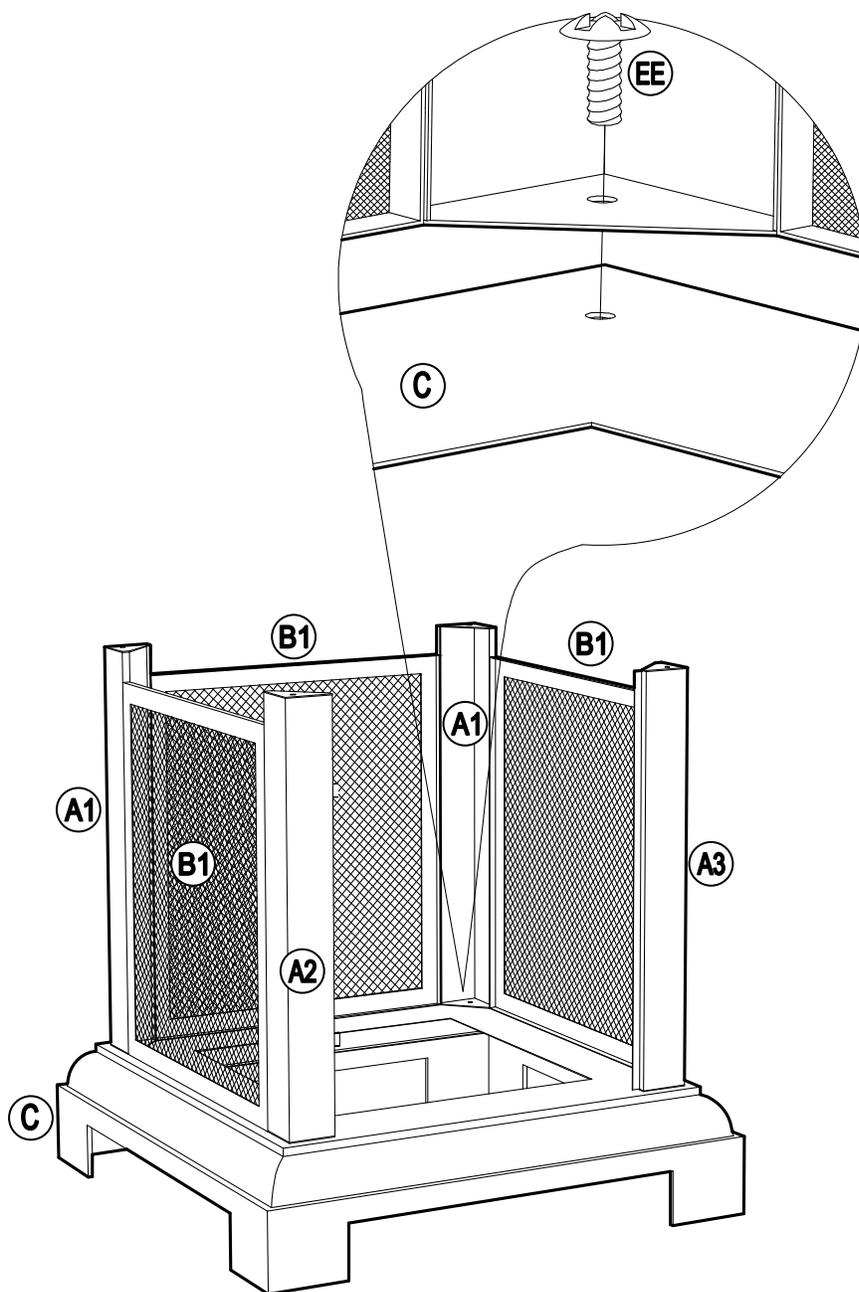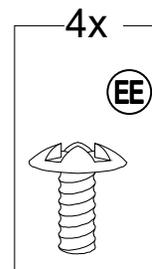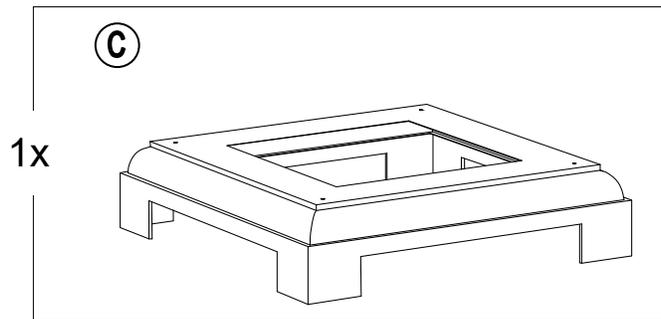







STEP 3: Assembly of Door and Handle

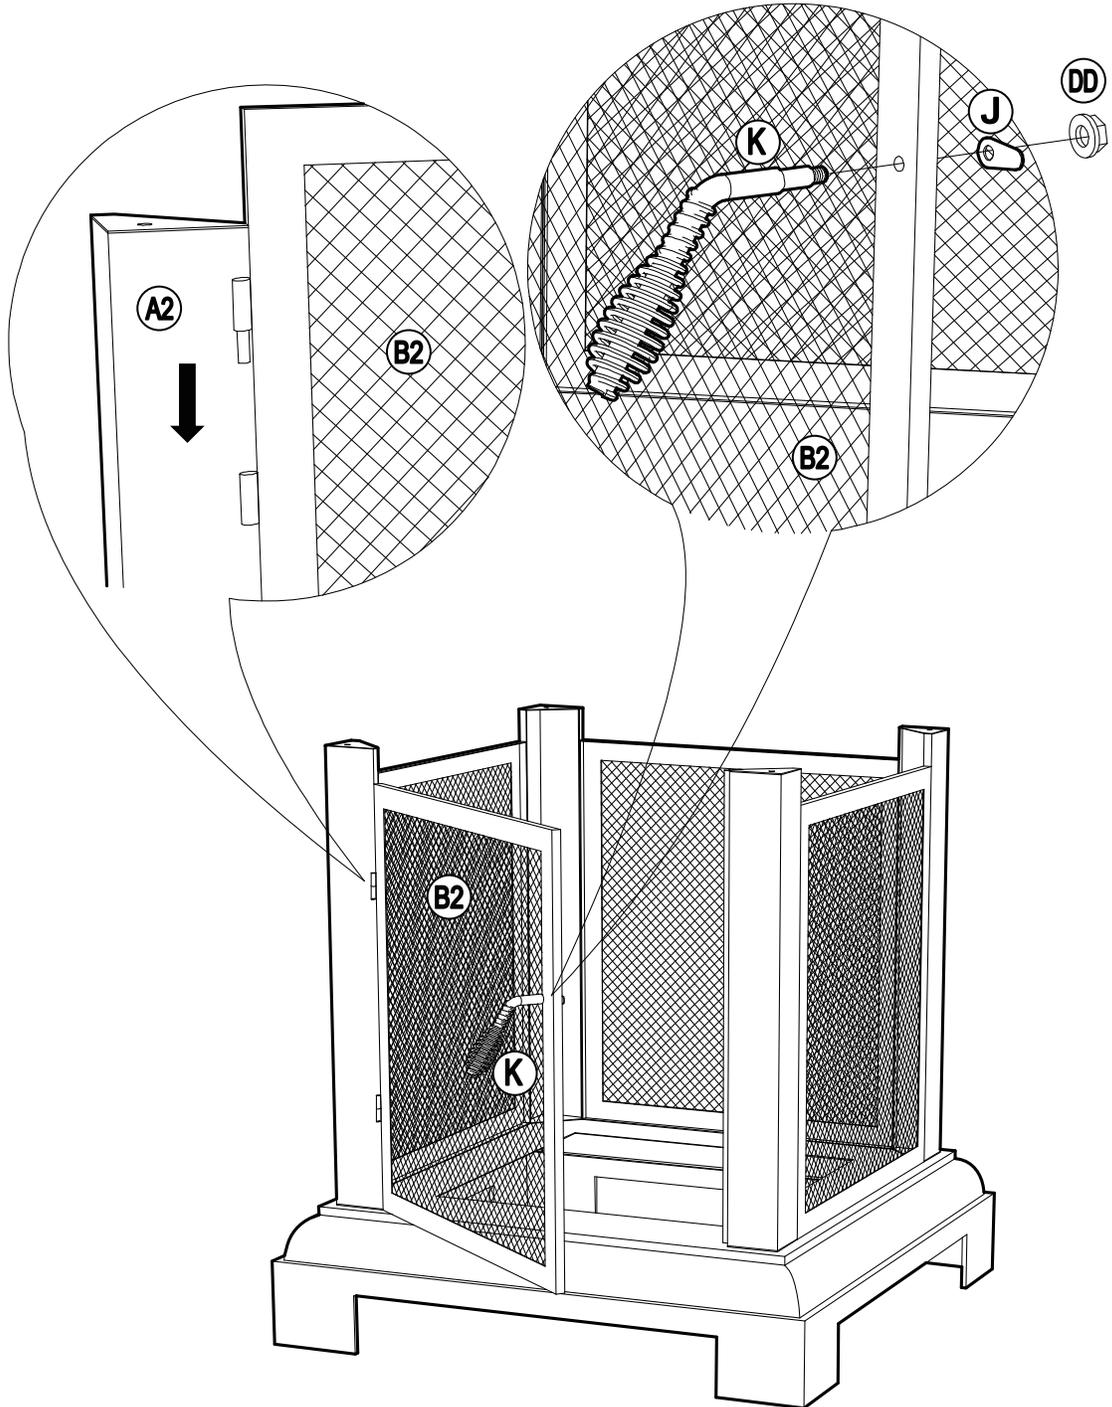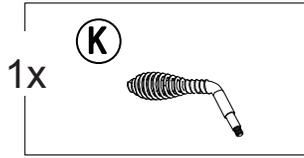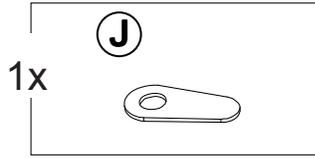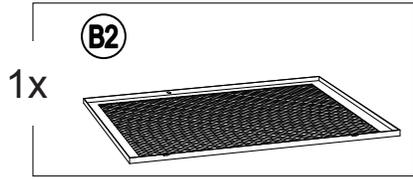

STEP 4: Assembly of Chimney and Chimney Top

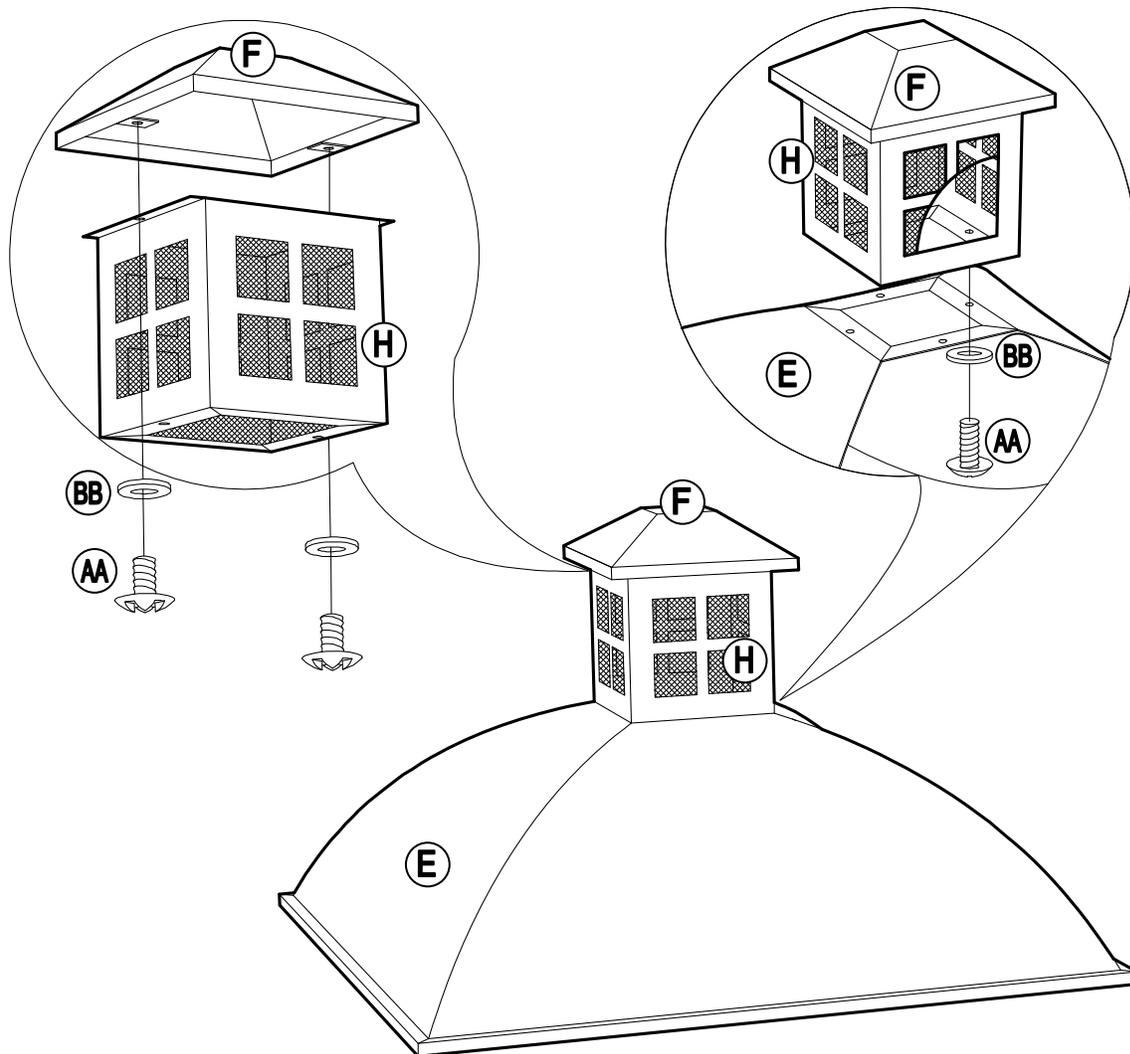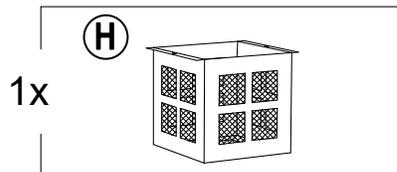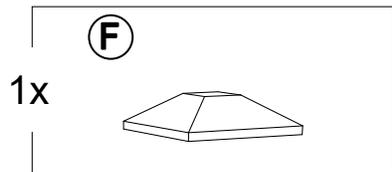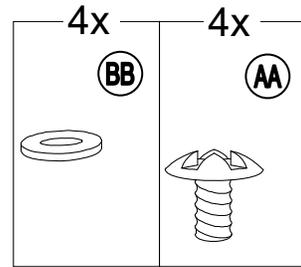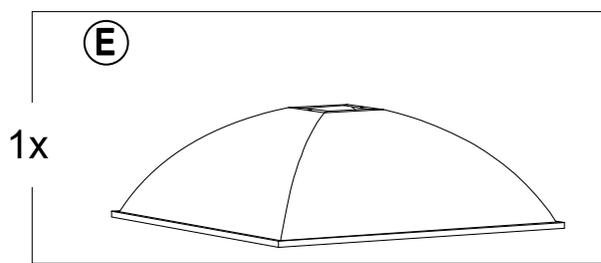

STEP 5: Assembly of Upper Base and Fire Bowl and Geate

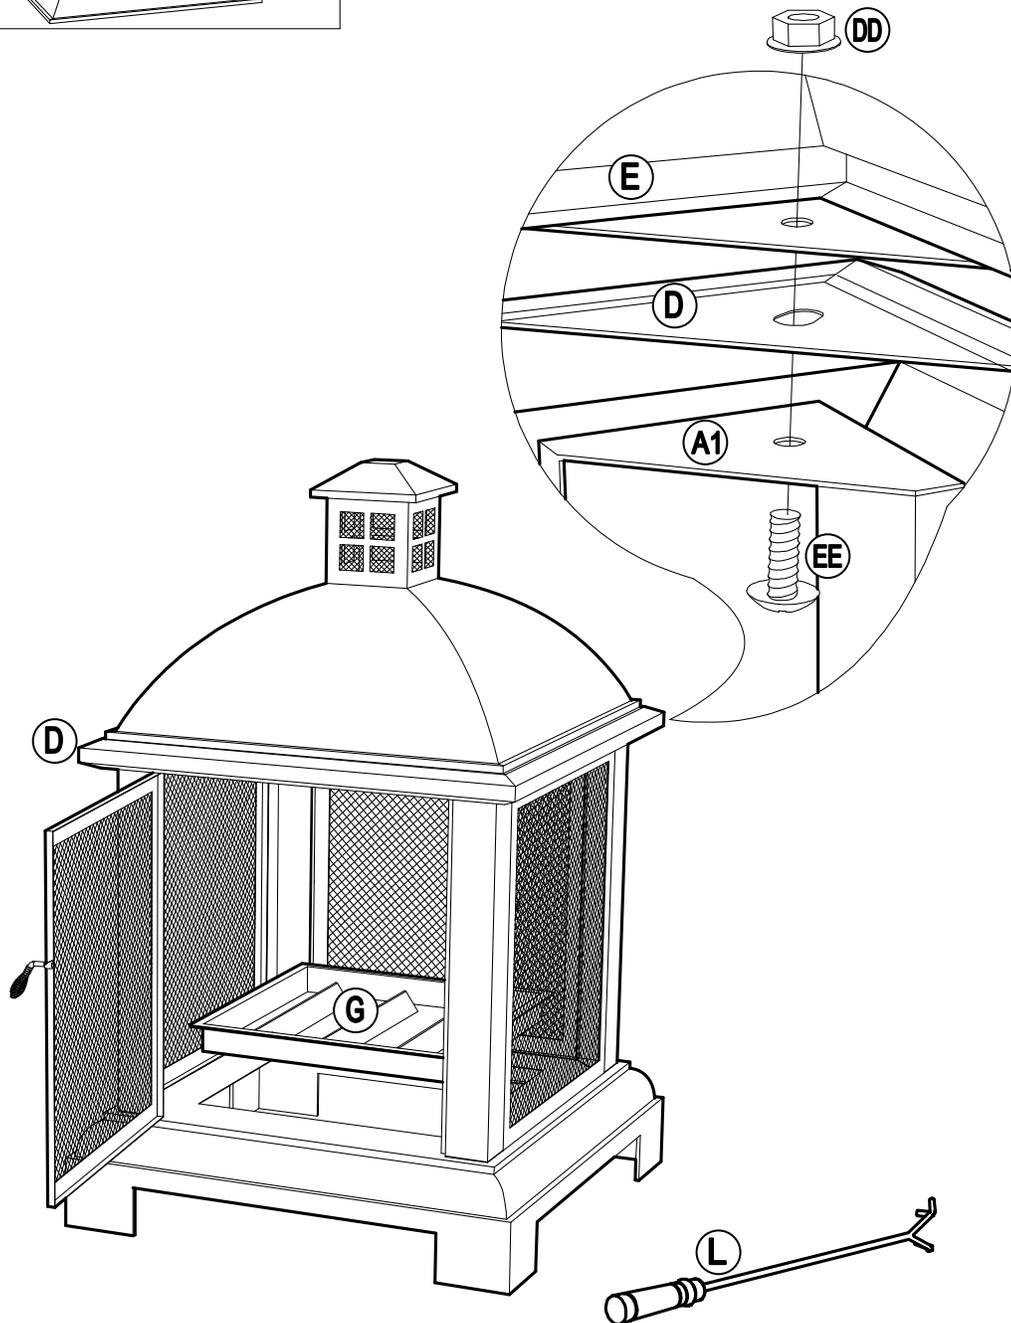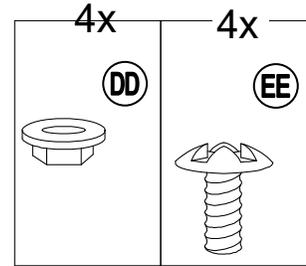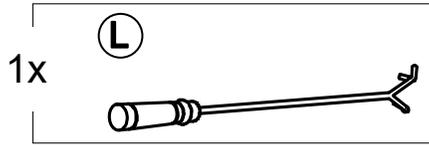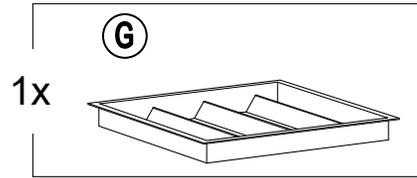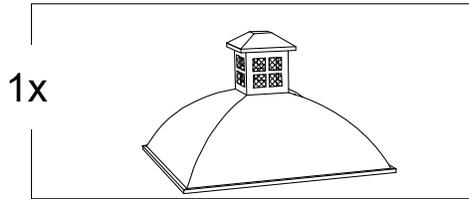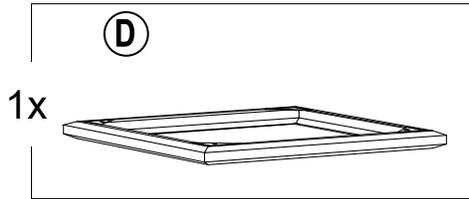



Caution!

- Check all screws and nuts periodically for tightness, fastening them again as required.

- Lighting
 - Make sure there is only a small amount of ash in the bottom of the bowl.
 - Place a layer of dry seasoned hardwood that covers no more than 3/4 of the bowl.
 - Use a match to light kindling or fire starter.
 - Use the poker that is provided to operate. Please wear heat-resistant gloves during use.
- Extinguishing
 - Allow fire to burn itself out.
 - DO NOT use water to extinguish as this is dangerous and can damage this fireplace.
- Cleaning
 - This fireplace should be cleaned on a regular basis to promote safer experience and long product life.
 - DO NOT attempt to clean this fireplace until the fire is COMPLETELY out and cool to touch.
 - DO NOT use oven cleaner or abrasive cleaner as this will damage the fireplace.
- Storage
 - DO NOT move or store this fireplace until the fire is COMPLETELY out and cool to touch.
 - Store the fireplace in a dry location to maximize product life.
 - Store assembled fireplace in a location away from children and pets.

Dimensions (L x W x H)

66 x 66 x 102 cm

25.98" x 25.98" x 40.16"

Product weight

15 kg

33.33 lb

Limited Manufacturer's Warranty

Sunjoy Industries warrants to the original purchaser that this item is free from defects in workmanship and materials for a period of six (6) months from the date of purchase, provided the item was factory-sealed at the time of purchase and is maintained with care and used only for personal, residential purposes. Should any manufacturing defect arise within this warranty period, Sunjoy Industries will repair or replace (at our option) any defective merchandise upon proof of purchase; however, transportation and delivery costs, as well as payments to a third party for assembly or disassembly of the item, remain the responsibility of the purchaser. A purchaser of an "open box," previously-returned, or "clearance" item, as well as original purchasers outside of the warranty period, may obtain replacement parts from Sunjoy Industries for products in current production, at nominal cost.

Exclusions:

Items used for commercial, contract, or other non-residential purposes, or items damaged due to acts of nature, vandalism, misuse, or improper assembly are not covered. Corrosion or rusting of hardware is not covered. Proof of purchase (dated register receipt) is required for warranty claims. Warranty is to the original purchaser and is non-transferable. Any replacement of warranted items will be in the original style and color, or a similar style and color if the original is unavailable or has been discontinued. As some states do not allow exclusions or limitations on an implied warranty, the above exclusions and limitations may not apply. This warranty gives you specific rights, and you may also have other rights, which vary from state to state.

Fuels used in wood or charcoal burning appliances, and the products of combustion of such fuels, contain chemicals known to cause cancer, birth defects or other reproductive harm.