




ASSEMBLY INSTRUCTIONS

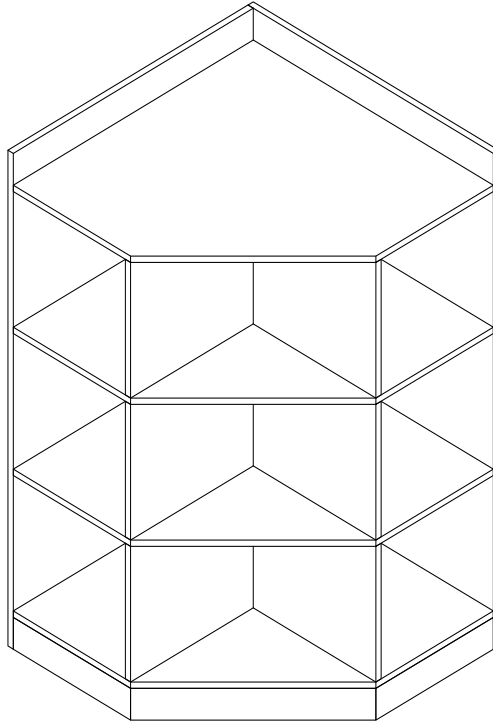

RiverRidge® Kids Corner Storage Cabinet with Cubbies and Shelves

ITEM #: 02-144 White

ITEM #: 02-145 Gray

ADULT ASSEMBLY REQUIRED

This product requires assembly by an adult because of small parts. Care should be taken in unpacking and assembling this item to keep small parts away from children. During assembly children should be kept away from the product due to possible risk of injury.

WARNING **SEE FULL WARNING ON PAGE 2**

Young children can be seriously injured or killed if furniture tips over. Don't use this item for a TV stand or place heavy objects on top of item. Always use angle-braces or anchors to secure furniture to the wall.

This product is suitable for children 3 years and older.

EACH CABINET WILL HOLD UP TO 20 POUNDS PER CUBBY, 10 POUNDS PER CORNER SHELF AND 25 POUNDS PER TOP SHELF OR A TOTAL OF 175 POUNDS. DO NOT LOAD EACH CUBBY WITH MORE THAN 20 POUNDS, EACH CORNER SHELF WITH MORE THAN 10 POUNDS AND THE TOP SHELF WITH MORE THAN 25 POUNDS. THIS MAY CAUSE DAMAGE TO THE CABINET AND MAY CAUSE SERIOUS INJURY OR DEATH.




WARNING



 
 

 

 
SERIOUS OR FATAL INJURIES CAN OCCUR FROM FURNITURE TIP-OVER. TO HELP PREVENT TIP-OVER:

- **Always use tip over restraints and/or wall anchors to secure furniture to the wall**
- **Place heaviest items in the lowest drawers/bins or shelves**
- **Do not set TV's or other heavy objects on the top of this product**
- **Never allow children to climb or hang on to the drawers/bins, doors or shelves of furniture**
- **Never open more than one drawer at a time or defeat or remove any drawer interlock system**

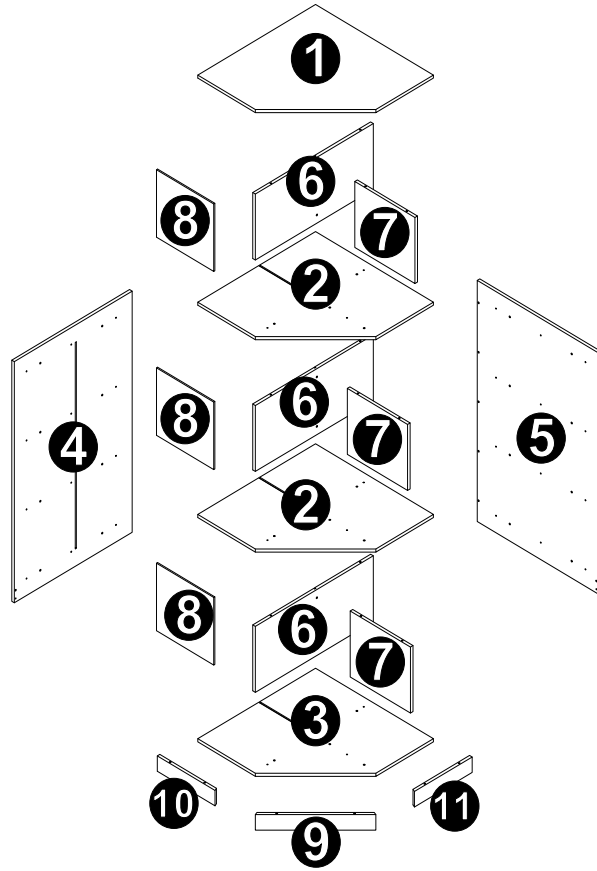PARTS LIST




NO	QTY	DESCRIPTION
1	1PC	Top Board
2	2PCS	Middle Shelf
3	1PC	Bottom Shelf
4	1PC	Left Side Panel
5	1PC	Right Side Panel
6	3PCS	Vertical Support Board
7	3PCS	Right Support Board
8	3PCS	Left Support Board
9	1PC	Middle Bottom Trim
10	1PC	Left Bottom Trim
11	1PC	Right Bottom Trim

NO	PARTS	QTY	DESCRIPTION
A		21PCS	Cam Bolt
B		21PCS	Cam Lock
C		41PCS	Wood Dowel
D		2PCS	Hinge
E		8PCS	Screw (3x10mm)
F		35PCS	Screw (4x35mm)
G		2PCS	Plastic Anchor
H		2PCS	Screw (4x45mm)

**TOOLS NEEDED FOR ASSEMBLY: FLAT & PHILLIPS SCREWDRIVER (NOT INCLUDED)
THE USE OF A POWER SCREWDRIVER IS NOT RECOMMENDED FOR ASSEMBLY
DO NOT USE ITEM IF ANY PARTS ARE MISSING OR DAMAGED**


To order replacement parts at no cost to you, email customer.service@ssi-rr.com, call 1-(844)-223-5201 or order parts online at www.riverridgehome.com. Only valid in the United States. If purchased outside of the United States, please contact retailer where purchased.

STEP 1

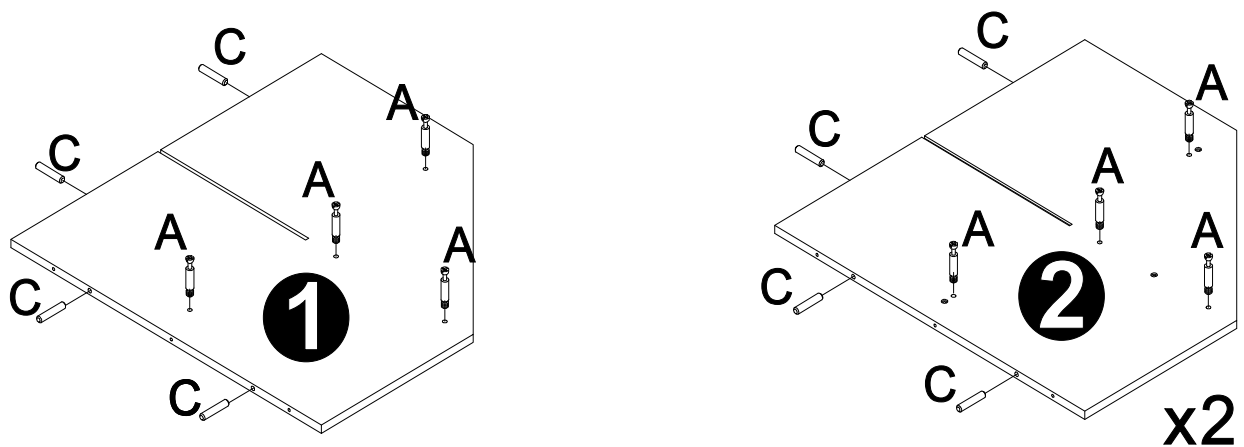



1. Screw 4 cam bolts (A) into cam bolt holes on top board (1).
2. Insert 4 wood dowels (C) into wood dowel holes on top board (1).
3. Screw 4 cam bolts (A) into cam bolt holes on middle shelf (2).
4. Insert 4 wood dowels (C) into wood dowel holes on middle shelf (2).
5. Repeat above steps for middle shelf (2).

STEP 2

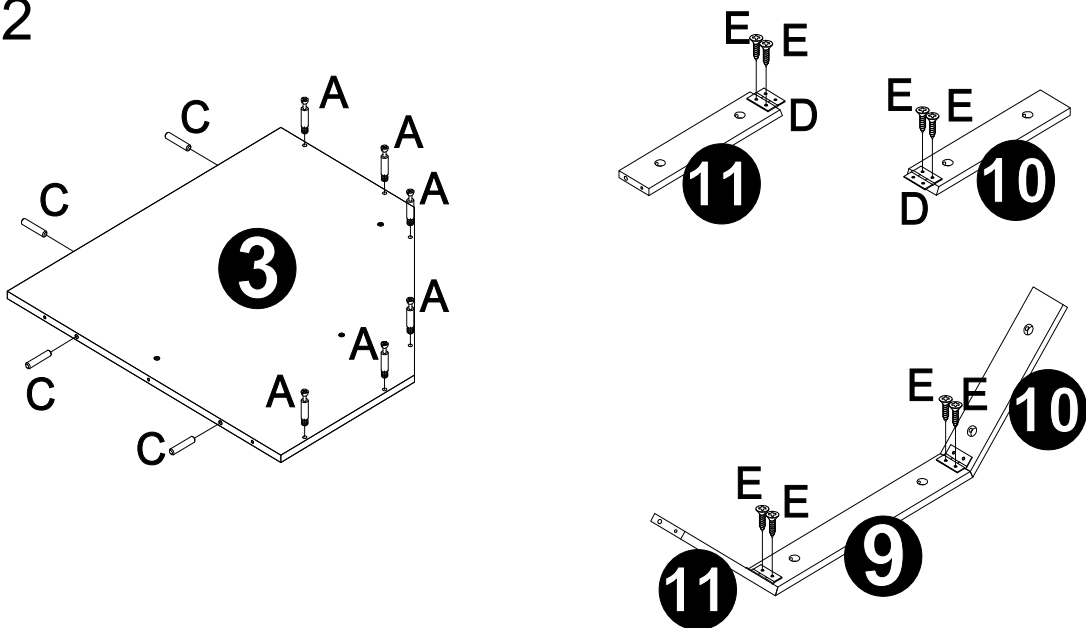



1. Screw 6 cam bolts (A) into cam bolt holes on bottom shelf (3).
2. Insert 4 wood dowels (C) into wood dowel holes on bottom shelf (3).
3. Attach 1 hinge (D) to left bottom trim (10) by inserting 2 screws (E) through holes on hinge (D) and tighten to left bottom trim (10).
4. Attach 1 hinge (D) to right bottom trim (11) by inserting 2 screws (E) through holes on hinge (D) and tighten to right bottom trim (11).
5. Attach left bottom trim (10) to middle bottom trim (9) by inserting 2 screws (E) through holes on hinge (D) and tighten to middle bottom trim (9).
6. Attach right bottom trim (11) to middle bottom trim (9) by inserting 2 screws (E) through holes on hinge (D) and tighten to middle bottom trim (9).

STEP 3

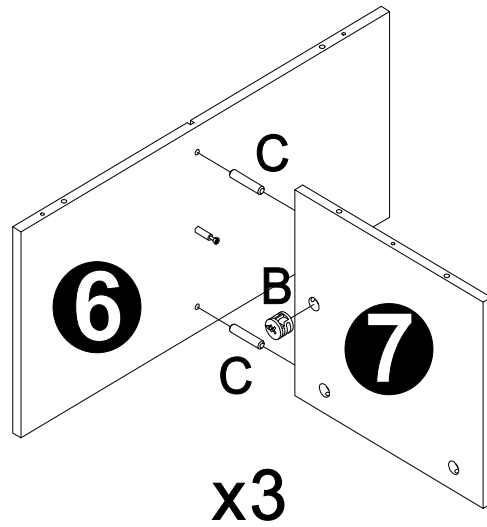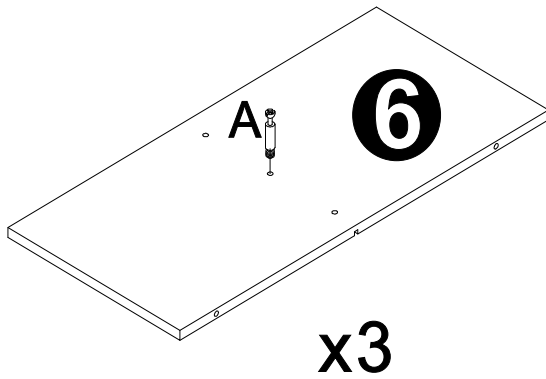


1. Screw 1 cam bolt (A) into cam bolt holes on vertical support board (6).
2. Repeat above step for other 2 vertical support boards (6).
3. Insert 2 wood dowels (C) into wood dowel holes on vertical support board (6).
4. Attach 1 right support board (7) to vertical support board (6) by inserting wood dowels (C) into wood dowel holes and inserting cam bolt (A) into cam lock hole on right support board (7).
5. Insert 1 cam lock (B) into cam lock hole on right support board (7) and rotate clockwise to secure cam bolt in place.
6. Repeat above steps to assemble 2 more right support boards (7) and vertical support boards (6).

STEP 4

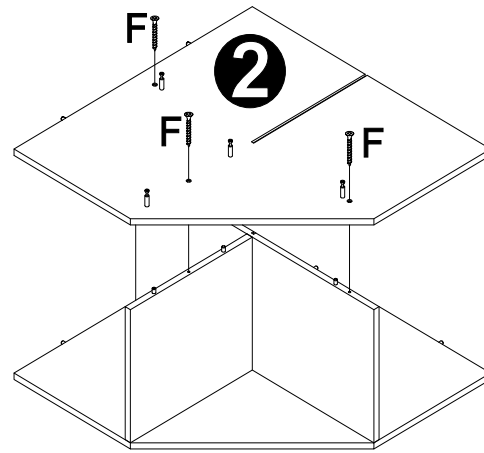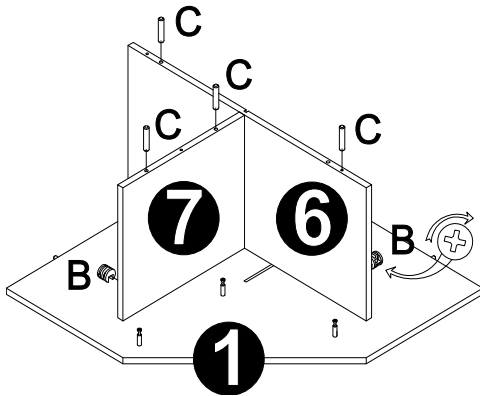


1. Attach vertical support board (6) and right support board (7) to top board (1) by inserting cam bolts (A) into cam lock holes on vertical support board (6) and right support board (7).
2. Insert 4 cam locks (B) into cam lock holes on vertical support board (6) and right support board (7) and rotate clockwise to secure cam bolts in place.
3. Insert 4 wood dowels (C) into wood dowel holes on vertical support board (6) and right support board (7).
4. Attach 1 middle shelf (2) to vertical support board (6) and right support board (7) by inserting wood dowels (C) into wood dowel holes on middle shelf (2).
5. Insert 3 screws (F) through holes on middle shelf (2) and tighten to vertical support board (6) and right support board (7).

STEP 5

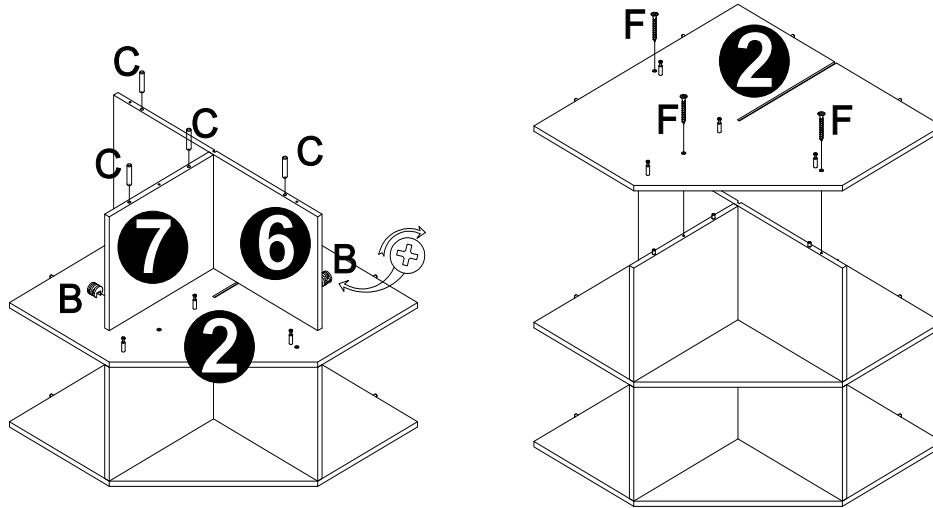


1. Attach vertical support board (6) and right support board (7) to middle shelf (2) by inserting cam bolts (A) into cam lock holes on vertical support board (6) and right support board (7).
2. Insert 4 cam locks (B) into cam lock holes on vertical support board (6) and right support board (7) and rotate clockwise to secure cam bolts in place.
3. Insert 4 wood dowels (C) into wood dowel holes on vertical support board (6) and right support board (7).
4. Attach 1 middle shelf (2) to vertical support board (6) and right support board (7) by inserting wood dowels (C) into wood dowel holes on middle shelf (2).
5. Insert 3 screws (F) through holes on middle shelf (2) and tighten to vertical support board (6) and right support board (7).

STEP 6

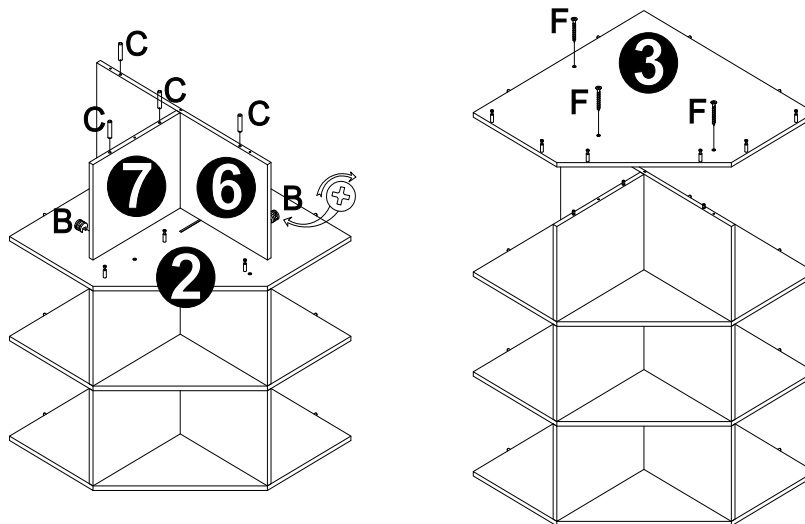


1. Attach vertical support board (6) and right support board (7) to middle shelf (2) by inserting cam bolts (A) into cam lock holes on vertical support board (6) and right support board (7).
2. Insert 4 cam locks (B) into cam lock holes on vertical support board (6) and right support board (7) and rotate clockwise to secure cam bolts in place.
3. Insert 4 wood dowels (C) into wood dowel holes on vertical support board (6) and right support board (7).
4. Attach 1 bottom shelf (3) to vertical support board (6) and right support board (7) by inserting wood dowels (C) into wood dowel holes on bottom shelf (3).
5. Insert 3 screws (F) through holes on bottom shelf (3) and tighten to vertical support board (6) and right support board (7).

STEP 7

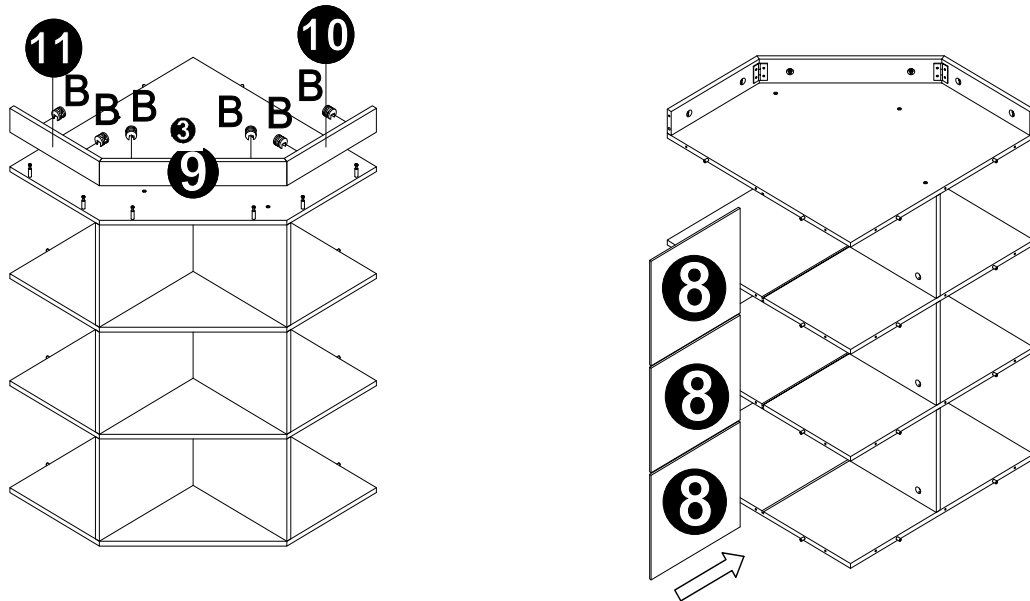


1. Attach left bottom trim (10), middle bottom trim (9) and right bottom trim (11) to bottom shelf (3) by inserting cam bolts (A) into cam lock holes on left bottom trim (10), middle bottom trim (9) and right bottom trim (11).
2. Insert 6 cam locks (B) into cam lock holes on left bottom trim (10), middle bottom trim (9) and right bottom trim (11) and rotate clockwise to secure cam bolts in place.
3. Slide 3 left horizontal support boards (8) into grooves on top board (1), middle shelf (2) and bottom shelf (3).

STEP 8

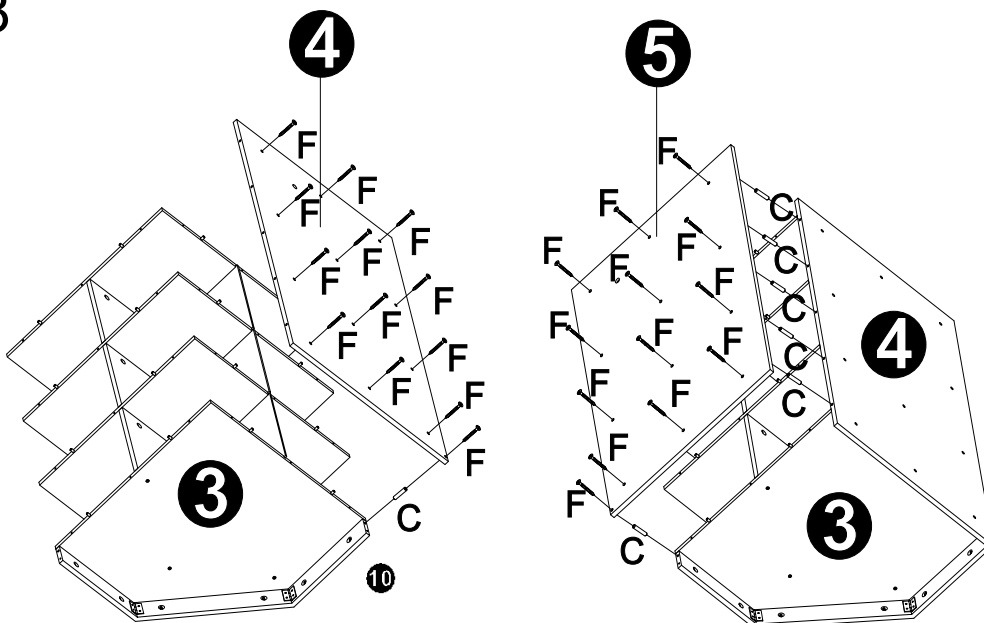


1. Insert 1 wood dowel (C) into wood dowel hole on left bottom trim (10).
2. Attach left side panel (4) to pre-assembled unit by inserting wood dowel (C) into wood dowel hole on left side panel (4) and inserting 13 screws (F) through holes on left side panel (4) and tighten to top board (1), middle shelf (2), bottom shelf (3) and left bottom trim (10).
3. Insert 5 wood dowels (C) into wood dowel holes on left side panel (4).
4. Repeat above steps 1-2 to assemble right side panel (5) to pre-assembled unit.



STEP 9

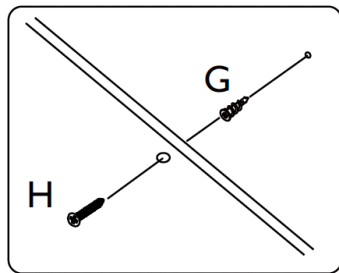

OPTION #1

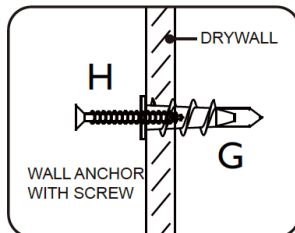

OPTION #2

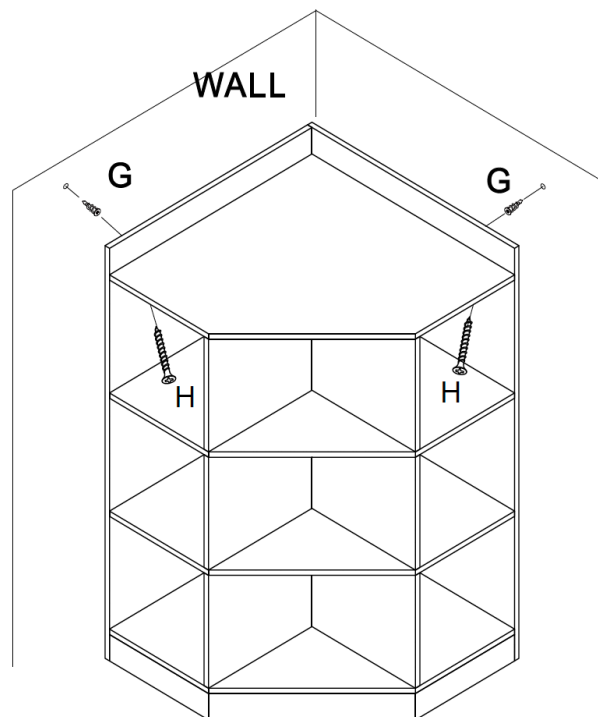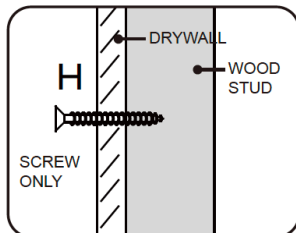

Option #1: Securing to Drywall

1. Position cabinet against wall in desired location. Using a pencil, make small marks on wall through holes on side panels. Move cabinet away from wall and screw 2 plastic anchors (G) into wall on pencil marks.
2. Place cabinet against wall, insert 2 screws (H) through holes on side panels, then tighten to plastic anchors (G).

Option #2: Securing to Drywall and Wood Stud

1. Position cabinet against wall in desired location. Insert 2 screws (H) through holes on side panels, then tighten through drywall and into wood stud.

ATTENTION ADULTS: Cabinet should be checked periodically for damage or loose screws/parts. Take appropriate action necessary to correct hazards such as tightening of screws and taking any damaged parts away from children.


WARNING  Please make sure your item is secured to the wall, per assembly instructions.

CARE INSTRUCTIONS:

Wipe clean with a water dampened cloth. Wipe dry with clean cloth.

IMPORTANT:
Keep assembly instructions for future reference.

Enjoy your new RiverRidge® Cabinet!

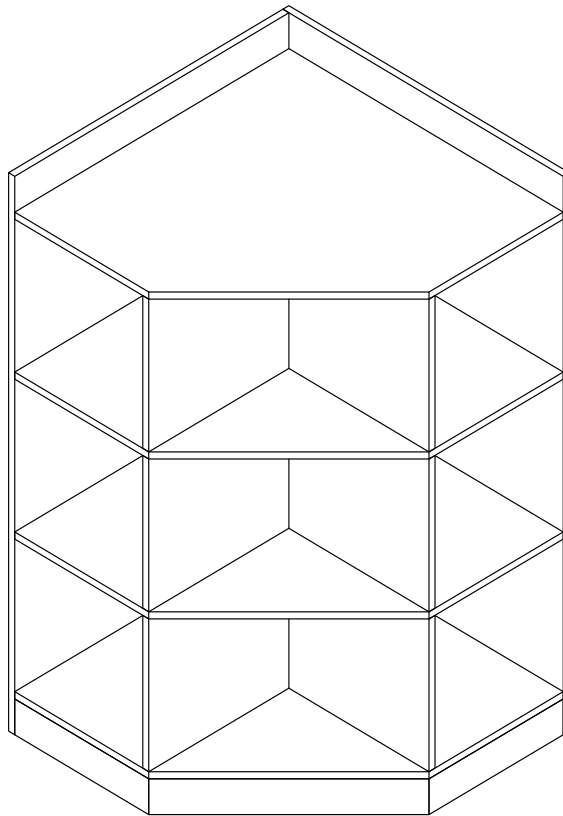

Thank you for purchasing this RiverRidge® Home item. We hope you enjoy it and consider purchasing other RiverRidge® items.

To order replacement parts at no cost to you, email customer.service@ssi-rr.com, call 1-(844)-223-5201 or order parts online at www.riverridgehome.com. Only valid in the United States. If purchased outside of the United States, please contact retailer where purchased.



RiverRidge® is a registered trademark of Sourcing Solutions, Inc., Hudson, WI 54016