 




LED LIGHTED TOURNAMENT BAG TOSS INSTRUCTION MANUAL

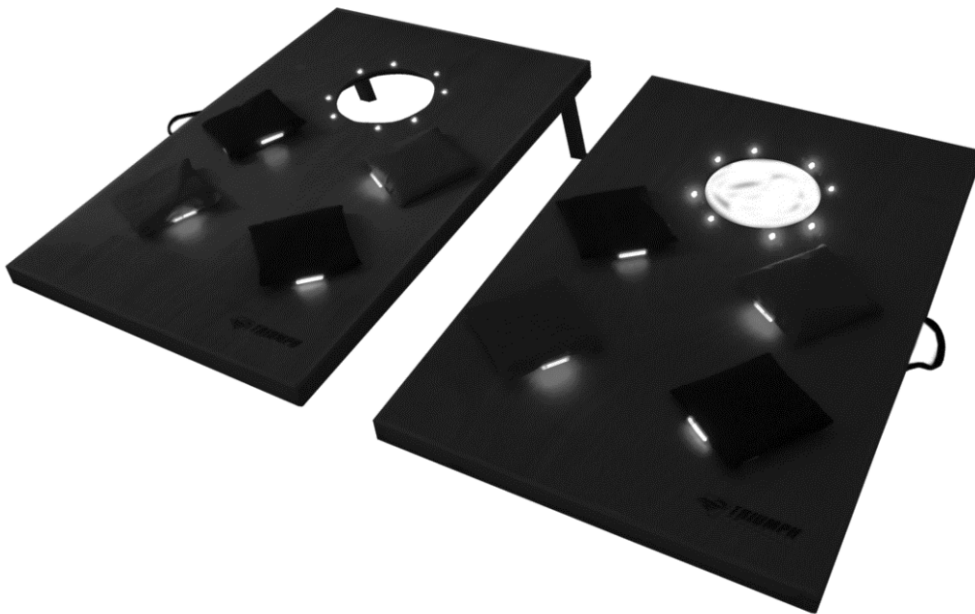

PLEASE KEEP THIS INSTRUCTION MANUAL FOR FUTURE REFERENCE

If you have any concerns with your product please visit our website www.escaladesports.com for fastest service. Please have a copy of your receipt of purchase. For any technical support or warranty issues please contact Escalade Sports at 1-800-467-1421 or e-mail us at customerservice@escaladesports.com

Limited 90-Day Escalade Sports Warranty

All Escalade Sports games have a limited 90-day from date of purchase warranty. This warrants the retail purchaser for any Escalade Sports game purchased to be free from any defect in materials and construction for 90 days from the date of purchase. The only exceptions to the warranty include main frames, tabletops, playing surfaces, batteries or tools. Damaged main frames, tabletops, playing surfaces need to be returned to the store as we are unable to replace these parts. Normal play wear and usage is not covered under the warranty, nor is wear or damage due to improper use of the Escalade Sports game. This will void any and all Escalade Sports warranties.

A PURCHASE RECEIPT (or other proof of purchase date) will be required before any warranty service is initiated. All requests for warranty service can be submitted by email, in writing or by contacting our Customer Service Department at: 1-800-467-1421 or email us at customerservice@escaladesports.com

IMPORTANT NOTICE! Please contact us before returning the product to the store.

Warnings



WARNING: Do not attempt to service the electronics contained in this product yourself. Opening or removing any electrical covers could expose you to chemicals.

Not for use by children without adult supervision. This is not a child's toy. Adult supervision is required for children playing this game. Please read instructions carefully.

Be sure to check out all the exciting a games has to offer. Visit our web site at:



www.escaladesports.com

www.triumphsportsusa.com



BILLIARDS



DARTS



GAME TABLES



CASINO



 


OUTDOOR GAMES



DARTBOARDS

Escalade Sports
817 Maxwell Avenue
Evansville, IN 47711
1-800-467-1421
www.escaladesports.com

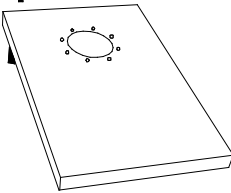Parts List

<p>#1</p>  <p>Lighted Game Board 2 pcs</p>	<p>#2</p>  <p>Red Bean Bag (with red mini glow stick) 4 pcs</p>	<p>#3</p>  <p>Blue Bean Bag (with blue mini glow stick) 4 pcs</p>	
--	---	---	--

First Time Battery Installation:

Locate battery compartment for this product .

Use alkaline batteries for maximum performance .

Using a small Phillips head screwdriver – loosen and remove the battery compartment cover screw(s).

Remove battery compartment cover .

Install new batteries only after reading the “ Battery Information NOTICE“ !

Replace compartment cover and secure cover with the cover screw . Do not over tighten and strip out the screw .

IMPORTANT: BATTERY INFORMATION

Please retain this information for future reference. Batteries must be installed / replaced by an adult .

Notice:

1. Remove and replace batteries when the electrical features of this product work slowly or are not functional .
2. Do not mix old and new batteries .
3. Do not mix different types of batteries : Alkaline , Standard (Carbon-Zinc) , or rechargeable (Nickel-Cadmium batteries) .
4. Use Alkaline Batteries for maximum performance .
5. Do not use damaged batteries .
6. Use only batteries of the same or equivalent type as recommended.
7. Install new batteries as per matching the battery polarity guide (+ & - , positive and negative) inside of the battery compartment . Correct battery polarity installation is critical as to not damage the internal electrical components as well as insuring the correct functionality of the product .
8. Do not short circuit the battery terminals .
9. Always remove exhausted , leaking , weak , and batteries from long periods of nonuse from the product . Battery leakage and corrosion can cause damage .
10. Check the battery terminals are clean and bright before installing new batteries.
11. Dispose of old batteries safely and per local battery disposal codes .
12. Do not dispose of batteries into a fire as they may explode or leak.
13. If removable rechargeable batteries are used , they are to be charged under adult supervision .
14. Rechargeable batteries are to be removed from the product before they are charged .
15. If you use a battery charger, it should be examined regularly for damage to the cord , plug, enclosure, and other parts. Do not use a damaged or malfunctioning charger until it is properly repaired.
16. Non rechargeable batteries must not be recharged .
17. Always remove batteries from this product for extended storage and or non-use .
18. Should this product cause , or be affected by, local electrical interference , move it away from other electrical equipment . Reset (switching off and back on again and or removing and reinserting the batteries) if necessary .

Assembly Instructions

FIG.1 Place the Bean Bag Board face down on the ground.

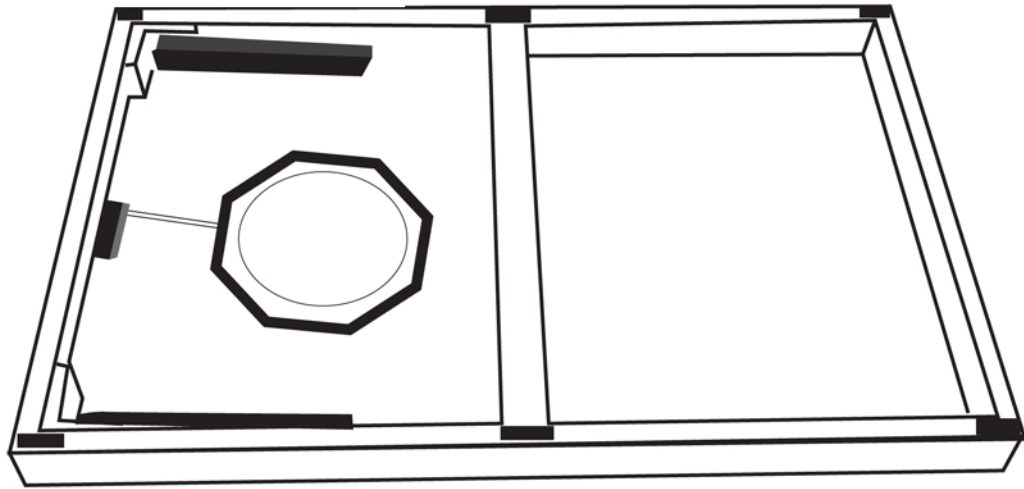 

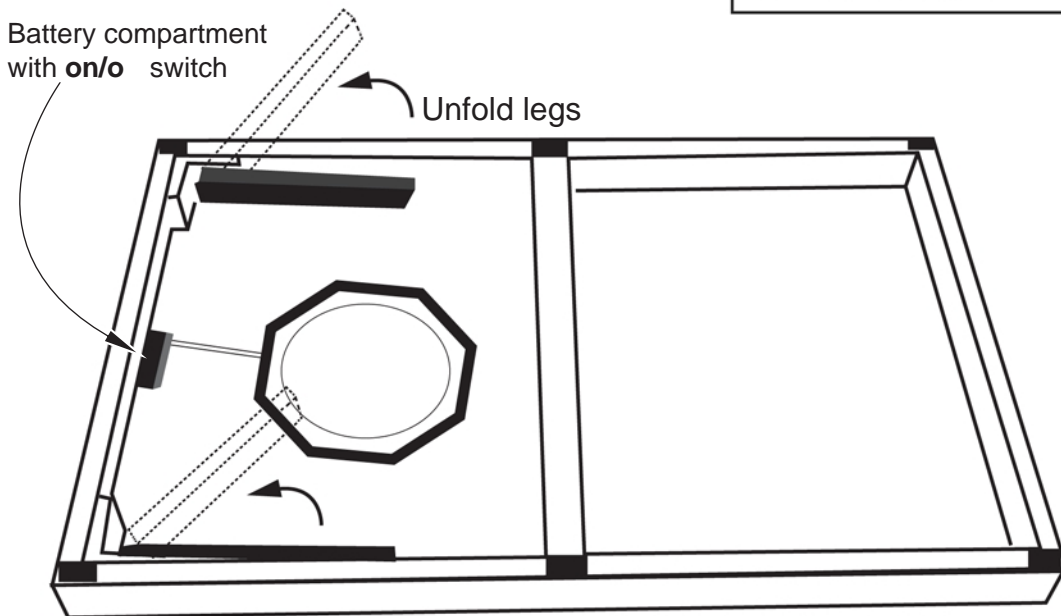 


FIG.2 Insert a 9V battery into the battery compartment to power on the LEDs when playing at night (battery not included). See “Battery Installation procedure” on **page 3** before installing the batteries.

 **WARNING:**
DO NOT INSTALL BATTERY BACKWARDS,
CHARGE, OR DISPOSE OF IN FIRE. BATTERY
MAY EXPLODE OR LEAK.



Glow Stick Instructions

HANDLE WITH CARE: Handle the glow sticks carefully to avoid accidental activation. Keep glow sticks in the package and store in a cool, dry place until ready to use. Remove gently from the bean bag before use.

CAUTION: Do not puncture or cut glow sticks. Ingredients are non-toxic and non-flammable, but may permanently stain fabrics or furniture. Contact with skin or eyes may cause temporary discomfort. In case of skin or eye contact, rinse thoroughly with water. Do not drink or ingest glow sticks or their contents. Do not bend glow sticks after activation. Do not leave glow sticks in direct sunlight or expose to high temperatures. Contains small parts; not suitable for children under 3 years of age. Dispose of glow sticks properly after use.

To activate a glow stick, bend along the entire length of the stick and shake. It may take a few minutes to glow completely.

FIG.3 Glow sticks

IMPORTANT: Bend along the entire length of the glow stick and shake before re-inserting it into the bean bag for glow effect. Glows 6-8 hours.



Step 1: Remove mini glow stick from the side of the bean bag.



Step 2: Bend the glow stick

 
 
Step 3: Shake the glow stick



Step 4: Slide the mini glow stick back into the side of the bean bag for night play.

NOTE: The light stick “glow” expectancy is approximately 6 hours. Light sticks can be discarded after glow life.

FIG.4 Turn the board right-side-up, and YOU ARE NOW READY TO PLAY.

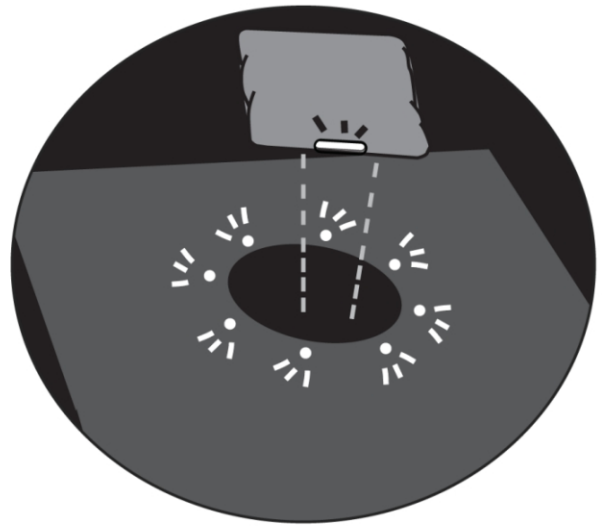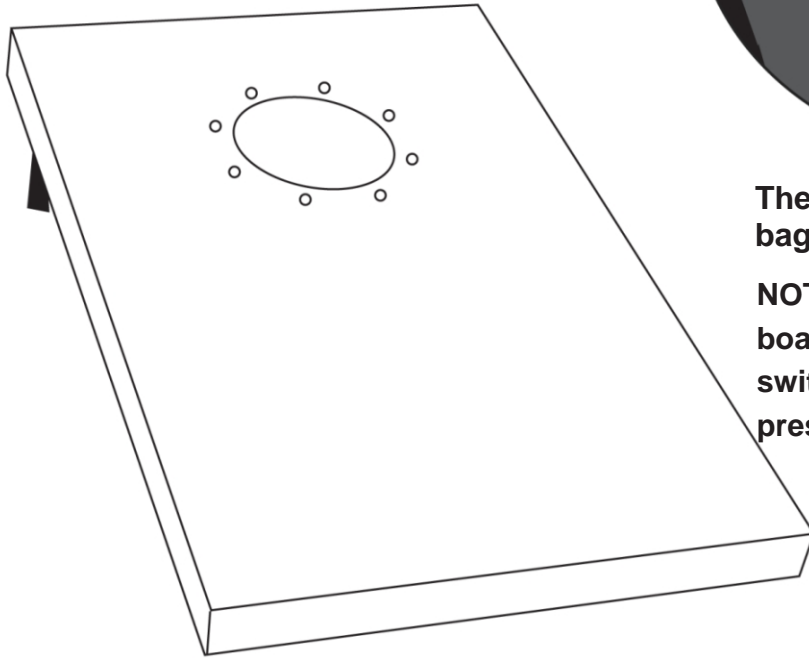

The LED light flashes when the bean bag hits through the target hole.

NOTE: Battery compartment underneath board has an on/o switch. Please switch o when not in use to preserve the battery.

Game Rules



Bag Toss 2 to 8 players

Preparation: Set boards 15 feet apart.

Game Rules:

Each team has 4 Bean Bags. Players should alternate throws during their team's turn.

Hint: You can knock your opponent's Bean Bags off the board.

A bag thrown through the hole earns 3 points. A bag that lands on the board earns 1 point. Subtract the low score from the high score for each round of play. For example: Team A has 1 bag in the hole and 2 bags on the board, for a score of 5 points. Team B has two bags on the board, for a score of 2 points. Team A (5 points) – Team B (2 points) = Team A (3 points). Team A receives 3 points for that round of play.

Game is played until one team scores 21 points. A team can win by a white wash which is 11 - 0. A white wash can not occur in the first half of the first round. (All 4 bags in the hole by player 1 of team 1 and only 1 point or zero points by player 1 of team 2.)

A bag that is tossed in play and knocks another bag off or in the hole is legal.

A bag that bounces from the ground onto the board is not a legal play. This bag must be removed from the board and play is then continued.