

FILTER CHANGE INSTRUCTIONS

How To Replace Stages 1, 2, 3 Filters:

- 1) Turn OFF cold water supply to system. Lift up faucet lever briefly to relief the built-up pressure inside the system. This will make opening the housings easier.
- 2) Open housing: Have the System standing upright. Slip the plastic wrench onto the #1 housing. Looking down from a top view, you should open the housing turning **clockwise**. If necessary, lay System down on the floor to get a better leverage. If the housing is too tight, use a hammer and tap on the wrench handle to help turn the wrench.
- 3) Discard 3 used filters, wash housings with mild soap, rinse off. Put 3 new filters into their respective housings: sediment filter in stage-1, carbon block filters in stages 2 & 3.
- 4) Close up the housings. Make sure each housing has a **black O-ring** in the thread grooves. Use wrench to tighten each housing.
- 5) **Remember: Turn ON the cold water supply after finished changing filters!**
- 6) **Check for leaks!**



Fig. 10