


USE AND CARE GUIDE

TWO TONE END TABLE WITH 1 DRAWER AND SHELF

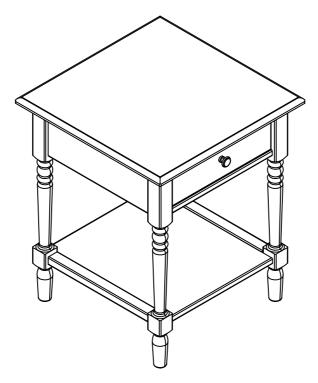

Questions, problems, missing parts?

Before returning to the store, call Customer Service.

8 a.m. - 7 p.m., EST, Monday - Friday, 9 a.m. - 6 p.m., EST, Saturday

1-877-527-0313

HOMEDEPOT.COM

THANK YOU

Table of Contents

Table of Contents	2
Safety Information	
Warranty	2
1 Year Warranty	2
What is Covered	2
What is Not Covered	2
Pre-assembly	3
Planning Assembly	3

Tools Required	3
Hardware Included	
Pre-assembly (continued)	4
Package Contents	4
Assembly	5
Maintenance	12
Care and Cleaning	12

Safety Information



DANGER

- Keep small parts away from children during assembly.
- Read and follow instructions carefully.



WARNING

- TO GUARANTEE THE SAFE USE OF THIS PRODUCT, FOLLOW THE WARNINGS, GUIDELINES AND RECOMMENDATIONS IN THIS MANUAL
- Adult assembly required.
- Small parts may present choking hazard prior to assembly.



CAUTION

- Do not use power tools to assemble your furniture. Power tools may strip or damage parts/product.
- Do not overtighten connectors (screws, bolts, etc.).
 Overtightening can lead to product damage.
- Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment. If parts are missing, contact THE HOME DEPOT to obtain any missing parts.
- DO NOT USE SUBSTITUTE PARTS.
- This product should only be used on a flat, level surface.
- Some assembly may involve attaching glass or mirrors.
- Be very careful handling the glass or mirrors, as severe injury may result if the glass or mirror breaks.
- □ Never handle large pieces ofglass or mirrors by yourself.
- Assembly requires two people; assembly alone may cause injury.

Warranty

1 YEAR WARRANTY

WHAT IS COVERED

We guarantee this product to be free of manufacturing defects to the original purchaser for one year.

WHAT IS NOT COVERED

This warranty does not cover commercial use, acts of nature, and abusive use.

Pre-assembly


PLANNING ASSEMBLY

- Remove all Packaging materials , staples and packing straps form the carton .
- $\, \square \,$ Refer to Parts List and Hardware List , and $\,$ ensure parts and hardware are correct before assembly .
- Contact customer service for missing parts .
- Place all wooden parts on a clean , flat , and soft surface (e.g. carpet or rug) to prevent scratch and damage to parts .

TOOLS REQUIRED




HARDWARE INCLUDED

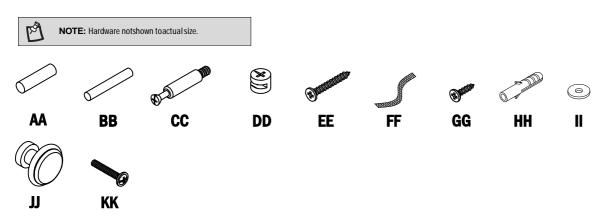

Part	Description	Quantity
AA	Wooden dowel Ø8*30MM	14
BB	Wooden dowel Ø6*40MM	4
CC	Cam bolt	24
DD	Cam lock	24
EE	Screw Ø3.5*30MM	5
FF	Strap	1
GG	Screw Ø3.5*15MM	1
НН	Wall anchor	1
II	Washer	2
IJ	Knob	1
KK	Screw	1

Pre-assembly (continued)


PACKAGE CONTENTS

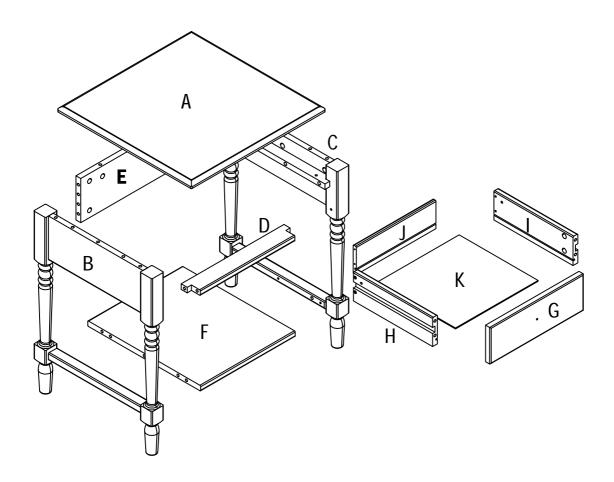


Part	Description	Quantity
Α	Table top	1
В	Left side panel	1
С	Right side panel	1
D	Front tie-bar	1
E	Back panel	1
F	Bottom panel	1
G	Drawer front panel	1
Н	Drawer left side panel	1
I	Drawer right side panel	1
J	Drawer back panel	1
K	Drawer bottom panel	1

Assembly


Locked cam bolt(CC) and attached wooden dowel(AA) to left and right side panel (B&C) as shown

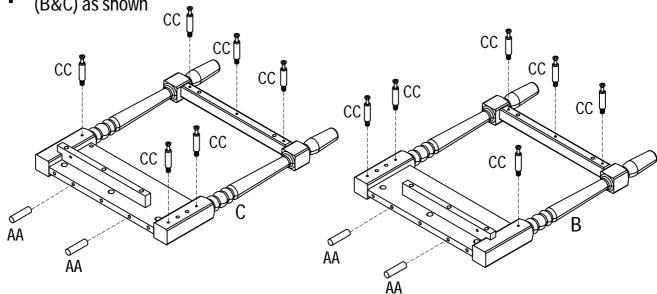


2 Locked cam bolt(CC) to drawer front panel(G) and table top panel(A) as shown

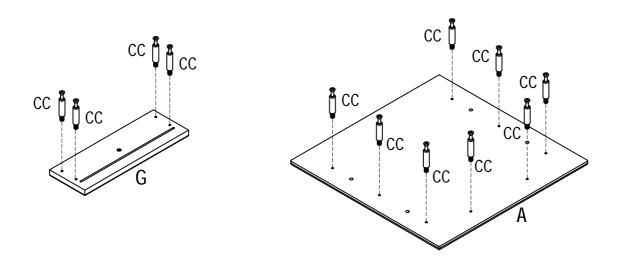


3 Attached wooden dowel(AA) to front tie-bar(D),back panel(E) and bottom panel(F), then locked strap(FF) to back panel with screw(GG) and washer(II) as shown

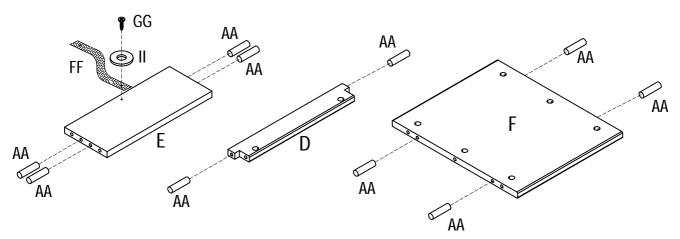


4 Connect back panel(E) to right side panel(C) with cam lock(DD)

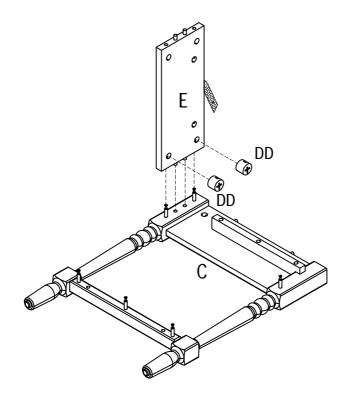


5 Connect front tie-bar panel(D) with cam lock(DD) from step 4

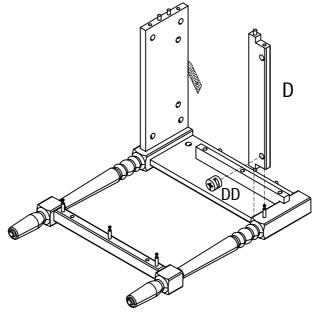


6 Connect bottom panel(F) with screw(DD) from step 5

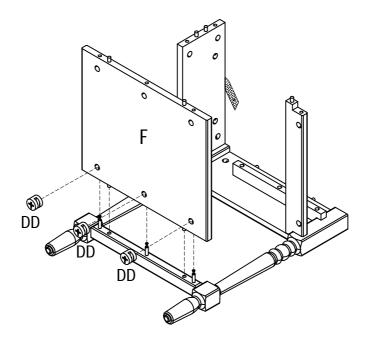


7 Connect left side panel(B) with cam lock(DD) from step 6

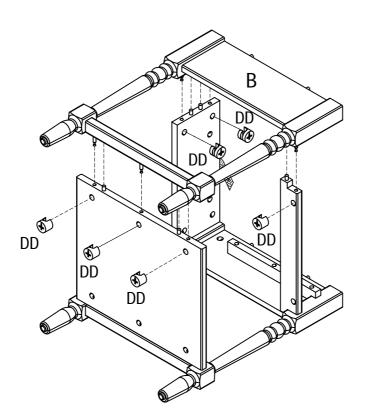


8 Connect table top panel(A) with cam lock(DD) from step 7

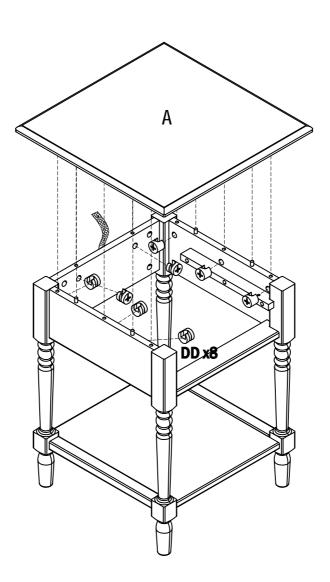

Locked cam bolt to drawer front panel(G),connect drawer left and right side panel (I&H) with cam lock(DD), then insert drawer bottom panel(K),locked drawer back panel (J) with screw (EE),assembly knob (JJ) with screw (KK) as shown

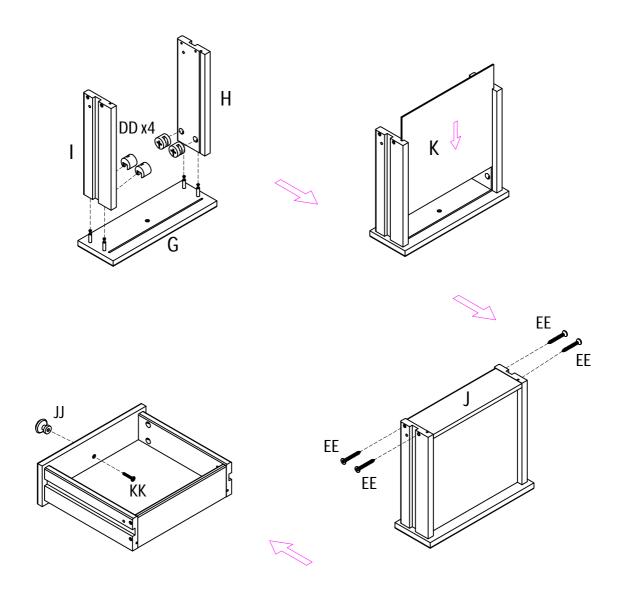

 $10^{\rm Attached\ wooden\ dowel(BB)\ to\ prevent\ drawer\ from\ shpping\ out,} \\ {\rm locked\ strap\ to\ the\ wall\ with\ screw(EE), washer(II)} \\ {\rm and\ wall\ anchor(HH)\ as\ shown}$

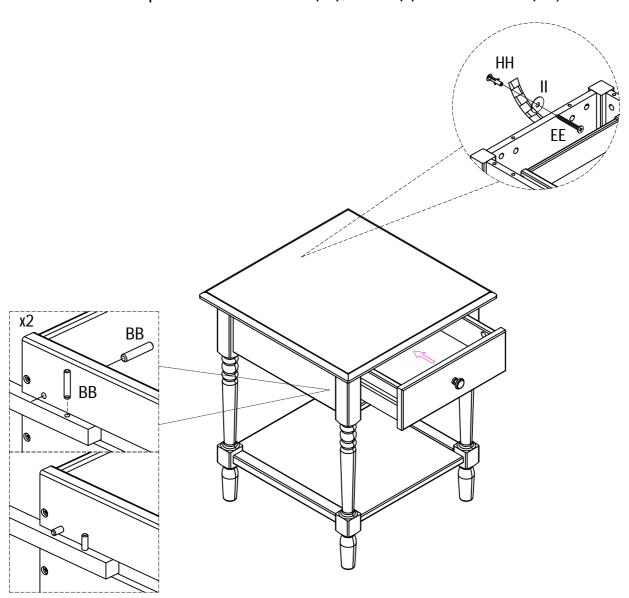

Ma	aintenance	
	Keep the product away from direct heat and sunlight. Prolonged exposure to heat sources may cause scorching, or even cause color to fade. Regular vacuuming or light brushing helps to remove dirt and prevent soil build-up, which increases the appearance of wear. Periodically (every 90 days) make sure that the screws arefully tightened.	
Ca	re and Cleaning	
 Handle with care. Use a slightly damp cloth to clean the product. Do not use bleach or use abrasive cleaning material. Check all the fittings periodically and re-tighten as necessary. Do not us the product if any of the parts are damaged or broken. Never allow any kind of liquid to remain on your furniture. Absorption can make wood wrap or delaminate. Do not place hot items (e.g. hot drinks) directly onto the wood surface. Do not drag and /or pull the furniture. Never use harsh chemicals or solvents on your product as this may damage the metal. Marks and stains from pens, crayons and ink markers are difficult to remove. In the event that your products become permanently stained we recommend that you consult a professional. 		

StyleWell.

Questions, problems, missing parts?

Before returning to the store, call Customer Service
8 a.m. - 7 p.m., EST, Monday - Friday, 9 a.m. - 6 p.m., EST, Saturday

1-877-527-0313

HOMEDEPOT.COM

Retain this manual for future use.