Item# 1000-015-592 ٦R DEFIANT

USE AND CARE GUIDE

INDOOR AUTO SHUT OFF SPRING-WOUND TIMER

OFF

60

50 -

TURN

10

 
~20

Ter

Safety Information

This timer fits in any standard 2-1/2 in. deep wall box. The timer fits both toggle and rocker/ decorator wall plates in a single or multi-gang vertically installed wire box. If you are unsure about the installation of this timer please contact a licensed electrician.

- WARNING: RISK OF FLECTRIC SHOCK Installation by a licensed electrician is recommended.
- Installation and use of this equipment should be in accordance with
- provisions of the U.S. national electrical code, applicable local codes /!\ and nertinent industry standards
 - Shut off power at the fuse box or circuit breaker before installation. Do not use in wet locations.
- For indoor use only unless installed in a NEMA Type 3R enclosure.



- Do not use to control a receptacle. ⚠
- Do not exceed electrical ratings.
- Do not use to control appliances with heating elements (cooking appliances, heaters, irons, etc.).

Specifications 125 Vac, 50/60 Hz, 20 A Res./Gen., 7 A Tungsten, 1 HP

250 Vac, 50/60 Hz, 10 A Res./Gen., 2 HP



277 Vac. 50/60 Hz. 10 A Res./Gen

HARDWARE INCLUDED

PRODUCT DESCRIPTION




THANK YOU We appreciate the trust and confidence you have placed in Defiant through the purchase of this indoor auto shut off spring-wound timer. We strive to continually created quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing Defiant!

Installation

3 Attaching the timer to the wall box

- Insert the timer into the 2-1/2 in. wall box being careful not to pinch any wires. Ensure the word TOP located on the front of the timer is facing up.
 - റ Fasten the timer to the wall hox using the screws (BB).
- Place the steel metal wall plate on the timer and attach using the nut (B). Be careful not to overtighten as
- this could damage your wall plate. Push the timer knob (A) onto the knob extension. Be sure the pointer is lined up with "OFF" on the dial plate (C).
- Turn the power on at the circuit breaker or fuse box.

NOTE: When using a toggle wall plate, the two wall plate screws are not required in order to secure the wall plate. The nut (B) will hold the wall plate in position once assembled. If screws are required for the toggle wall plate they must be self-tapped into the timer by carefully applying inward pressure while turning the screw in order to self-tap into the timer. If using the rocker/decorator style wall plate, screw the wall plate into the top and bottom tabs of the timer using the screws supplied with your current wall plate. DO NOT OVERTIGHTEN.

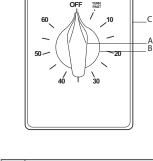

OFF

Part	Description
А	Кпор
В	Nut (located underneath the knob (A))
C	Faceplate

Warranty

1 YEAR WARRANTY

The manufacturer guarantees this product to be free of defects in materials and workmanship for 1 year from the date of purchase. If this product is defective, call 866-308-3976 for repair or replacement parts or return the product to the store from which it was purchased. This guarantee does not include normal wear and tear, LEDs, or batteries.

Contact the Customer Service Team at 1-866-308-3976 or visit www.HomeDepot.com.


Installation

 


screws with a flathead or Phillips head screwdriver to open the wall plate where the wires will be secured on the side of the timer.

Connecting the wires 2


- Strip all wires from the timer 5/16 in.
- Insert the Line side wire from the wire box into the side of the timer marked LINE1 under the wire plate and tighten the LINE1 screw (1).
- Insert the Load side wire from the wire box into the side of the timer marked LOAD1 under the wire plate and tighten the LOAD1 screw (2).
- Attach the bare ground wire (3) from the timer to the bare ground wire in the wire box and secure together using the wire nut (AA).

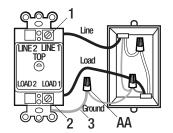



Operating Instructions

Turn the knob (A) clockwise to the desired time period. The timer will automatically turn the current off at the end of the time period indicated on the timer. Make sure to turn the knob (A) further than the "Turn Past" marking.

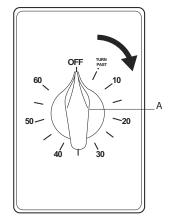

DEFIANT®

Questions, problems, missing parts? Before returning to the store, call Defiant Customer Service 8 a.m.-6 p.m., EST, Monday-Friday

1-866-308-3976

HOMEDEPOT.COM

Installation