

WOVEN BASE CAST IRON FIRE BOWL

OWNER'S MANUAL

MODEL: FBCIWOVEN-BZ

IMPORTANT SAFETY INSTRUCTIONS

Please read and follow all instructions before assembling or using this product.

NOTE: Your fire bowl is made of cast metal. There may be roughness on the surface and design. This "one of a kind" look enhances the beauty of the product and is not a defect.

NOTE: Finish will not look the same after burning.

NOTE: Add at least 1 inch of sand to the bottom of the fire tub. This will distribute the heat more evenly.



- ALWAYS use MESH SPARK GUARD when fire is lit.
- NOT FOR USE BY CHILDREN.
- The FIRE BOWL IS HOT! DO NOT TOUCH or allow children near fire bowl while it is in use.
- Spark guard handle will be HOT when in use. To remove, use a heat-proof barbecue mitt or poker tool to grasp handle.
- Approved items for burning: wood, self-starting fire logs, & charcoal.
- Keep a fire extinguisher, garden hose, or bucket of sand nearby to smother fire if necessary.
- DO NOT put vinyl cover on until fire bowl is completely cooled and embers are extinguished.

WARNING! CARBON MONOXIDE HAZARD

Burning charcoal inside can kill you. It gives off carbon monoxide, which has no odor. NEVER burn wood or charcoal inside homes, vehicles, or tents.

FOR OUTDOOR USE ONLY! FOR OUTDOOR USE ONLY!



Read and follow all Safety Statements, Warnings, Assembly Instructions and Use & Care Directions before attempting to assemble unit.



DO NOT use this unit on a wood deck or other combustible surfaces such as dry grass, leaves, mulch, etc. DO NOT use this near heat sensitive or combustible structures such as vinyl or wood siding.



DO NOT allow small children near flame. Hot embers can fly out of the fire tub in windy conditions. Adequate fire extinguishing material should be readily available.



CAUTION! Some parts may contain sharp edges. Wear protective gloves as necessary.