
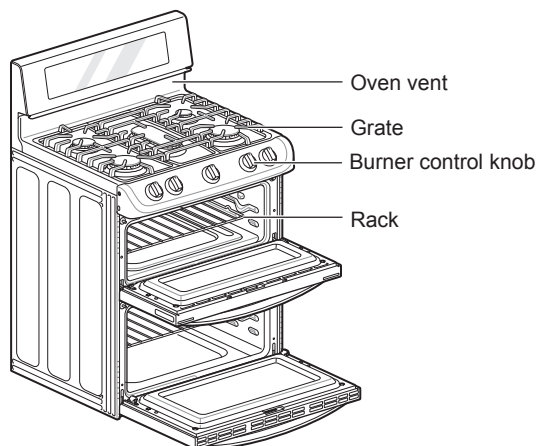


PRODUCT OVERVIEW

Parts

 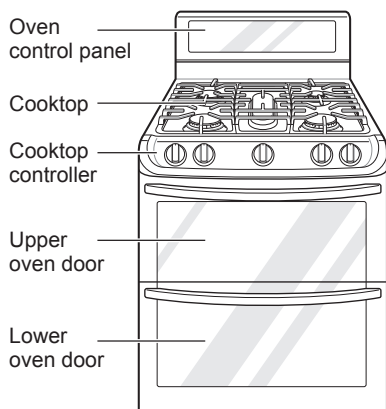


Accessories


Included Accessories



Standard rack
-LDG4315 (1ea)
-LDG4313 / LDG4311 (2ea)



Offset rack (1ea)

 

Gliding rack (1ea)
(LDG4315 Model only)



Griddle (1ea)
(LDG4315 Model only)



Owner's manual (1ea)

 
Anti-tip kit




Anti-tip (1ea)



Screws (6ea)



Anchors (6ea)

 

Template (1ea)

 
LP nozzle conversion kit



Cooktop Nozzles (5ea)



Oven Nozzles (2ea)




Installation guide (1ea)

EasyClean™ kit




 Spray bottle (1ea)



Non-scratch scouring pad (1ea)

 Optional Accessories



Grid



Broiler pan

NOTE

- Contact LG Customer Service at 1-800-243-0000 (1-888-542-2623 in Canada) if any accessories are missing.
- For your safety and for extended product life, only use authorized components.
- The manufacturer is not responsible for product malfunction or accidents caused by the use of separately purchased, unauthorized components or parts.
- The images in this guide may be different from the actual components and accessories, which are subject to change by the manufacturer without prior notice for product improvement purposes.