
Progressive®

ASSEMBLY INSTRUCTION

Item No: I 333-51

Description: ENTERTAINMENT CENTER

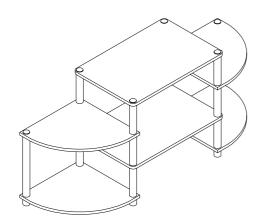

IMPORTANT NOTE:


- Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Do not tighten all screws/bolts until all completely assembled.
- Keep all hardware parts out of reach of children.

Each Item


PARTS LIST			
NO	COMPONENT	QTY	
A	TOP PANEL	1 PC	
В	CENTER SHELF PANEL	1 PC	
С	LEFT SHELF PANEL	2 PCS	
D	RIGHT SHELF PANEL	2 PCS	

HARDWARE LIST				
NO	DESCRIPTION		QTY	
1	LONG ROUND POLE		2 PCS	
2	SHORT ROUND POLE)	12 PCS	
3	ROUND CAP		6 PCS	
4	ROUND LEG		6 PCS	


STEP 1

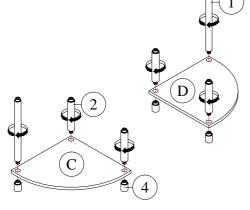


STEP 2

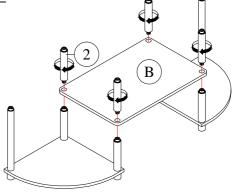

STEP 3

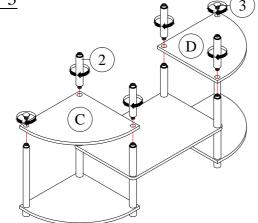

STEP 4

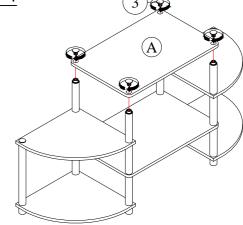

MADE IN MALAYSIA