



# WiFi Module Quick Start Guide



## Welcome

Before you begin  
View the installation video at  
[www.BasementWatchdog.com/videos](http://www.BasementWatchdog.com/videos)



### What you need:

- Small flathead screw driver
- Wi-Fi network name
- Wi-Fi network password
- Wi-Fi capable device (computer, tablet, or smartphone)

### Getting set up and connected is simple

1. Determine what Basement Watchdog device you have and how you are attaching to it
2. Attach your WiFi Module to your Basement Watchdog system
3. Mount your WiFi Module
4. Connect to your Wi-Fi network
5. Register online

## Step 1

Attach the WiFi module to your Basement Watchdog system and power source as shown on the installation diagram(s).  
*(note: please choose the connection method that matches the system you have)*

 
 
 
- a. 'RED' and 'GREEN' lights should be alternating

## Step 2

Mount your module using the included Velcro or mounting screws

## Step 3

Connect to your wifi network

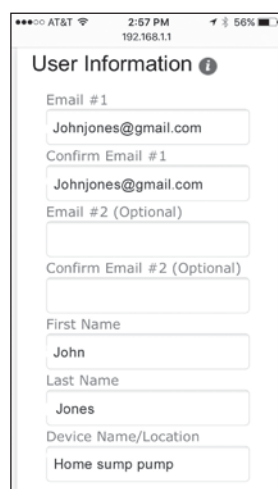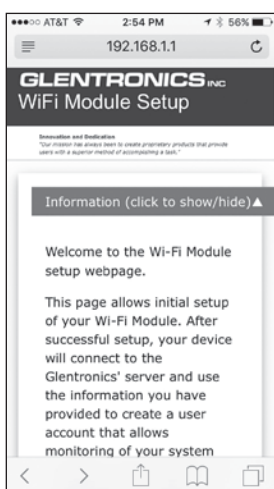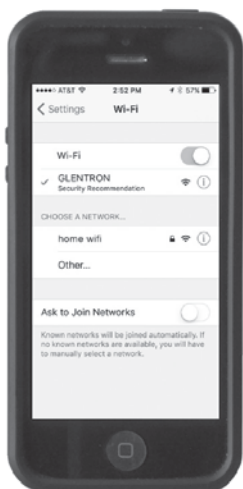

- a. Open the network settings on your device and connect to GLENTRON
- b. Close the network settings and open up the browser
  - In the URL field, type 192.168.1.1
- c. Fill out the information needed on the module setup page
  - Click 'save'
- d. Click on Available Networks and select your network from the dropdown menu
  - Enter your passphrase and click OK
- e. The 'RED' and 'GREEN' lights will stop alternating if the connection is successful. If lights do not stop alternating repeat Step 3

## Step 4

Register your module

 
- a. You will receive an email from GlentronicsConnect.com at the provided email address
- b. Click on the link and complete the registration

*Note: We recommend you test the setup by disconnecting power to the pump system connected to the WiFi module. You should receive an email / text within a few minutes*

# Installation Guidelines

## USB Data Port connection to compatible Basement Watchdog Connect™ backup or combination system

Connection with the USB Data Port enables the homeowner to receive a text or email notifying exactly which alarm is occurring or what maintenance is needed

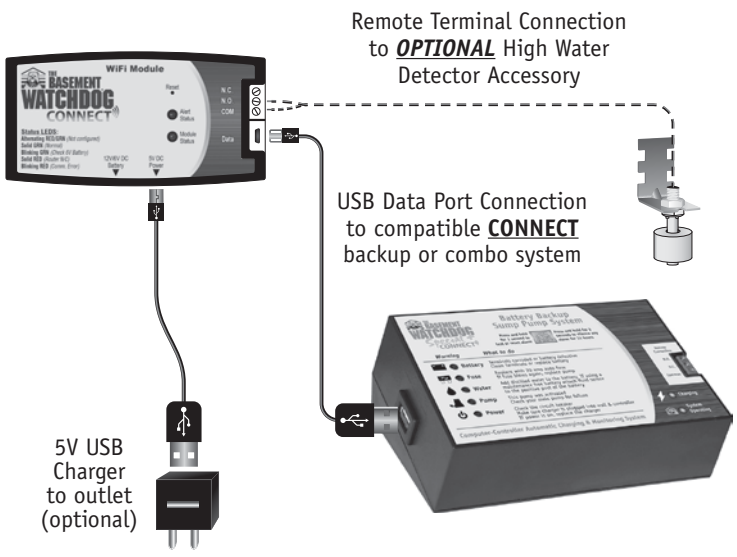

## Remote Terminal connection to compatible Basement Watchdog backup or combination system

Connection with the Remote Terminal enables the homeowner to receive an alert to a problem or needed maintenance

Note: This connection style should not be used if your backup is a Basement Watchdog Connect and has a USB port. You will only connect via the USB port.

