



SKU # 1003 186 114  
 OMS THD SKU # 1003 135 926  
 Model # TY505-1714-1

# ASSEMBLY INSTRUCTIONS

## 6ft Spirited Sparkle LED Lighted Unicorn

### USE AND CARE GUIDE

#### PLANNING ASSEMBLY

Carefully remove all the parts from the box and place them on the ground. Many parts are connected by the lighting string that runs throughout the item. Take special care not to pull, cut or damage the lighting string. Read the entire manual prior to assembly and identify all the parts included in the package against the parts list. It is recommended to assemble parts of the product while laying flat on the ground versus standing the item up to assemble the parts. If any parts are missing or damaged do not attempt assembly but contact our customer service center.

\*Assembly of this product may require more than one person.



Please go to [Homedepot.com](http://Homedepot.com) and search for SKU number or model number listed on the top left corner of this page. **INSTALLATION VIDEO** (located next to product image).



Download the free **BILT** app on any mobile device and access easy 3D interactive instructions to assemble this product.



#### Thank you!

We appreciate the trust and confidence you have placed in Home Accents through the purchase of this 6ft Spirited Sparkle LED Lighted Unicorn. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing Home Accents!

1-877-527-0313

[HOMEACCENTSHOLIDAY.COM](http://HOMEACCENTSHOLIDAY.COM)

Parts List		
Locater	Name	Qty.
A	Horn	1
B	Ear	2
C	Head/Neck	1
D	Body	1
E	Front Leg	2
F	Hind Leg	2
G	Mane	1
H	Wing	2
I	Tail	1
J	Base Stand	1

Hardware List		
Locater	Name	Qty.
K	Spare Bulb	5
L	Spare Fuse	2
M	Plastic Tie	20
N	Bolt & Wingnut	3
O	Ground Stake	8
P	Anchoring String	4

#### Pre-Operation

**CAUTION:** Grasp the plug to insert or remove from the power source. Do not unplug by pulling on cord.

**CAUTION:** The lighting string on this product is rated at 33.6 Watts (0.28 Amps). Do not overload. Do not connect to another lighting string, decorative outfit or other electrical products. Before you use or re-use this product inspect it carefully. Discard or return to place of purchase with purchase receipt if the product has cuts, damage, frayed wire insulation on cords, cracks in the socket enclosures, loose connections, exposed copper wire or other obvious damage.

#### Care and Cleaning

- Carefully remove the product from wherever it is placed. This helps to avoid any undue strain or stress on the product connections and wires. If the product is placed somewhere other than the ground it should be well secured and flat.
- Carefully disassemble the unit taking caution not to cut any electrical wires.
- Wipe the unit with a damp cloth and allow the unit to dry before storing.
- Store the product neatly in a cool, dry location protected from sunlight.

#### Trouble Shooting

- Ensure that the floor or surface that the item sits on is flat and level
- Be sure to plug the item correctly to a wall outlet or a UL Listed Power Cord
- Ensure all parts are assembled properly per the Instruction Manual
- If the item does not light check for loose or broken bulbs and connections
- Do not plug into other electrical items
- If the item has multiple Light String Cords be sure to plug in all cords
- Check for Broken or Burned Out Fuse In Plug

### Guarantee


#### What is Covered

The product is intended for residential seasonal use for 90 days per year. This product is covered by a 90 days limited guarantee due to defects in material and workmanship. Return the product with purchase receipts to the location of purchase for refund within 90 days of purchase.

#### What is Not Covered

This warranty does not cover commercial use, normal wear and tear, products not used in accordance with directions provided on or with the product, burn out of bulbs or LEDs, batteries, products that have been subjected to unauthorized repair and/or modification and damage caused by shipping and improper handling, alterations, misuse, in store display models or accidents. Questions, problems, missing parts? Before returning to the store, call Home Accents Holiday Customer Service 8 a.m.-6 p.m., EST, Monday-Friday


#### Diagram of Parts

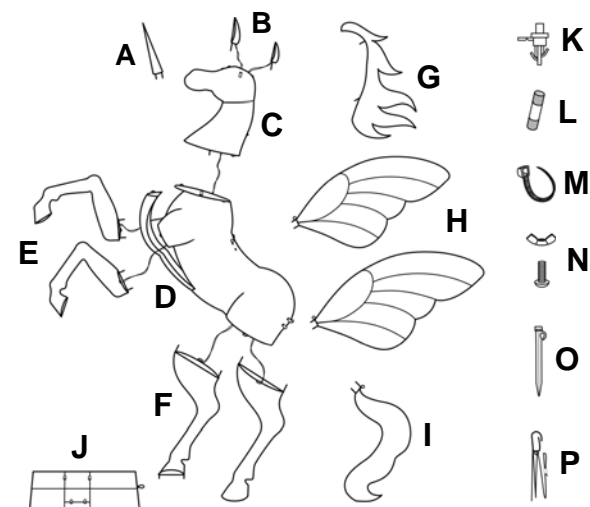

# ASSEMBLY


## 1 Assembling the Hind Legs to the Body

Note: Place all the parts of Body and Hind Legs flat on the ground floor. Insert the connecting rods at the top of the Hind Legs (F) into the matching connecting holes on the underside of the rear portion of the Body (D) and secure them together at the connecting loops with Bolt & Wingnuts (N).

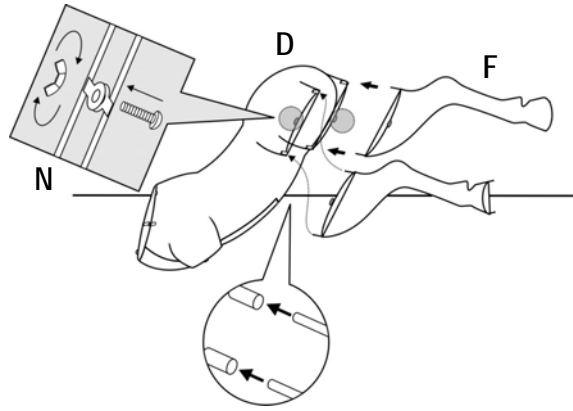


## 2 Assembling the Tail to the Body

Insert the connecting rods on the Tail (I) into the matching connecting holes at the rear of the Body (D) and fasten together at the connecting loops with Plastic Ties (M).

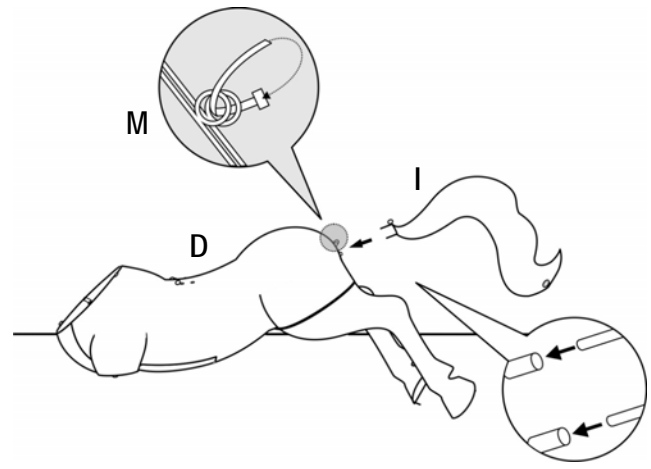


## 3 Assembling the Base Stand to the Hind Legs

Insert the connecting rods on the bottom of Hind Legs (F) {hoof} into the connecting holes on the Base Stand (J). Secure the Tail (I) and Base Stand (J) together at the connecting loop with Bolt & Wingnuts (N).

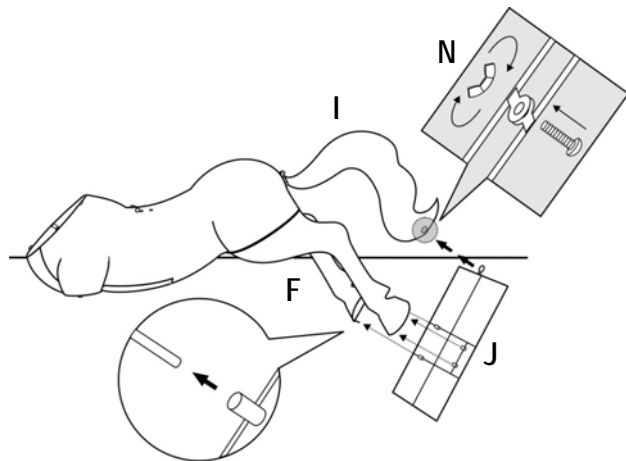


## 4 Assembling the Head/Neck and Ears

Stand the assembled Body upright on the Base Stand. Insert the connecting rods on each Ear (B) into the connecting holes on the top of the Head (C). Insert the connecting rods on the bottom of the Head (C) into the connecting holes at the top of Body (D) then fasten them together at the connecting loops with Plastic Ties (M).

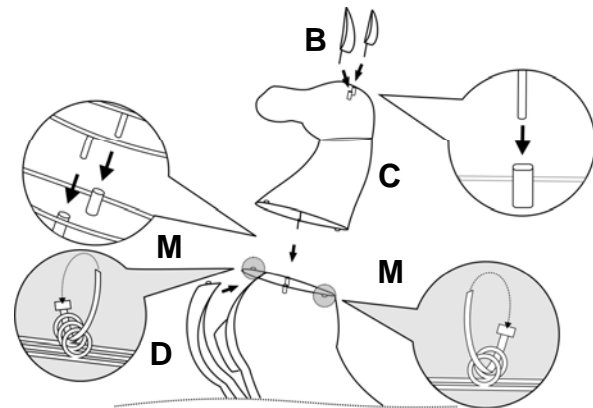


## 5 Assembling the Front Legs to the Body

Insert the connecting rods on the top of the Front Legs (E) into the matching connecting holes on the front of the Body (D) and fasten together at the connecting loops with Plastic Ties (M).

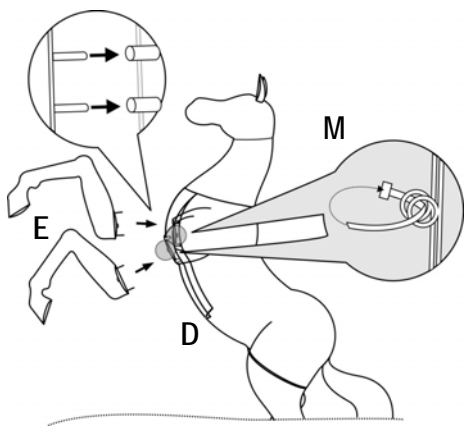


## 6 Assembling the Horn and Mane to the Head/Neck

Insert the connecting rods on the Horn & Mane (A,G) into the matching connecting holes of the Head/Neck (C).

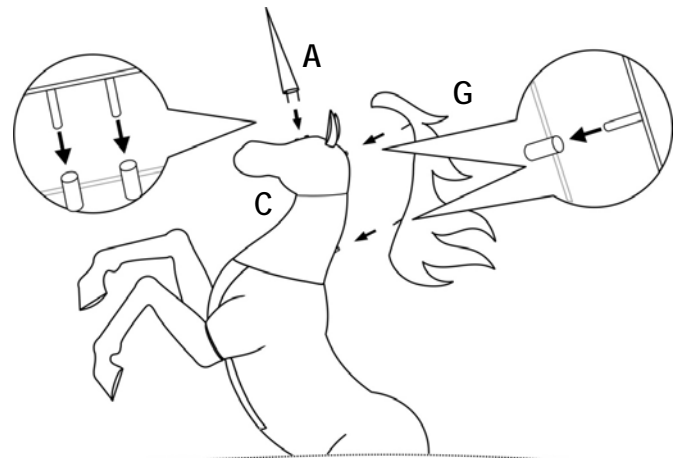

## 7 Assembling the Wings

Insert the connecting rods on the two Wings (H) into the matching connecting holes on the back of the Body (D) and fasten together at the connecting loops with Plastic Ties (M).

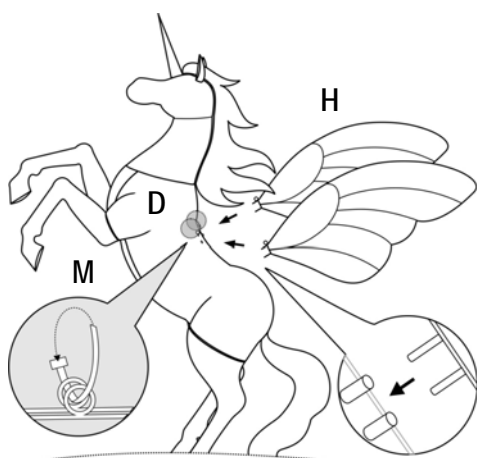

## 8 Assembling the Anchoring Strings and Ground Stakes

Hook the plastic clipped end of each of Anchoring String (P) onto the connecting loop by the neck on the Body (D). Attach the looped end of the Anchoring String to the hook on the end of the Ground Stakes (O) then pull the Anchoring Strings out and evenly away from the Unicorn then secure the Ground Stakes into the ground. With the remaining Ground Stakes (O) place the hooked end over the metal frame of the Base Stand at four corners then into the ground firmly.

