



## Parts List for CM2040 Type 1

Item Number	Part Number	Description	Qty Required
2	5140161-07	COVER	1
3	5140161-08	GASKET	2
4	5140161-09	LOWER COVER	1
5	5140161-10	SELF TAPPING SCREW	1
6	5140161-11	HANDLE	4
7	5140149-65	SPRING PIN	4
8	5140161-12	PLATE	2
9	5140161-13	LOWER HANDLE	1
10	5140149-67	CLAMP LEVER	2
11	5140161-14	PAD	4
12	5140161-15	KNOB	2
13	5140149-71	HEX NUT	4
14	5140149-58	WIRE PIE	1
15	5140161-16	BAG	1
16	5140161-17	GRASS CATCHER	1
17	5140161-18	QUICK CLAMP	2
18	5140161-19	SHAFT	2
19	5140161-20	ADJUSTING GEAR	2
20	5140161-21	WHEEL COVER	2
21	5140161-22	RETAINING RING	4
22	5140161-23	COLLAR	8
23	5140161-24	REAR WHEEL	2
24	5140161-25	REAR AXLE	1
25	5140161-26	WHEEL PLATE	2
26	5140161-27	SELF TAPPING SCREW	28
27	5140150-12	WHEEL SHAFT ASSY.	6
28	5140161-28	SELF TAPPING SCREW	2

COPYRIGHT© 2005. All Rights Reserved.

Parts list, pricing, and availability subject to change. Please visit [www.dewaltservicenet.com](http://www.dewaltservicenet.com) for current parts information.

## Parts List for CM2040 Type 1

Item Number	Part Number	Description	Qty Required
29	5140161-29	FIXED PLATE	2
30	5140161-30	SOFT PLATE	1
31	5140161-31	COMBINATION SCREW	2
32	5140161-32	BLOCK	1
33	5140161-33	FIXED GEAR	1
34	5140161-34	WASHER	2
35	5140161-35	FIXED GEAR	1
36	5140161-36	SELF TAPPING SCREW	4
37	5140161-37	CORD CLAMP	1
38	5140161-38	SELF TAPPING SCREW	9
39	5140158-91	SCREW	4
40	5140161-39	GUIDE PLATE	1
41	5140161-40	AXLE	1
42	5140161-41	LOCK WASHER	1
43	5140161-42	RUBBER CAP	1
44	5140161-43	TORSION SPRING	1
45	5140161-44	SIDE COVER	1
46	5140161-45	SIDE	1
47	5140161-46	SIDE PANEL	1
48	5140161-47	HOUSING	1
49	5140150-01	FAN	1
50	5140161-48	PLATE	1
51	CMB2000	BLADE	1
51	5140161-49	BLADE	1
52	5140150-06	BLADE CLAMP	1
53	5140150-07	BLADE BOLT	1
54	5140161-50	FRONT COVER	2

COPYRIGHT© 2005. All Rights Reserved.

Parts list, pricing, and availability subject to change. Please visit [www.dewaltservicenet.com](http://www.dewaltservicenet.com) for current parts information.

## Parts List for CM2040 Type 1

Item Number	Part Number	Description	Qty Required
55	5140161-51	WHEEL	2
56	5140161-52	FRONT AXLE	1
57	5140161-53	PLATE	2
58	5140150-31	SCREW	3
59	5140161-54	MOTOR ASSEMBLY	1
60	5140150-30	CLAMP HANDLE	2
61	5140161-55	BATTERY CONTROLLER	1
62	5140161-56	BUTTON BLOCK	1
63	5140161-57	WEDGE PLATE	1
64	5140150-43	SWITCH BUTTON	1
65	5140161-58	BRACKET	1
66	5140161-59	PUSH-BUTTON SWITCH	1
67	LBX2540	BATTERY	2
67	LBXR36	BATTERY	2
68	5140161-61	COVER	1
69	5140161-62	FLANGE HEAD SCREW	4
70	5140150-45	ANTI LOCK SPRING	2
71	5140150-38	TERMINAL	1
72	5140150-39	TERMINAL	2
73	5140161-63	LEADWIRE	1
74	5140161-64	LEADWIRE	1
75	5140161-65	SOFT BOARD	1
76	5140161-66	PLATE	1
77	5140161-67	SELF TAPPING SCREW	2
78	5140161-68	FRONT CONNECTING ROD	1
79	5140161-69	SELF LOCK NUT	4
80	5140161-70	SUPPORT PLATE	1

COPYRIGHT© 2005. All Rights Reserved.

Parts list, pricing, and availability subject to change. Please visit [www.dewaltservicenetwork.com](http://www.dewaltservicenetwork.com) for current parts information.

## Parts List for CM2040 Type 1

Item Number	Part Number	Description	Qty Required
81	5140161-71	ROD	1
82	5140161-72	TORSION SPRING	1
83	5140161-73	COTTER PIN	1
84	5140161-74	CONNECTING ROD	1
85	5140161-75	TENSION SPRING	1
86	5140161-76	GASKET	1
87	5140161-77	SCREW	1
88	5140161-78	HANDLE	1
89	5140161-79	COVER	1
90	5140161-80	BATTERY COVER	1
91	5140161-81	SUPPORT ROD	1
92	5140161-82	HANDLE	1
93	5140161-83	COVER	1
94	5140161-84	BATTERY BOX	1
95	90616337	CHARGER	1
96	5140161-86	CIRCLIP	2
97	5140161-87	SHAFT	1
98	5140161-88	TORSION SPRING	1
99	5140161-89	COVER	1
100	5140161-90	PLATE	1
101	5140161-91	SCREW	4
102	5140161-92	SELF TAPPING SCREW	2
201	5140160-97	SWITCH BOX ASSY	1
211	5140149-38	HANDLE COVER	1
212	5140160-98	HANDLE	1
213	5140160-99	BUTTON	1
214	5140149-41	SPRING	1

COPYRIGHT© 2005. All Rights Reserved.

Parts list, pricing, and availability subject to change. Please visit [www.dewaltservicenet.com](http://www.dewaltservicenet.com) for current parts information.

## Parts List for CM2040 Type 1

Item Number	Part Number	Description	Qty Required
215	5140161-00	COVER	1
216	5140161-01	SWITCH CABLE	1
217	5140149-46	TRIGGER BUTTON	1
218	5140149-44	SWITCH	1
219	5140149-42	BUTTON	1
220	5140149-43	SELF TAPPING SCREW	1
221	5140149-51	SCREW	1
222	5140149-50	HOOK PLATE	1
223	5140149-54	HEX NUT	1
224	5140149-52	TORSION SPRING	1
225	5140161-03	GUIDE	1
226	5140149-61	CABLE	1
227	5140149-57	CONNECTOR-WIRE	1
228	5140149-59	CABLE	1
229	5140149-47	SELF TAPPING SCREW	4
230	5140149-48	CLAMP	1
231	5140149-60	BUSHING	2
232	5140149-56	HEAT SHRINK SLEEVE	1
233	5140161-04	LOWER COVER	1
234	5140149-55	CABLE CLAMP	1
235	5140149-49	SELF TAPPING SCREW	8
236	5140161-05	KEY BOX ASSY.	1
237	5140149-63	KEY STRAP	1

COPYRIGHT© 2005. All Rights Reserved.

Parts list, pricing, and availability subject to change. Please visit [www.dewaltservicenetwork.com](http://www.dewaltservicenetwork.com) for current parts information.