


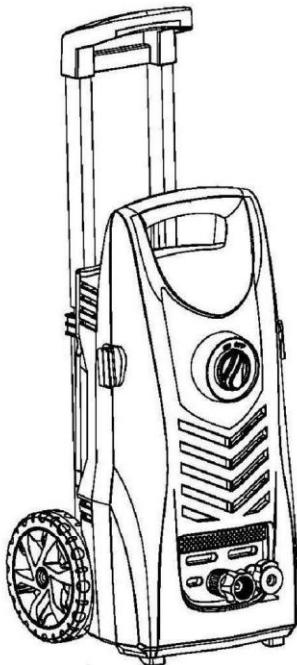

High-Pressure Washer

BY02- VBW-WT



CAUTION : Do not use this device before reading the instructions.

1. Safety Instructions

- The appliance has been designed solely for private use outdoors and not for commercial use. Keep this appliance away from heat, direct sunlight, moisture and rain, ice and sharp edges.
- Do not allow anybody that has not been trained to use a pressure washer to operate the machine without first reading the instruction manual.
- **WARNING:** High-pressure washers must not be used by children or untrained persons.
- Before starting your machine, carefully check for defects. If you find any, do not start your machine and contact your local distributor.
- In particular, ensure that the electric cable insulation is in perfect condition and free of cracks. If the electric cable is damaged, an approved local service centre must replace it.
- **WARNING:** High pressure jets can be dangerous if they are used incorrectly. The jet

must not be directed towards persons, electrical equipment connected to the mains or the appliance itself.



- **WARNING:** Do not use the appliance close to other people unless they are wearing protective clothing.
- **CAUTION:** Do not direct the jet towards yourself or other persons to clean clothing or shoes.
Hold the lance firmly in your hands.
- The operator and persons within close proximity to the cleaning area must take necessary measures to protect themselves from dislodged debris when in use.
- Wear protective gloves and clothing during use.
- **WARNING:** The appliance has been designed for use with a cleaning agent

supplied or recommended by the manufacturer. Using other cleaning products or chemical products may affect the safety of the appliance.

- **WARNING:** Disconnect the appliance from the power supply before carrying out any maintenance.
- **CAUTION:** To ensure the safety of the appliance, only use spare parts supplied or approved by the manufacturer.
- Do not use the appliance if the power cable or important parts of the appliance are damaged, for example, the safety device, high pressure hose and handgun.
- Do not use the appliance with wet hands. If the appliance is damp or wet, unplug it immediately. Do not place it in water.
- The tyres and valves on the tyres can be damaged by the high pressure jet and could burst.
- Never use the machine in an environment where there is a danger of explosion.
- It is forbidden to clean surfaces containing asbestos at high pressure.
- This high-pressure washer must not be used in temperatures below 0 ° C.
- **CAUTION** - The hoses, accessories and high pressure couplings are important for the safety of the machine. Only use hoses, accessories and couplings recommended by the manufacturer.
- **WARNING:** Inadequate extension cables may be dangerous. Cables and spools must always be completely unwound to avoid letting the cable overheat.
- If an extension cable is used, the plug and socket must be waterproof and conform to the requirements below regarding the length and dimensions of the cable.
 - 1,0 mm² max. 12,5 m
 - 1,5mm²max.20 m

- If the power cable is damaged, it must be replaced by the manufacturer, their service agent or a qualified professional in order to avoid any danger.
- **WARNING:** This machine is not designed to be used by persons (including children) with reduced physical, sensory or mental capacities or whose lack experience or knowledge.
- **WARNING:** It is advisable that you supervise children to ensure that they do not play with the appliance.
- **CAUTION** – Risk of explosion – do not spray flammable liquids, do not direct the jet towards flammable liquids.
- **WARNING:** Water that has circulated in the anti-backflow system is not considered drinkable.
- **WARNING:** Do not use the appliance if the power cable or important parts of the appliance are damaged, for example, the safety devices, high pressure hoses and handgun.
- **WARNING:** If you have an extension cable, it must be waterproof.
- **WARNING:** When you switch on the machine, a recoil movement is produced due to the force of the water jet. Use two hands to control the lance. Wear safety gloves when using the appliance. Wear suitable protective clothing.
- In case of accidental contact with detergent, wash with water. If the liquid comes into contact with the eyes, also seek medical assistance (the detergent can cause irritations or burns).
- In the event that the appliance breaks down, do not attempt to repair it yourself but contact a professional technician to avoid any danger.

Main power connection

The following must be observed when connecting the

high pressure washer to the power supply:

- Connecting the electrical connection should be done by a qualified electrician conforming to 60364-1 CEI
- It is recommended that the electrical supply to this machine should comprise a residual current device which interrupts the current if the leakage current exceeds 30 mA for 30ms.

CONNECTING TO THE WATER NETWORK

WARNING



According to current guidelines, the unit must never be operated without a system separator on the potable water system. Use a EN 12729 type BA system separator. Water that passes through a system separator is classified as non-potable.

WARNING:

Always connect the system separator to the water supply and never directly to the device!

Thank you for choosing the
BY02-VBW-WT High-Pressure Washer


Contents

| Chapter | Page |
|---|------|
| 1. Safety Instructions | 2 |
| 2. Getting Started | 7 |
| 3. Operating your pressure washer | 7 |
| 4. End of operation instructions | 9 |
| 5. Environmental protection | 10 |
| 6. Maintenance, cleaning and repairing. | 10 |
| 7. Breakdown service | 11 |

Technical data


| Motor | Brush |
|---------------------------|---------------------------|
| Max. pressure | 2100PSI |
| Max.flow | 1.60GPM |
| Voltage | 120V/6 |
| Current | 13A |
| Vibration gun | Max 2.25 m/s ² |
| Maximum water tamperature | <50 °C |

The Circuitry

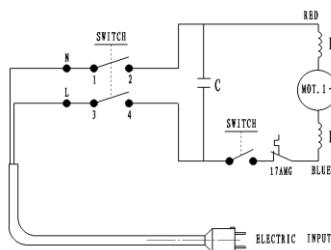

Contents

1. Pressure hose
2. Pressure gun
3. Gun seat
4. Main switch
5. Washer body
6. Trolley
7. Trolley handle
8. Wheel
9. Plug
10. Cable
11. Inlet hose
12. Water tap
13. Inlet connector
14. Outlet connector

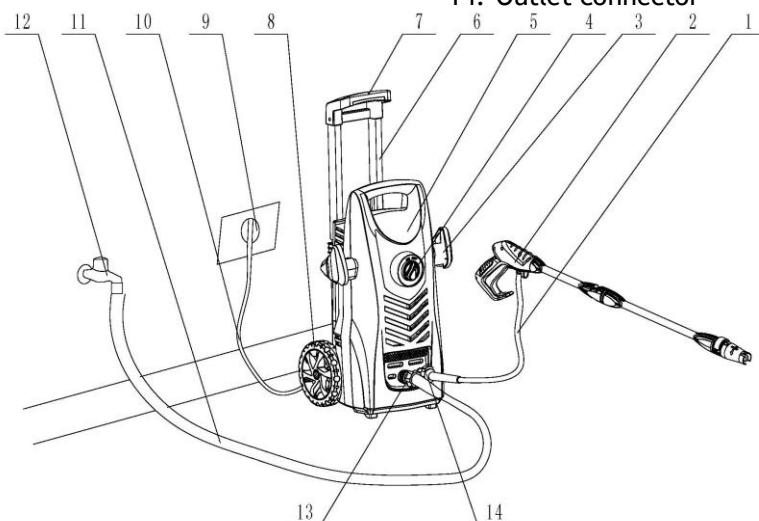

2. First time instructions


This section will explain in details how to make high pressure washer ready for use.

SAFETY DEVICES

- The unloader valve can reduce pressure if it exceeds pre-set values.

Locking device on trigger gun (see illustration at the beginning of this manual):

The trigger gun features a locking device. When the knob is activated, the trigger gun cannot be operated.

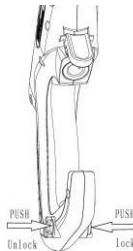


THERMAL SENSOR

A thermal sensor protects the motor against overloading. The machine will restart after a few minutes when the thermal sensor has cooled.

2.1 Mounting of storage hook

Slide the storage hooks (3) into the holders.

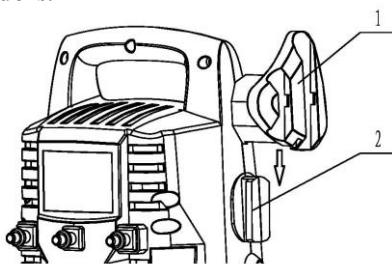


3. Operation instructions

3.1 Connection of garden hose

Screw the water inlet coupling (13) tight on to the water inlet Note: The inlet filter (A) must always be fitted in the water inlet pipe to filter out sand, lime stone and other impurities as these will damage the pump valves.

Caution: Failure to fit the filter will invalidate the guarantee.


Connect the garden hose with a standard quick coupling

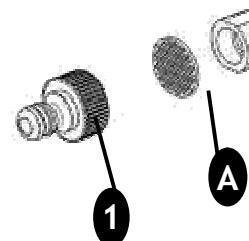

3.2 Mounting of high pressure hose


Attach the high pressure hose to the trigger gun and machine.

Detach the high pressure hose by pressing the pawl (A) or button (B)

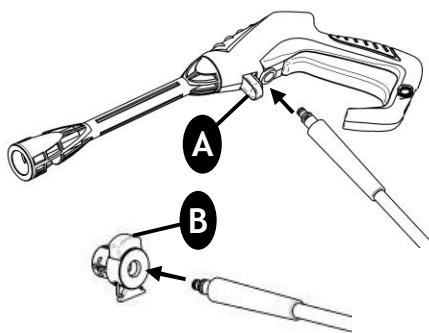

3.3 Mounting of lance and nozzle

Push the lance into the trigger gun
When inserted turn it. Caution: Make sure the lance is properly fixed to the gun
Attach the nozzles. Caution: When attaching the nozzle the button (A) on the nozzle should come out again. Check before activating the trigger that the nozzle is properly fixed.

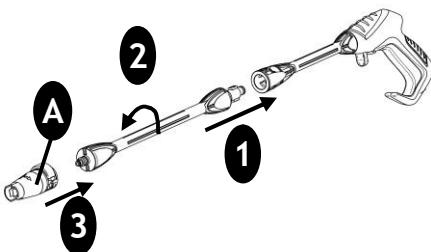

3.4 Water connection

Connecting the water supply pipe

Follow your water supplier's instructions . For connection information, see the data plate/technical specifications
Use a reinforced hose (not supplied) with a standard connection (ext. diameter: 16mm/int. 12mm, maximum length: 25m).

IMPORTANT! Only use water without any impurities. If there is a risk of sand particles in the inlet water (i.e. from your own well), an additional filter should be mounted.

Let the water run through the water hose before connecting it to the machine to prevent sand and dirt from penetrating the machine. Note: Check that the filter is fitted in the water inlet pipe and that it is not clogged up.
Connect the water hose to the water supply by means of the quick connector (inlet

water, max. pressure: 10 bar, max. temperature: 60°C).
Turn on the water.

3.5 Start/stop of the machine

The trigger gun (2) and lance is affected by a thrust during operation - therefore always hold it firmly with both hands.

IMPORTANT: Point the nozzle at the ground.

Check that the machine is in upright position. NOTE: Do not place the machine in high grass!

Release the trigger lock .

Activate the trigger of the trigger gun (2) and let the water run until all air has escaped from the water hose.

Press the Start/stop switch (4).

Activate the trigger of the trigger gun (2). Always adjust the distance and thus the pressure of the nozzle to the surface, which is to be cleaned.

Do not cover the machine during operation or use it in a room without adequate ventilation!

NOTE: If the machine is left or not used for 5 minutes, it must be switched off on the start/stop switch (4) "O":

Press the start/stop switch (4) "O".

Disconnect the electrical plug (9) from the socket.


Shut off the water supply and activate the trigger of the trigger gun (2) to relieve the machine of pressure.

Lock the trigger gun (2)

When releasing the trigger of the trigger gun (2), the machine automatically stops. The machine will start again when you reactivate the trigger gun (2)

3.6 Multi Nozzle

The pressure can for the multi nozzle be adjusted by tuning it. **WARNING:** Do not do this under operation to avoid that the hand hits the jet.

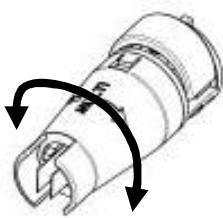


3.7 Foam Sprayer

Unscrew the container (A) from the foam sprayer

Add detergent to the container (A) and

screw the container to the foam sprayer


Adjust the amount of detergent with the button (B)

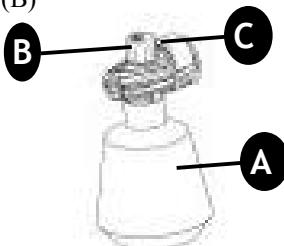

Pay special attention:


1. You can adjust the foam spray with button B, if you want spray water only, you can turn button B to close the foam spray.
2. Foam equipped quick connector. Press C, then insert into the gun. Caution: When attaching the soap bottle the button (C) should come out again. Check before activating the trigger that the nozzle is properly fixed.

3. Add detergent as following:

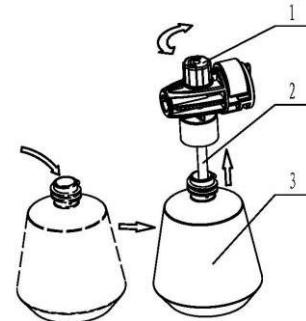

3.8 Parking holder

The trigger gun and lance can be stored during and after operation in the parking holder Click the trigger gun into the parking holder

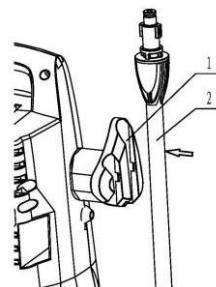

4. After use instructions

The machine should be stored in a frost-free room!


Pump, hose and accessories should always be emptied of water prior to storing as follows:

Stop the machine (press the start/stop switch “O” and detach water hose, high pressure hose and nozzle

Restart the machine and activate the trigger of the trigger gun. Let the machine run until no more water runs through the trigger gun. Stop the machine, unplug and wind up hose and cable.

Place trigger gun, lance, nozzles and other accessories in the holders of the machine. The hook can be used for storage of the hose and cord.

5. All accessories can be stored in the washer after using.

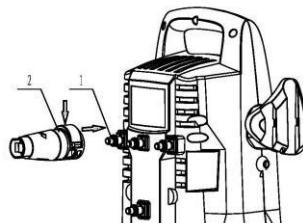

WARNING: Never start up a frozen machine. Frost damages are not covered by the guarantee!

5. Environmental protection

Old appliances contain valuable materials that can be recycled. Please arrange for the proper recycling of old appliances. Please dispose your old appliances using appropriate collection systems.

6. Maintenance, cleaner and repair

WARNING! Always disconnect the electrical plug from the socket prior to maintenance or cleaning.

To ensure a long and problem free working life, please take the following advice:
Wash out water hose, high pressure hose, spray lance and accessories before mounting.

Clean the connectors of dust and sand.
Rinse the detergent spraying attachment after use.
Clean the nozzles.

Any repair should always be made in an authorized workshop with original spare parts.

6.1 Cleaning of inlet filter

Clean the water inlet filter regularly once a month or more frequently according to use. Carefully loosen the filter with a screwdriver and clean it (see section 3.1). Check that it is intact before re-mounting it. The inlet filter must always be fitted inside the water inlet pipe to filter out sand, limestone and other impurities, as they will damage the pump valves.

CAUTION: Failure to fit the filter will invalidate the warranty

6.2 Cleaning of air vents

The machine should be kept clean so as to let cooling air pass freely through the machine vents.

6.3 Greasing of couplings

To ensure an easy connection and that o-rings do not dry up; the couplings should be greased regularly.

7. Breakdown service

| Symptom | Cause | Recommended action |
|--|---------------------------------------|--|
| The machine will not start | The machine is not plugged-in | Plug the machine in |
| | Faulty receptacle | Try another receptacle |
| | The fuse has blown | Replace the fuse Unplug other appliances |
| | Faulty extension cable | Try without the extension cable |
| Fluctuating pressure | The pump is drawing in air | Check that hoses and connections are airtight. |
| | Valves dirty, worn or sticking | Contact your service centre |
| | The water supply is not sufficient | Increase water pressure, check for blockages and / or change the large pipe. |
| | Pump seals worn | Contact your nearest service centre |
| The machine stops | The fuse has blown | Replace the fuse |
| | Incorrect mains voltage | Unplug other appliances Check that the mains voltage corresponds to the specifications on the nameplate |
| | Thermal sensor activated | Leave the machine to cool for 5 mins |
| | Partially blocked jet | Clean the jet with a needle and by spraying water rearwardly through the jet |
| Fuse blown | Fuse too small | Replace it with a fuse with higher amp consumption than the washer. |
| | Increase in the amperage | Try without the extension cable |
| Pulsing machine | Air in inlet hose / pump | Allow machine to run with open trigger until regular working pressure resumes. |
| | Inadequate supply of water generated | Increase water pressure, check for blockages and / or change the large pipe. |
| | Partially blocked jet | Clean the jet with a needle and by spraying water rearwardly through the jet |
| | Water filter blocked | Clean the filter |
| | Folded pipe | Unfold the pipe |
| | | |
| The machine turns on and off by itself | Pump fuse and/or trigger out of order | Contact your nearest service centre |
| | No water supply | Connect the inflow water. |
| The machine is on but no water comes | Water filter blocked | Clean the filter |
| | Blocked jet | Clean the jet with a needle and by spraying water rearwardly through the jet |



WEEE - Waste of Electric and Electronic Equipment

The symbol on the product or on its packing indicates that this product may not be treated as household waste. Instead it shall be handed over To the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

Deutsch

Das Symbol auf dem Produkt bzw. auf der Produktverpackung deutet an, dass das Produkt nicht mit dem Haushaltsmüll entsorgt werden darf. Stattdessen ist es zur Entsorgung an eine geeignete Sammelstelle für das Recycling von elektrischen und elektronischen Geräten zu bringen. Durch die korrekte Entsorgung helfen Sie mit, potenziellen negativen Einflüssen auf die Umwelt und die Gesundheit vorzubeugen, die durch eine unangemessene Entsorgung dieses Produkts entstehen könnten. Genauere Informationen zur Wiederverwertung dieses Produkts erhalten Sie von Ihrer Stadtverwaltung, der Müllabfuhr vor Ort oder dem Geschäft, in dem Sie dieses Produkt erworben haben.

Français: symbole DEEE

Le symbole sur le produit ou sur son emballage indique que ce produit ne doit pas être traité comme un déchet ménager. Il doit au contraire être remis au point de collecte correspondant pour le recyclage du matériel électrique et électronique. En procédant de cette manière, vous aiderez à prévenir les conséquences potentiellement négatives pour l'environnement et la santé humaine que pourrait causer un traitement inadéquat du rejet de ce produit. Pour plus ample information sur le recyclage de ce produit, veuillez prendre contact avec votre bureau municipal, votre service de collecte de déchets ménagers ou le magasin où vous avez acheté le produit.

Símbolo no produto ou na embalagem indica que esse produto não deve ser tratado como um resíduo doméstico. Ao contrário, deve ser levado ao local de recolha adequado para a reciclagem de equipamentos electroelectrónicos. Ao se assegurar que o tratamento deste equipamento foi adequado, estará a ajudar a prevenir consequências potenciais ao meio ambiente e à saúde humana que poderiam ser causadas pelo manejo inapropriado do produto. Para mais informações sobre a reciclagem deste produto, entre em contacto com as autoridades locais, com o órgão responsável pela recolha de lixo ou a loja onde o produto foi adquirido.

Italiano

Il simbolo sul prodotto o sulla confezione indica che questo prodotto non può essere smaltito fra i rifiuti domestici. Deve invece essere consegnato a un centro di raccolta autorizzato per il riciclaggio dei dispositivi elettrici ed elettronici. Smaltendo questo prodotto in modo corretto, si contribuisce a ridurre l'impatto ambientale e sull'uomo. Per maggiori informazioni sul riciclaggio di questo prodotto, contattare il proprio comune, il centro di raccolta dei rifiuti urbani locale o il rivenditore.

Nederlands

Het symbool op het product of de verpakking geeft aan dat dit product niet als huishoudelijk afval mag worden behandeld. Het apparaat moet bij een verzamelpunt voor het recyclen van elektrische en elektronische apparatuur worden ingeleverd. Door dit product op de juiste manier af te danken, helpt u bij het voorkomen van mogelijke negatieve consequenties voor het milieu en de menselijke gezondheid. Deze zouden kunnen ontstaan als dit product niet op de juiste manier wordt behandeld. Voor uitgebreide informatie over het recyclen van dit product kunt u contact opnemen met uw plaatselijke stadskantoor, uw afvalverwerkingsdienst of de winkel waar u het product hebt gekocht.





WEEE - Waste of Electric and Electronic Equipment



El símbolo que aparece en el producto o en su embalaje indica que este producto no puede ser tratado como residuo doméstico. En su lugar, debe ser entregado en el correspondiente punto de recogida para el reciclado de equipos eléctricos y electrónicos. Al garantizar la adecuada eliminación de este producto, ayudará a evitar las posibles consecuencias negativas para el medio ambiente y la salud de las personas que se producirían a causa de una inadecuada manipulación de los residuos de este producto. Para obtener información más detallada acerca del reciclaje de este producto, póngase en contacto con la oficina local de su ciudad, el servicio de recogida de residuos domésticos o el establecimiento en el que ha adquirido el producto.

Svenska

Symbolen på produkten eller emballaget anger att produkten inte får hanteras som hushållsavfall. Den skall i stället lämnas in på uppsamlingsplats för återvinning av el- och elektronikkomponenter. Genom att säkerställa att produkten hanteras på rätt sätt bidrar du till att förebygga eventuellt negativa miljö- och hälsoeffekter som kan uppstå om produkten kasseras som vanligt avfall. För ytterligare upplysningar om återvinning bör du kontakta lokala myndigheter, sophämtningstjänst eller affären där du köpte varan.

Dansk

Symbolen, som findes på produktet eller emballagen, viser, at produktet ikke må bortslettes sammen med almindeligt husholdningsaffald. Det skal derimod afleveres på en miljøstation, som er godkendt til håndtering af elektrisk og elektronisk udstyr. Sørg for at bortslette produktet korrekt, så du kan være med til at forebygge skader på miljøet og menneskers sundhed. Hvis du ønsker yderligere oplysninger om, hvordan produktet genvindes, kan du henvende dig hos kommunen, en miljøstation eller forretningen, hvor du købte produktet.

Suomi

Tuotteessa tai pakkaussessa oleva symboli ilmaisee, että tuotetta ei voi hävittää talousjätteen mukana. Sen sijaan tuote on vietävä sähköisten ja elektronisten laitteiden kierrätykseen tarkoitettuun keräyspisteeseen. Kun huolehdit tuotteen asianmukaisesta hävittämisestä, autat edistämään ympäristön ja ihmisten hyvinvointia, jonka tuotteen virheellinen hävittäminen voi vaarantaa. Lisätietoa tämän tuotteen kierrättämisestä saat jätteenkäsittelypisteistä tai samasta liikkeestä, josta ostit tuotteen.

Norsk

Symbolet på produktet eller emballasjen indikerer at dette produktet ikke kan behandles som husholdningsavfall. I stedet skal det leveres til aktuelt innsamlingspunkt for resirkulering av elektrisk og elektronisk utstyr. Ved å sørge for at dette produktet kasseres korekt, bidrar du til å forebygge mulige negative følger for miljøet og folks helse, hvilket ellers kan forårsakes ved feilaktig avfallshåndtering av dette produktet. For nærmere informasjon om resirkulering av dette produktet, vennligst kontakt din lokale representant, renholdsverket eller butikken der du kjøpte produktet.

USA Office:
101 wales avenue,Avon,MA 02322,United States
Service Hotline: 888-899-1688
Email: realminfo@yahoo.com