

Model #: 1067 Accent Chair

Item #: 1004423715, 1004423717

USE AND CARE GUIDE

1067 Accent Chair



Questions, problems, missing parts?
Before returning to the store, Customer Service.
8 a.m. – 7 p.m., EST, Monday – Friday, 9 a.m. – 6 p.m.,
EST, Saturday

1-800-998-7021 HOMEDEPOT.COM/HOMEDECORATORS

THANK YOU

We appreciate the trust and confidence you have placed in Home Decorators Collection through the purchase of this MB-044 BED. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs.

Thank you for choosing Home Decorators Collection!

Table of Contents

Table of Contents	2
Safety Information	2
Warranty	2
What is Covered ······	2
What is not Covered	2
Pre-Assembly	3
Planning Assembly	3
Hardware Included ·····	3
Package Contents	4
Assembly	.5

Maintenance		• • • • • • • • • • • • • • • • • • • •	 	(Ĝ
Care and Clea	aning		 	(E

Safety Information

- 1. Make sure to assemble the bed with two or more adults.
- Suggest read the AI carefully before assembling and follow the steps and details.
- 3. Keep small parts away from the children during assembly.



WARNING: Keep the product on level surface, the product may become unstable and tip if stored or moved on an unlevel surface, which may cause personal injury or product damage.

Warranty

3 YEAR WARRANTY

WHAT IS COVERED

Product defects, the defects include circumstances where the frame has broken under normal use and no longer performance its function.

WHAT IS NOT COVERED

This warranty does not cover commercial use, acts of nature, and abusive use.

Pre-Assembly

PLANNING ASSEMBLY

Keep the children and pets away from build area, pay attention to the labels on the parts and don't throw away, otherwise, maybe it will be difficult for you to assemble the product.

HARDWARE INCLUDED



Notes: Part AA is in the red hardware bag



Part	Description	Quantity
AA	screws5*50	2

Assembly


PACKAGE CONTENTS



Notes: Part A and B are in the carton with the hardware bag






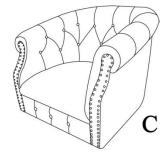

Part	THD Table Header, 10 pt.	Quantity
Α	Wood front leg	2
В	Wood back leg	2
С	Seat	1

Assembly

Assemble the front wood legs(A) and back wood legs. □ Take out the 2 front wood legs (A) and 2 back legs(B) from the carton box, then assemble the legs.

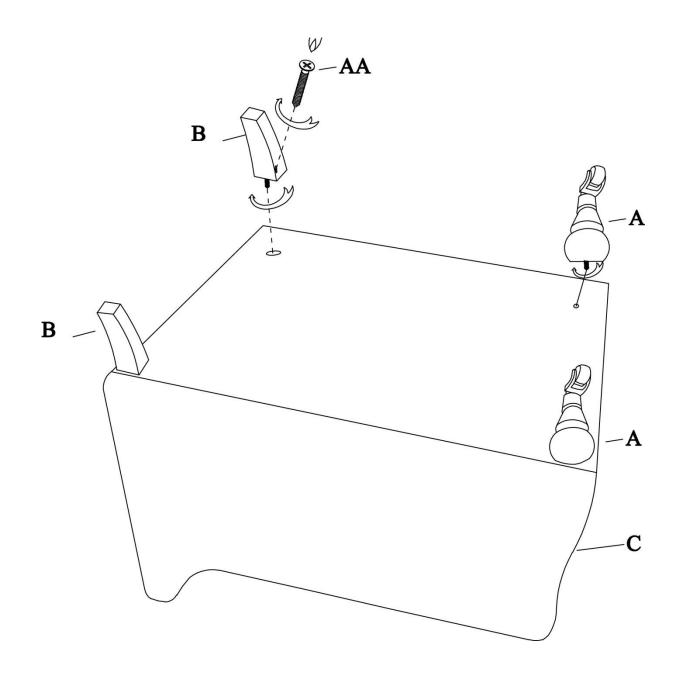

Maintenance

- □ Keep the product from the direct heat, water and sunlight.
- □ Prolonged exposure to heat sources may cause scorching, or even cause color to fade.
- □ Regular vacuuming or light brushing helps to remove dirt and prevent soil build-up, which increase the appearance wear.

Care and Cleaning

- □ Vacuum your product regularly, small dust particles are very abrasive and can wear furniture prematurely.
- □ Don't use harsh chemicals or solvents on your product as this is may damage the material
- □ Marks and pains from pens, crayons and ink makers are difficult to remove, in the event that you product Becomes permanently stained, we recommend that you consult a professional.



Questions, problems, missing parts?

Before returning to the store, call Home Decorators Collection Customer Service.

8 a.m. – 7 p.m., EST, Monday – Friday, 9 a.m. – 6 p.m., EST, Saturday

1-800-998-7021

HOMEDEPOT.COM/HOMEDECORATORS

Retain this manual for future reference