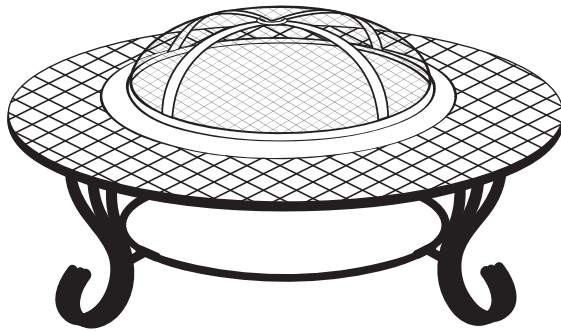 


40 inch Blue Glass Surround Fire Pit

Model: AD389



Important! Please read and follow ALL instructions before assembling or using this product, particularly the safety statements. Failure to follow instructions and warnings could result in damage to property, serious injury or death.

WARNING!

- Fire pit for outdoor use only. Never use in enclosed area. Use in unventilated areas will endanger your life.
- Do not use fire pit on or near combustible surfaces or structures such as wood decks, dry leaves or grass, vinyl or wood siding, etc.
- Keep away from house, garage, balconies, or overhangs.
- Use on level, non-combustible surface only.
- Keep away from all combustible materials and flammable liquids and vapors.
- Never use flammable accelerants, such as: gasoline, alcohol, paint thinners, kerosene, etc. to start a fire. Serious injury or property damage could result.
- Screen is hot when in use! Failure to wear protective gloves could lead to injury.
- Avoid using during dry or windy conditions.
- Keep out of reach of children.
- Do not overfill or use to burn leaves or trash.
- Exercise the same care you would with an open fire.
- Never leave unit unattended while hot or in use.
- Completely extinguish fire before leaving.
- Ashes can remain hot for a long time after fire is extinguished.
- Dispose of cold ashes properly.
- Contact local authorities regarding possible burn restrictions before using product.

General Care Instructions

- Fire bowl may be cleaned with water and mild detergent.
- Fire bowl will change colors after use.
- Do not use abrasive detergents or pads to clean bowl or surround.
- As with any outdoor grill, periodic maintenance is required to return painted steel surfaces to original appearance. Remove any rust with sandpaper or steel brush and repaint with grill paint suitable for high-temperature surfaces. Follow manufacturer's instructions.
- Seasonal maintenance is required on all steel parts to reduce appearance of rust.

 


 



 

Customer Service

Email: customerservice@asiadirectinc.net
Toll Free: (800) 230-6530

Tools Required for Assembly

Phillips Head Screwdriver

Parts List

A	Screen		1	F	Log Grate		1
B	Bowl		1	G	Screen Tool		1
C	Tile Surround		1	H	Storage Cover		1
D	Support Ring		1	I	Phillips Bolt		12
E	Leg		4				

Assembly Instructions

Step 1:

Carefully unpack all parts. Inspect for missing parts or damage.

Step 2:

Carefully place Tile Surround (C) upside down on flat, non abrasive surface.

Step 3:

Align holes of Leg (E) with bolt holes on underside of tile surround. Insert two bolts to **LOOSELY ATTACH LEG** to tile surround - **HAND TIGHTEN BOLTS ONLY**. Overtightening bolts will make it difficult to attach leg Support Ring to complete assembly.

Repeat step for remaining three legs.

Step 4:

Align holes of Support Ring (D) to holes of leg brackets. Insert bolts to attach legs to support ring, **HAND TIGHTEN BOLTS ONLY** until all hardware is in place.

With all stand hardware in place, tighten all hardware with Phillips head screwdriver. Be careful not to strip bolts by overtightening.

Step 5:

Carefully turn assembled stand right side up. Place Bowl (B) on stand. Place Log Grate (F) in bottom of fire bowl. Place Spark Screen (A) on fire bowl.

READ ALL SAFETY WARNINGS BEFORE USE.

