

TROUBLESHOOTING:

	Possible Cause	Corrective Action
Bulb will not light.	1. Bulb is burned out.	1. Replace light bulb.
	2. Power is off.	2. Make sure power supply is on.
	3. Faulty wire connection.	3. Check wiring.
Fuse blows or circuit breaker trips when light is turned on.	Crossed wires or power wire is grounding out.	Check wire connections.

PRODUCT MAINTENANCE:

1. To clean the outside of the fixture, use a dry or slightly dampened clean cloth (use clean water, never a solvent) to wipe the shade and surface of the fixture.
2. To clean the inside of the fixture, first disconnect power to the fixture by turning off the circuit breaker or by removing the fuse at the fuse box. Next, use a dry or slightly dampened clean cloth (use clean water, never a solvent) to wipe the inside shade and interior surface of the fixture.
3. Do not use any cleaners with chemicals, solvents or harsh abrasives. Use only a dry soft cloth to dust or wipe carefully.

LIMITED WARRANTY


The manufacturer warrants this lighting fixture to be free from defects in materials and workmanship for a period of five (5) years from date of purchase. This warranty applies only to the original consumer purchaser and only to products used in normal use and service. If this product is found to be defective, the manufacturer's only obligation, and your exclusive remedy, is the repair or replacement of the product at the manufacturer's discretion, provided that the product has not been damaged through misuse, abuse, accident, modifications, alterations, neglect or mishandling. This warranty shall not apply to any product that is found to have been improperly installed, set-up, or used in any way not in accordance with the instructions supplied with the product. This warranty shall not apply to a failure of the product as a result of an accident, misuse, abuse, negligence, alteration, or faulty installation, or any other failure not relating to faulty material or workmanship. This warranty shall not apply to the finish on any portion of the product, such as surface and/or weathering, as this is considered normal wear and tear. **The manufacturer does not warrant and specially disclaims any warranty, whether express or implied, of fitness for a particular purpose, other than the warranty contained herein. The manufacturer specifically disclaims any liability and shall not be liable for any consequential or incidental loss or damage, including but not limited to any labor expense costs involved in the replacement or repair of said product.**



INSTRUCTION MANUAL

Interior Decorative Lighting

Home Depot SKU (724-245) UPC (773546211932)

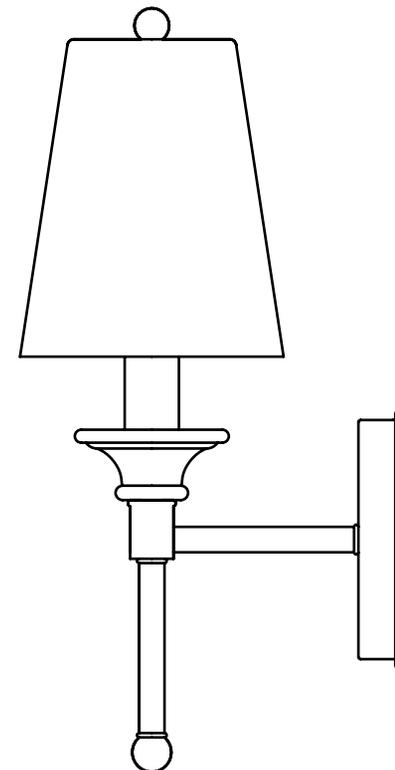

Thank you for purchasing this Hampton Bay interior decorative lighting. This product has been manufactured with the highest standards of safety and quality.

FEATURES:

A satin nickel finish with elegant white glass makes this expressive sconce a welcome addition to the home.

QUESTIONS, PROBLEMS, MISSING PARTS:

Before returning to your local Home Depot, please call our Customer Service Team at 1-877-527-0313 or visit www.homedepot.com. Please reference your SKU# (724-245) UPC# (773546211932).


CAUTION:

1. Before starting installation of this fixture or removal of a previous fixture, disconnect the power by turning off the circuit breaker or by removing the fuse at the fuse box.
2. CONSULT A QUALIFIED ELECTRICIAN IF YOU HAVE ANY ELECTRICAL QUESTIONS.
3. If you have any non-electrical questions about this fixture, please contact our Customer Service Team at 1-877-527-0313 or visit www.homedepot.com. Please reference your SKU# (724-245) UPC# (773546211932).
4. Keep your receipt and these Instructions for Proof of Purchase.


TOOLS REQUIRED FOR ASSEMBLY & INSTALLATION (not included):



Gloves

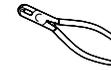

Wire Strippers

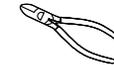


Wire Cutters



Ladder



Flathead Screwdriver

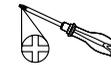

Phillips Screwdriver



Electrical Tape



B10 60W Bulb (not included)

ADDITIONAL PARTS (included):



1. Finishing Screw



2. Glass Shade



3. Rubber Gasket




4. Bracket



5. Junction Box Screws (x2)



6. Screws (x2)

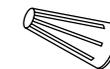

7. Wire Connectors (x3)



8. Universal Cross Bar



9. Decorative Caps (x2)



10. Finial

ASSEMBLY INSTRUCTIONS:

1. Carefully unpack the fixture; lay out all parts on a clean surface.
2. Firmly attach the Screws (6) to the Universal Cross Bar (8) with their heads facing opposite to the Ground Screw, matching with the spacing between mounting holes of the Canopy.
3. Firmly attach the Universal Cross Bar (8) to the Junction Box using the Junction Box Screws (5); ensure that the head of the Ground Screw faces out.
4. Rigidly connect the white wires from the Canopy and the Junction Box (drawn through the central hole of the Universal Cross Bar) using a Wire Connector (7); reinforce this connection by wrapping Electrical Tape around this junction.
5. Repeat Step 4 above for the black wires coming from the Canopy and the Junction Box (drawn through the central hole of the Universal Cross Bar).
6. Repeat Step 4 above for the grounding wires coming from the Canopy and the Junction Box (drawn through the central hole of the Universal Cross Bar (8); alternately, connect them to the Ground Screw of the Universal Cross Bar (8).

Note: If you have questions that are electrical in nature, consult your local electrical code or a qualified electrician for approved grounding methods.

7. Push all electrical wires and connections into the Junction Box (through the central hole of the Universal Cross Bar); ensure that they are not damaged.
8. Push the Canopy to align its mounting holes with the Screws (6) of the Universal Cross Bar (8) and attach it firmly flush with the wall using the Decorative Caps (9).
9. Firmly attach the Finial (10) to the bottom of the Frame (part of Canopy).
10. Locate the Bracket (4) over the Socket (part of Frame)
11. Install the Light Bulb (Type: B10, 60 Watts max, not included) into the Socket (part of Frame).
12. Place the Glass Shade (2) and rubber gasket (3) in place over the Bracket (4) and attach it firmly in place using the Finishing Screw (1).
13. Turn ON the power at the circuit breaker or fuse box. Operate the light switch, to turn the fixture ON and OFF.

ASSEMBLY:

