
## **Replacement Parts List**



Glacier Bay Pull-out laundry faucet

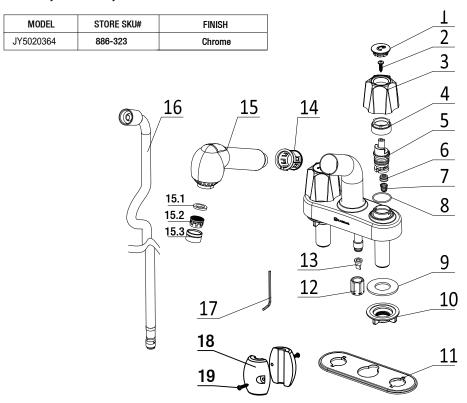

Many replacement parts can be purchased online or at your local store. Please use the table below to identify the part SKU number needed, go to HOMEDEPOT.COM, and check for online and store availability. If you can't find the part you are looking for, please call 1-855-HD-GLACIER.

Part	Description	Part #	Internet SKU #	Store SKU #
1	Button (cold)	RP040060C		
	Button (cold)	RP040060H		
2	Handle screw	RP020311		
3	Handle	RP037076*		
4	Bonnet nut	RP058449		
5	Cartridge	RP530080N	203258608	
6	Washer	RP031203N		
7	Spring	RP025015		
8	0-ring	RP027007		
9	Washer	RP024273		
10	Mounting nut	RP058432	203193994	
11	Gasket	RP064081		

Part	Description	Part #	Internet SKU #	Store SKU #
12	Connector	RP045096		
13	Check valve	RP031300N		
14	Hose connection	RP056084		
15	Pull out sprayer	RP551200*		
15.1	Aerator cover	RP054028*		
15.2	Aerator	RP052032	203673072	
15.3	Gasket	RP031296		
16	Pull out hose	RP300103N		
17	Wrench	RP026000NI		
18	Weight	RP098000	,	
19	Weight screw	RP020180		

\*Specify Finish

Rev. 01