


## PARTS LIST

1	Blade – moving	9	Pruner bracket
2	Blade – fixed	10	Power connector
3	On/Off trigger switch	11	Telescopic pole
4	Safety lock button	12	Handle safety lock button
5	Blade guard	13	Handle On/Off trigger switch
6	Battery	14	Clamp coupling
7	Charger	15	Rotating angle button
8	Pruner cover		

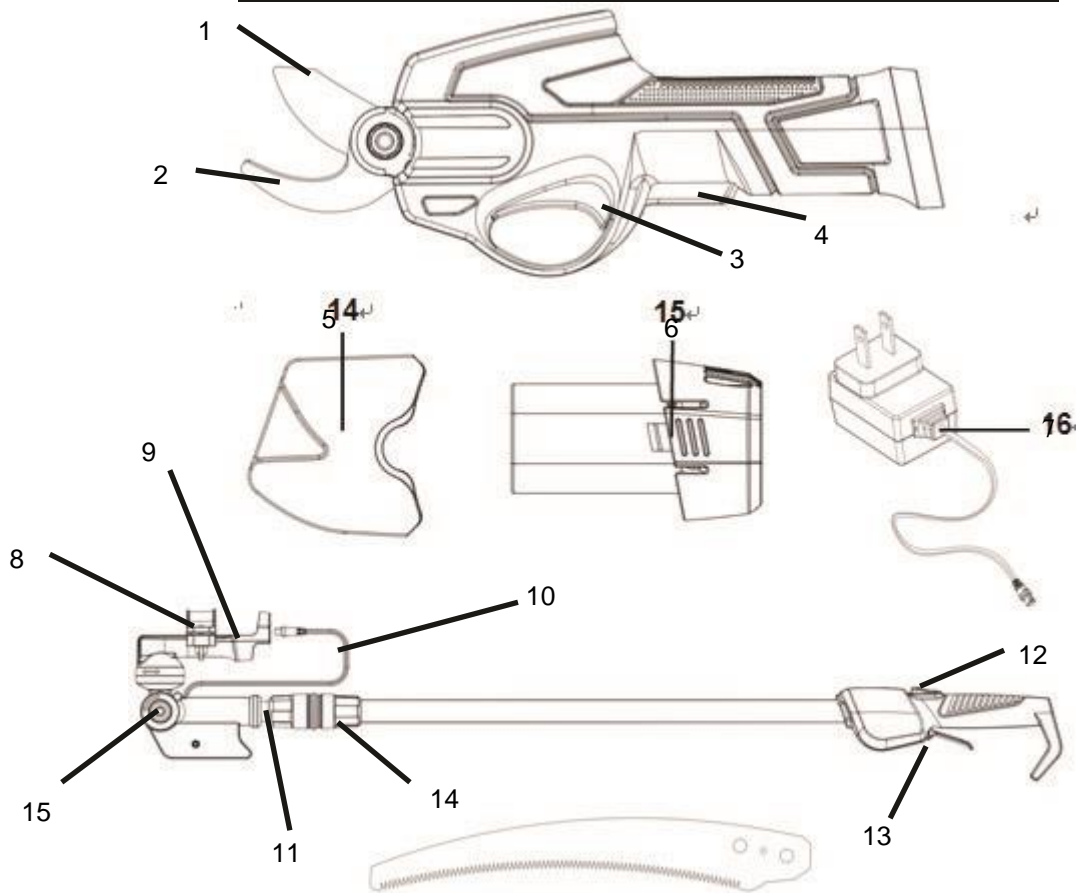

4 Model  
PR17216PS

## GENERAL INSTRUCTIONS

**PACKING LIST**

- Pruner
- Telescopic Pole
- Pruner Bracket
- Blade Guard
- Battery Charger
- Battery
- Owner's Manual