



Let's Get Started

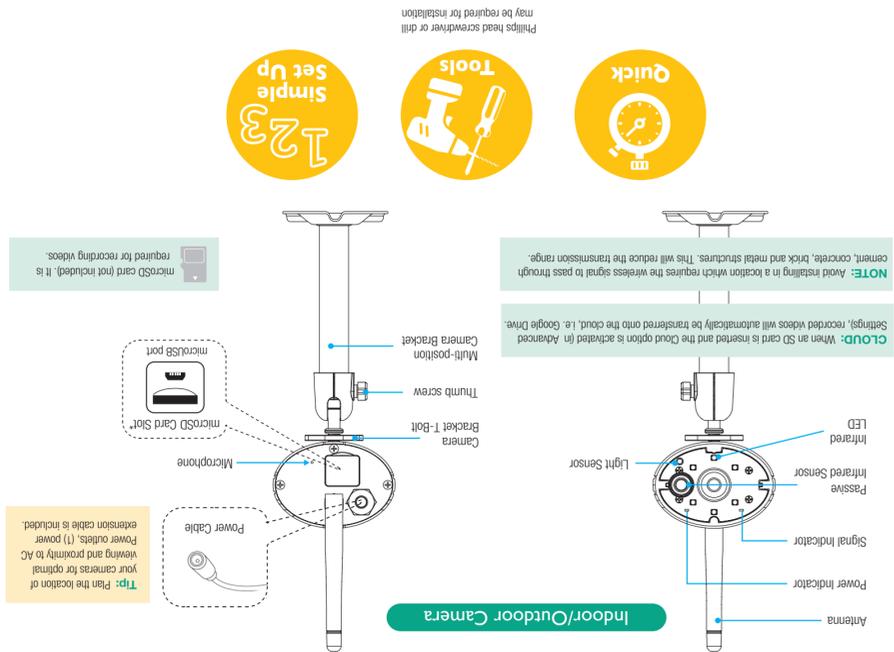

- ### Model AWF61
- #### IN THE BOX
- Indoor/Outdoor camera with multi-position bracket
 - AC power adapter
 - Antenna
 - MicroUSB / RJ45 cable (for optional manual connection)
 - Screw/Anchor Kit
 - Quick Start Guide
 - Power extension cable

CAMERA INSTALLATION + SETUP

CAMERA MOUNTING

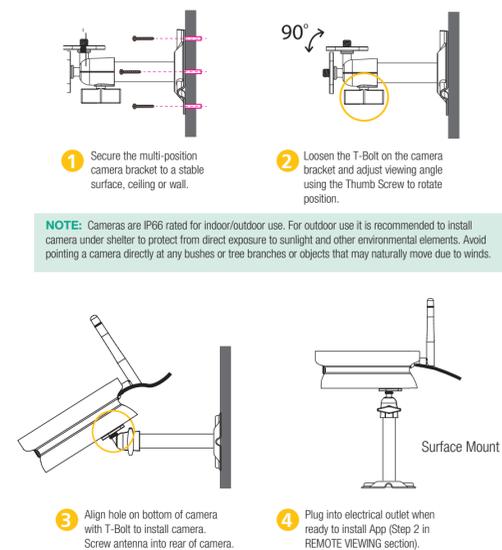

NOTE: Cameras are IP66 rated for indoor/outdoor use. For outdoor use it is recommended to install camera under shelter to protect from direct exposure to sunlight and other environmental elements. Avoid pointing a camera directly at any bushes or tree branches or objects that may naturally move due to winds.

- Recommendations for best system performance:**
- **iOS** 6.0 or above.
 - **Android:** Android™ smartphone or tablet (version 2.3x or above).
 - **Storage:** Class 10 microSD memory card (up to 128 GB).
 - **Bandwidth:** 512Kbps or above upload/download speed suggested.

SIGHTHD

Remote Monitoring Anytime from Anywhere

1080p Indoor/Outdoor Wi-Fi Camera



Model AWF61

QUICK START GUIDE

REMOTE VIEWING

FREE APP DOWNLOAD

Available on the **App Store** and **Google play**

DEVICE SETUP

- From your smart device, DOWNLOAD and INSTALL the free **ALC SightHD App**.
- Plug camera into an electrical outlet (allow the camera up to 90 seconds to boot up).
- On your device, open the Settings App. Tap Wi-Fi and under Choose A Network, select the HD-XXXXXX Network (X represents the numbers located on the DID barcode sticker on the back of your camera).
- If asked for a password, enter, "12345678". Tap Join/Connect.
- Now Launch the ALC SightHD App and the Setup Wizard will appear.
- Tap **+** to start the Wizard and select WiFi Cameras.
- iOS Only:** Once the screen indicates the camera is connected, tap Live View.
- iOS Only:** Once the camera is found, the screen will show a Live View briefly before moving to a setup screen.

- At the next screen enter a new password/security code and remember it or write it down. Tap Wi-Fi Setting or OK.
- Select your home network from the menu, and then enter your home network's Wireless Password. Tap OK.
- Android Only:** Tap Live View.
- The system will reboot the camera. The reboot will be complete when the App finishes counting down from 90. Tap still image for live video.

NOTE: Screen shots and icons may vary due to continuous updates to App and software development.

LIVE VIEWING

LIVE VIEW

- Tap preview PICTURE

SNAP SHOT

- Tap for SNAPSHOT of live images in Live View. Images automatically save to smartphone's camera roll or gallery.
- Tap to RECORD. One-minute recordings save to microSD card slot on the rear of camera, see diagram page for location (microSD card not included) as well as your cloud setting (if activated).

LIVE VIEW RECORDING on microSD CARD*

- Lift cover and insert a microSD card into the rear of camera. A Class 10 microSD card is required. This camera supports up to 128GB microSD card.
- Manually RECORD video from Live View by tapping Record icon. Recording will stop after 1 minute.

*microSD card (not included). It is required for recording videos.

PLAYBACK

- Tap EDIT SETTING icon and then EVENT LIST icon.
- Select the Start and Stop date and time on the Select Event Filter and tap OK.
- Tap the FILE that you want to playback from the list.

ADVANCED FEATURES SETTINGS

On the Home Page (not Live View) Tap EDIT SETTING at the bottom of the screen, then tap SETTINGS icon and then tap ADVANCE (the default password is 123456) to see the Advanced Feature options:

- Sensitivity Setting (Motion Recording)
- Recording Setting
- Time Zone Setting (ensure your time is correct)
- Email Setting
- Video Quality Setting
- SDCard Setting

FACTORY DEFAULT/RESET

If setup did not work, reset the camera by inserting a paper clip or similar object into the Reset hole for 10 seconds and the system will start the reset process. The system will restore to factory default settings and you may start the Wi-Fi setup. Remove the partially installed setup by tapping EDIT SETTING on the bottom of the home screen, then tap the Delete icon, then tap Yes. Now you can repeat the installation.

NOTE: Do not submerge camera in water. STRANGULATION HAZARD: Infants have STRANGLED in power cords. Keep power cords more than 3 feet away from cribs. When using your equipment, always follow basic safety precautions to reduce the risk of fire, electric shock and injury to persons. Illustrations are for reference only. Actual product specifications may vary. For additional precautions and product information, please see owner's manual at www.ALCWireless.com/support

For detailed installation and setup, please refer to the Model AWF61 complete User's Guide available on our website: www.ALCWireless.com/support



SCAN TO VIEW COMPLETE USER'S GUIDE

FO | LD

FO | LD