



Operation and Safety Guide

Model #'s 50004-00 & 50013-00

Vendor Website: www.inteccorp.com

Support Phone No. 800-666-1611

! WARNING

SAFETY TOPICS:



To avoid personal injury, do not attempt to operate this equipment until you thoroughly read and completely understand the operator's manual. Please visit <http://www.inteccorp.com/fiberforce/> for additional information.

SAFETY CHECKLIST:



- 1) Read all the instructions before using the insulation blower.
- 2) To reduce the risk of injury, close supervision is necessary when an insulation blower is used near children.
- 3) Do not contact moving parts.
- 4) Only use attachments recommended or sold by the manufacturer.



- 5) Use of Extension and Power Cord:
 - a) This product requires the use of a power cord. In addition to the supplied power cord, care should be exercised in the selection and use of an extension cord.
 - b) The extension cord shall be a grounded 3-wire cord.
 - c) The extension cord should be arranged so that it will not drape over the countertop or tabletop where it can be tripped over, snagged, or pulled on unintentionally (especially by children).
 - d) An outdoor rated extension cord should be used with this machine. An outdoor- use extension cord is marked with suffix letter "W" and with a tag stating "Suitable for Use with Outdoor Appliances."
 - e) The marked electrical rating of the extension cord shall be rated for at least 15 amps.
 - f) To unplug or disconnect: Put the blower and agitator control panel and remote buttons in the stop position before removing plug from outlet.
 - g) Do not unplug by pulling on the power cord. To unplug, grasp the male and female plugs and pull apart.
 - h) Unplug from outlet when not in use and before servicing or cleaning.
 - i) Do not operate any insulation blower with a damaged cord or plug, or after the machine malfunctions or is dropped or damaged in any manner.



- 6) In the case of a non-operable or malfunctioning blower, return the insulation blower to the nearest authorized service facility for examination, repair, or electrical or mechanical adjustment.
- 7) Store insulation blower indoors when not in use. Keep out of the reach of children



- 8) Never operate this equipment if the operator or the machine is standing in water, snow or rain. Do not clean this insulation blower with water spray or the like.
- 9) Connect to a properly grounded outlet only.
- 10) Wear long sleeve shirt, gloves, a hat, safety glasses or goggles, and a nose & mouth dust mask.

WARNING:



- 1) Never reach into the hopper when system is operating.
- 2) Keep all foreign materials out of hopper.
- 3) Stop all motors and disconnect power cord before attempting to remove a foreign object or jam.
- 4) Never point insulation hose in direction of people or pets.

See operational video at <http://www.inteccorp.com/fiberforce/>

Tool Operation:

| Step | Action |
|------|--|
| 1 | Unload machine using safe lifting techniques. Secure hopper base with the four fasteners. Note: Match key slot in base to that of hopper for proper alignment & operation. Position machine in a dry, hazard free environment to allow for suitable material feed and electrical power access. Sweep hand across the filter to clean any foreign materials. |
| 2 | Ensure that all panel switches are in the off position. Using the twist lock power cord supplied, plug the machine into a dedicated 115V 15amp or 20amp circuit. |
| 3 | Install the 2-50' 2-1/2" hose sections. The section with the male & female adaptor goes on the machine first. The other section with the remote plugs into the first hose. Ensure that the retainer snaps into place to prevent hose blow-off. |
| |   |
| 4 | Open the material feed gate by removing the locking pin. <i>Attics:</i> pull slide gate outward to the last hole position, and secure gate by placing pin in the last hole. <i>Walls:</i> Refer to the owner's manual or Intec's website for proper settings. |
| 5 | Ensure the GFCI is reset, reset the agitator circuit breaker & turn on the main circuit breaker. The white 'ready light' on the side of the machine will illuminate. Note: if the white light does not come on, ensure that the hopper is properly positioned with the opening above the circuit breakers. |
| |   |
| 6 | Undo the strap securing the hopper door / loading platform. Lift up on the door slightly and pull forward into the loading position. Directions for loading the machine are printed on the loading platform. |
| 7 | Caution: Never let the plastic packaging enter the hopper. Caution: Never push down on insulation when in hopper. <i>Fiberglass:</i> Cut bag of insulation in half. Place open end of 1/2 bag to the left or right side of the loading platform. Slice plastic with cutting tool and let insulation expand into hopper. <i>Cellulose:</i> Remove packaging. Place cellulose bale into hopper. |
| 8 | Hose operator takes the hose to the location for insulation blowing. Use the remote to turn machine on to blow insulation material. Hopper Operator continues to feed material into hopper until job is complete. |
| |    |
| 9 | At completion, use the remote or panel switch to turn machine off. Remove any insulation still in the system. Return machine, two hose sections, and power cord to the rental center. |