



### **Cleaning instructions for treadmill acrylic book holder**

Using a soft cloth or sponge, clean the holder with liquid soap, detergent, or diluted water-soluble household cleaners. Completely remove residue of any cleaning products with water and thoroughly dry with a clean cloth or paper towel.