

# WEATHERVANE INSTRUCTIONS

16777

## WEATHERVANE PARTS

- A. Arrow
- B. Mast
- C. Base Assembly
- D. Bolt of Base Assembly
- E. East/West Directional
- F. North/South Directional
- G. Set Screw of N/S Directional

## ASSEMBLY STEPS

1. Loosen bolt (D) on base assembly.
2. Attach mast and base assembly to structure in desired location with 6 screws or bolts (not provided). Be sure to use appropriate hardware for type of roof material and size and weight of weathervane. Holding mast vertical (90°) firmly tighten bolt (D) of base assembly.
3. Holding E/W directional (E) onto mast with groove of directional located above collar at middle of mast. Slide N/S directional (F) down on mast until it interlocks with directional (E). Rotate both directionals until the "N" of the N/S directional (F) points in the direction of North. Tighten set-screw (G).
4. Place arrow over mast pin. No lubrication is necessary.

