


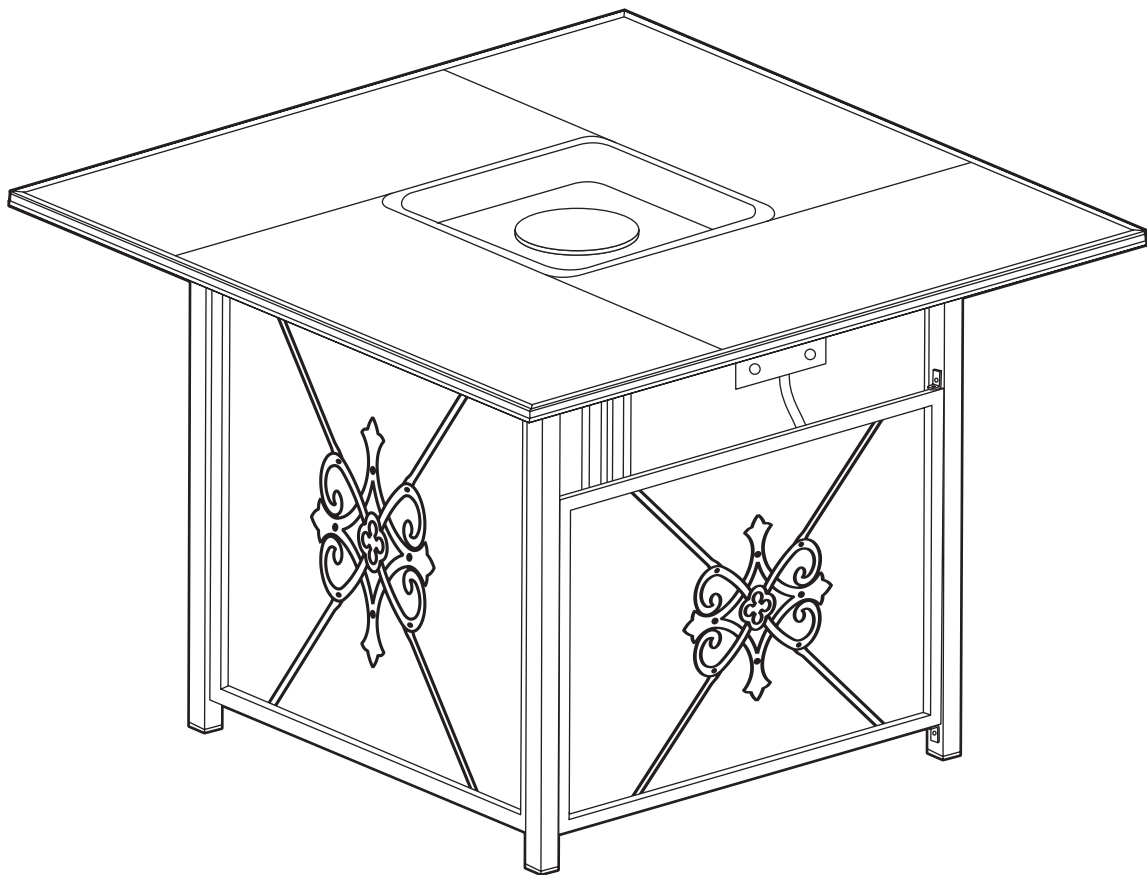

Item #1000051056
Model #S5-BRH00800

USE AND CARE GUIDE

NILES PARK FIREPIT



Questions, problems, missing parts? Before returning to the store,
call Hampton Bay Customer Service
8 a.m. - 6 p.m., EST, Monday - Friday

855-HD-HAMPTON

HAMPTONBAY.COM



THANK YOU

We appreciate the trust and confidence you have placed in Hampton Bay through the purchase of this firepit. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing Hampton Bay!

Table of Contents


Safety Information	2	Pre-Assembly	5
Save These Instructions.....	2	Planning Assembly.....	5
Important Safety Information.....	2	Specifications	5
Important Safety Information - Propane (LP) Gas.....	3	Hardware Included.....	5
Warranty	4	Package Contents	6
2-Year Limited Warranty	4	Assembly	7
What Is Covered.....	4	Lighting a Fire	10
How Do I Obtain Warranty Service?.....	4	Flame Appearance.....	10
Warranty Limitations	4	Care and Cleaning	10
Warranty Exclusions	4	Troubleshooting	11

Safety Information



SAVE THESE INSTRUCTIONS


IMPORTANT SAFETY INFORMATION


- The installation must conform with local codes or, in the absence of local codes, with the National Fuel Gas Code, ANSI Z223.1/ NFPA 54; International Fuel Gas Code. ; Natural Gas and Propane Installation Code, CSA B149.1; or Propane Storage and Handling Code, B149.2, as applicable.
- The appliance must be isolated from the gas supply piping system by closing its equipment shutoff valve during any pressure testing of the gas supply system at test pressure equal to or less than 1/2 psi (3.5kPa).
- The appliance area must be kept clear and free from combustible materials, gasoline and other flammable vapors and liquids.
- Do not use this appliance if any part has been under water. Immediately call a qualified service technician to inspect the appliance and to replace any part of the control system and any gas control which has been under water.
- Children and adults should be alerted to the hazards of high surface temperatures and kept at a safe distance to avoid burns or clothing ignition.
- Young children should be carefully supervised when they are anywhere near the appliance.
- Clothing or other flammable material should not be hung from the appliance, or placed on or near the appliance.
- Any screen or guard removed for servicing an appliance must be replaced prior to operating the appliance.
- Installation and repair should be done by a qualified service person. The appliance should be inspected before use and at least annually by a professional service person.
- More frequent cleaning may be required as necessary. It is imperative that the control compartments, burners and circulating air passageways of the appliance be kept clean.
- Do NOT burn solid fuels in this gas fireplace.


 **DANGER:** If you smell gas:


1. Shut off gas to the appliance.
2. Extinguish any open flame.
3. If odor continues, keep away from the appliance and immediately call your gas supplier or fire department.


	DANGER	CARBON MONOXIDE HAZARD.
		This appliance can produce carbon monoxide which has no odor.
		Using it in an enclosed space can kill you.
		Never use this appliance in an enclosed space such as a camper, tent, car or home.

 **WARNING:** Improper installation, adjustment alteration, service or maintenance can cause injury or property damage. Read the installation, operating and maintenance instructions thoroughly before installing or servicing this equipment.

 **WARNING:** Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance. An LP cylinder not connected for use shall not be stored in the vicinity of this or any other appliance.

 **WARNING:** For outdoor use only.

 **WARNING:** For use with a 20 lb (9 kg) propane cylinder with a Type 1 connection.

 **WARNING:** Use factory-approved replacement parts and accessories only. Use of unapproved parts or accessories can void the warranty on this product and result in a hazardous condition. Please contact us for information regarding replacement hoses, thermocouples, electrodes, ignition modules, lava rocks, logs, fire ice, etc.

Safety Information (continued)


IMPORTANT SAFETY INFORMATION - PROPANE (LP) GAS

A self-contained LP gas cylinder for use with this appliance must have a capacity of 20 lbs. and must be equipped with a Type 1 connector and an OPD (overfill protection device).

The LP gas supply cylinder used must be constructed and marked in accordance with the specification for LP-gas cylinders of the U.S. Department of Transportation (DOT) or the National Standard of Canada, CAN/CSA-B339, Cylinder, Sphere and Tubes for the Transportation of Dangerous Goods.

- The cylinder supply system must be arranged for vapor withdrawal.
- The cylinder used must include a collar to protect the cylinder valve.
- This appliance shall be used only outdoors in a well-ventilated space and shall not be used in a building, garage or any other enclosed space.
- When this appliance is not in use, the gas must be turned off at the supply cylinder.
- Storage of this appliance indoors is permissible only if the cylinder is disconnected and removed from the appliance.
- Cylinders must be stored outdoors in a well-ventilated area out of the reach of children. Disconnected cylinders must have threaded valve plugs tightly installed and must not be stored in a building, garage or any other enclosed areas.

CSA (Canadian Standards Association) certified to ANSI Z21.97 CSA 2.41-2012 "Outdoor Decorative Gas Appliances".

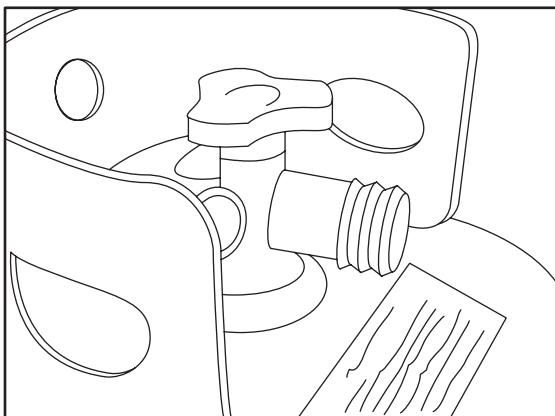

CAUTION: The propane gas pressure regulator provided with this appliance must be used. This regulator is set for an outlet pressure of 11 in. water column.



CAUTION: This outdoor gas appliance is not intended to be installed in or on recreational vehicles and/or boats.



CAUTION: Before each use of this gas appliance, open the LP (Liquid Propane) tank drawer and inspect the LP hose. If there is evidence of excessive abrasion or wear, or the hose is cut, it must be replaced prior to the gas appliance being put into operation. Use only the replacement hose assembly specified in this manual. Inspect the burner before each use of the appliance. The burner must be replaced prior to the appliance being put into operation if it is evident that the burner is damaged. Use only the burner listed in these instructions.



CAUTION: Keep the fuel supply hose away from any heated surfaces.

Warranty

2-YEAR LIMITED WARRANTY

WHAT IS COVERED

The item you have purchased is warranted against defects in materials and workmanship for the following parts as outlined below only when the unit is installed and operated in accordance with the instructions in this Owner's Manual and in compliance with local building and fire codes:

- Burner Assembly
- Firepit Base
- Firepit Top

HOW DO I OBTAIN WARRANTY SERVICE?

To obtain warranty service, you must contact our customer service center within the relevant warranty period and provide us with a copy of your dated register receipt as proof of the purchase date. We reserve the right to request photographs and/or return of the defective item(s) and/or such other evidence relating to any claim as we shall reasonably require. Please call our customer service center at 1-855-HD-HAMPTON for additional warranty claim details and procedures.

WARRANTY LIMITATIONS

This warranty is subject to the limitation set forth above. In addition, this warranty is made to the original purchaser only and is effective only if items are purchased from one of our authorized dealers. This warranty is not transferable. For warranty replacements based on warranty claims submitted within two (2) years of purchase, we will not be responsible for charges associated with shipments outside continental North America at any time or for any reason.

WARRANTY EXCLUSIONS

This warranty is subjected to the exclusions set forth above. In addition, the following are excluded from coverage under this warranty: any item used for commercial, contract or any other non-residential purpose; clearance items, display models or items purchased "as is"; freight damage; items subject to misuse, abuse, neglect or lack of proper care or maintenance (including without limitation as provided in any "care and maintenance guide" or similar information we provide); normal wear and tear; damage caused by acts of nature, acts of force majeure, vandalism, fire or other causality, or improper assembly; hardware against corrosion or rusting; purchased or replacement parts; and all plastic parts. Also excluded are loss of use or time; inconvenience; money; travel; packaging; or incidental, special or consequential damages of any kind. Replacement of defective items or parts as provided herein shall constitute your sole and exclusive remedy for items which are not as warranted. In no event shall our responsibility exceed the purchase price of the item found to be other than as warranted. This warranty is the exclusive statement of your rights with respect to items you have purchased and supersedes any other express warranty or statement, written or oral, made in connection with the purchase and sale of such items. The term "item" when used herein in the singular refers to the specific piece found to be defective, and not to the entire set of which the item is a part.

Some states do not allow exclusion or limitation of incidental or consequential damage, so that limitation may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state

Contact the Customer Service Team at 1-855-HD-HAMPTON or visit www.hamptonbay.com.

Pre-Assembly

PLANNING ASSEMBLY

Identify parts packed in the carton against the parts list. Remove all protective materials and set parts on a flat, non-abrasive surface. If any part appears missing or damaged, do not assemble or use this product. Contact the Customer Service Team at 1-855-HD-HAMPTON.


SPECIFICATIONS

Input	40,000 BTU/hr	30,000 BTU/hr Low fire
Propane Regulator Pressure	11 in. water column	
Clearances to Combustible Surfaces	Sides: 24 in./61 cm	Top: 72 in./183 cm

HARDWARE INCLUDED




NOTE: Hardware shown to actual size.

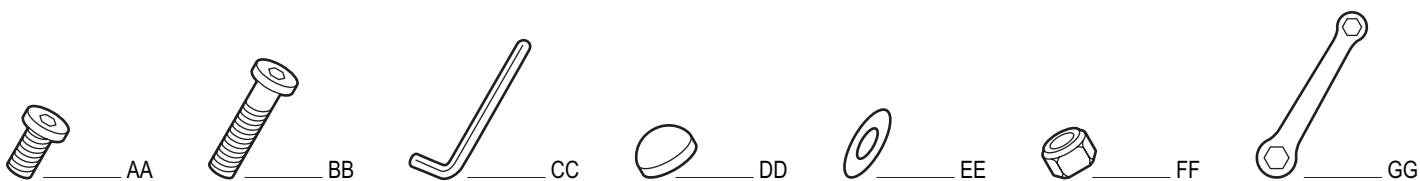

Part	Description	Part #	Quantity
AA	1/4 in. x 15 mm bolt	HW0034	12
BB	1/4 in. x 45 mm bolt	HW0793	4
CC	Hex wrench	HW0006	1
DD	Bolt cover	HW0105	16
EE	Washer	HW0004	16
FF	Nut	HW0717	2
GG	Wrench	HW0008	1

Pre-Assembly (continued)

PACKAGE CONTENTS

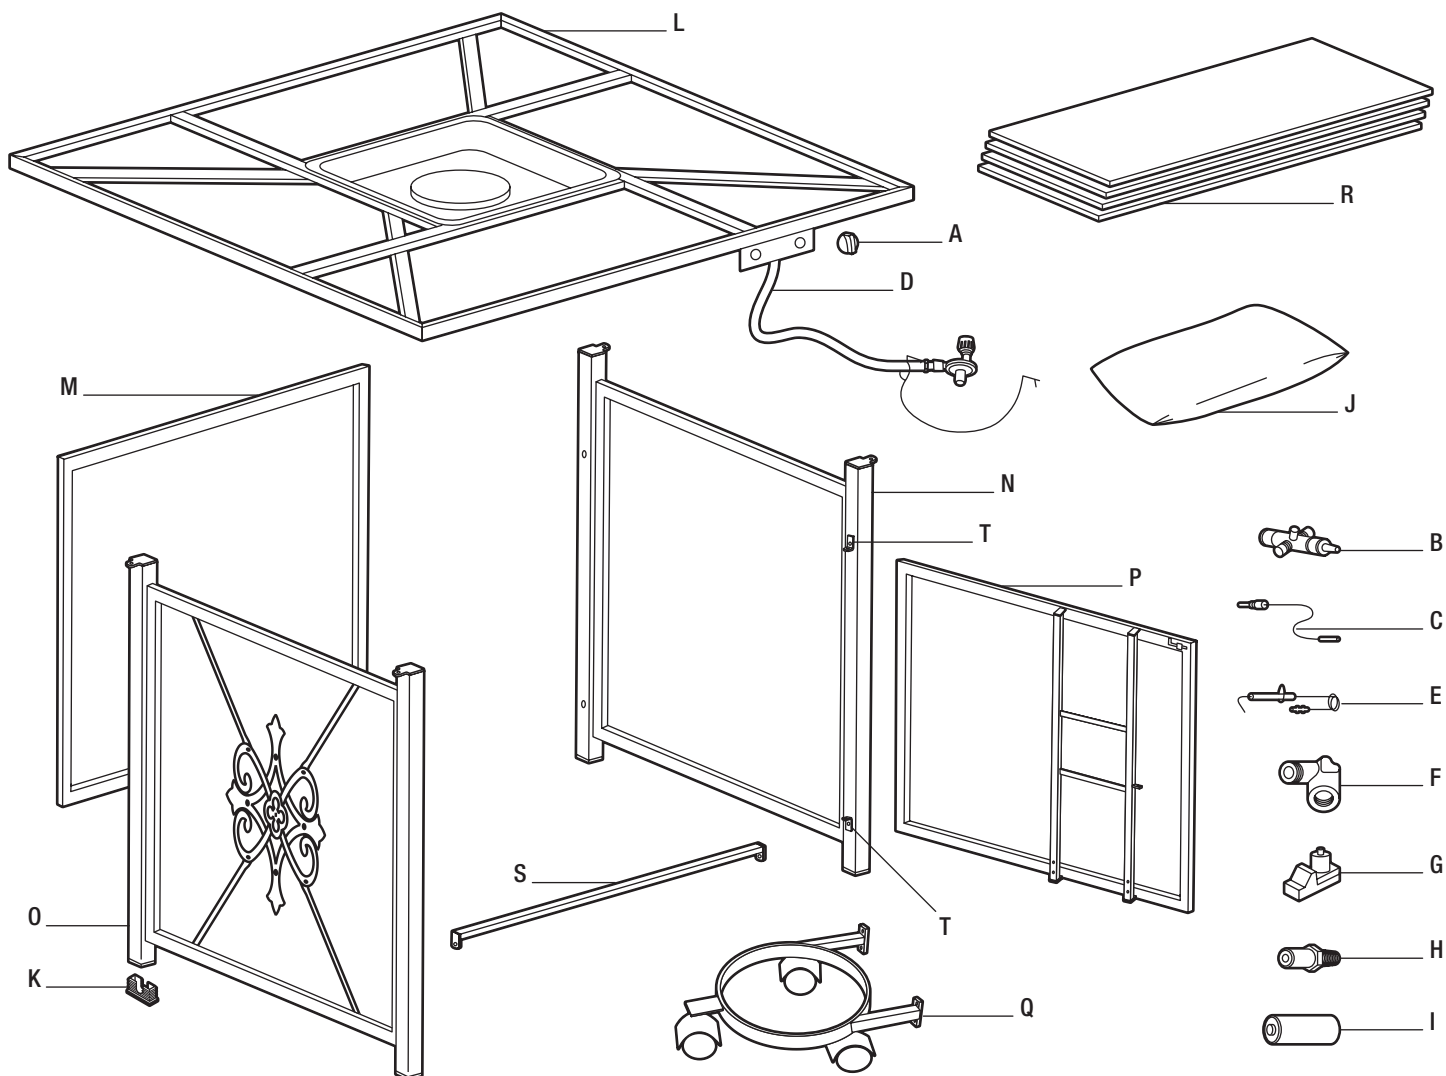

Part	Description	Part #	Quantity
A	Control knob*	FP0245	1
B	Gas valve*	FP0307	1
C	Thermocouple*	FP0004	1
D	LP Regulator hose	FP0308	1
E	Electrode*	FP0003	1
F	Orifice elbow*	FP0310	1
G	Ignition module*	FP0006	1
H	Propane orifice*	FP0312	1
I	AAA Battery (1.5V)*	HW0705	1
J	Lava rock set	FP0002	1

Part	Description	Part #	Quantity
K	Footcap	FC0743	4
L	Tabletop	FP1169	1
M	Back panel	FP1170	1
N	Left side panel	FP1171	1
O	Right side panel	FP1172	1
P	Door panel	FP1173	1
Q	LP support	FP1174	1
R	Tile	FP1175	4
S	Middle support	FP1176	1
T	Bottom/top connector*	FP1124/FP1125	1

* Preassembled Parts


Assembly

1 Assembling the side panels

- Attach the back panel (M) to the left and right side panels (N and O) using four ¼ in. x 45 mm bolts (BB) and washers (EE). Guide the bolts (BB) through the holes in the back panel (M) and into the pre-drilled holes in the side panels (N and O). Hand tighten only.




NOTE: Bolt covers (DD) are not added until step 9. They are shown in the illustrations prior to step 9 to illustrate their proper locations.

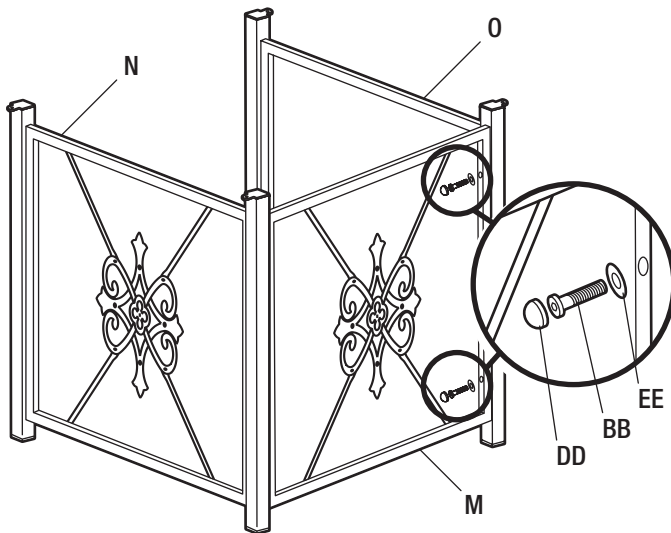


2 Attaching the middle support

- Attach the middle support (S) to the side panels (N and O) using two ¼ in. x 15 mm bolts (AA) and washers (EE). Guide the bolts (AA) through the holes in the middle support (S) and into the pre-drilled holes in the side panels (N and O). Hand tighten only.

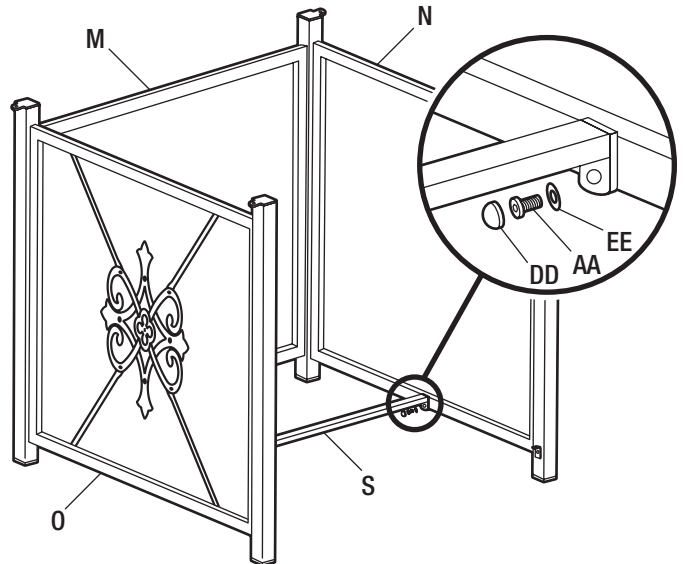


3 Attaching the door panel

- Attach the "L" connector of the door panel (P) to the right side panel (N) using a ¼ in. x 15 mm bolt (AA) and washer (EE). Guide the bolt (AA) through the hole in the "L" connector portion of the door panel (P) and into the pre-drilled hole in the right side panel (N). Do not over tighten.

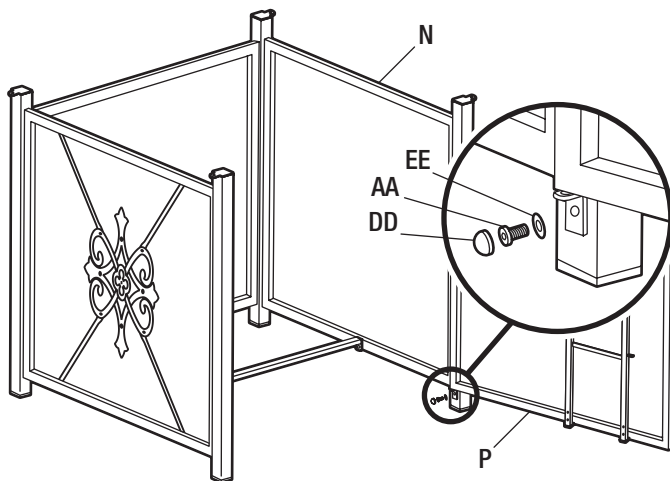

4 Securing the door panel


- Attach the top of the door panel (P) to the right side panel (N) using a ¼ in. x 15 mm bolt (AA) and washer (EE). Do not over tighten.

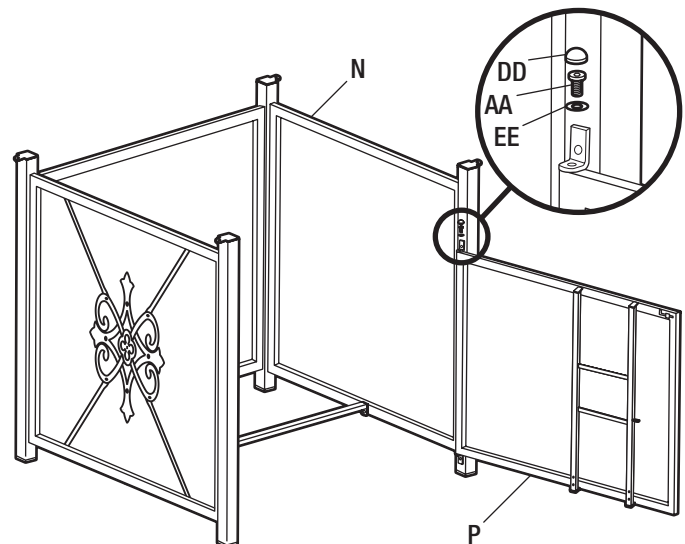

Assembly (continued)


5 Attaching the table top

- With the help of another person, carefully place the table top (L) onto the assembly. After making any necessary adjustments to the alignment of the table top and the assembled base, use four ¼ in. x 15 mm bolts (AA) and washers (EE). Guide the bolts (AA) through the holes in the side panels and into the pre-drilled holes under the table top (L). Do not tighten completely.

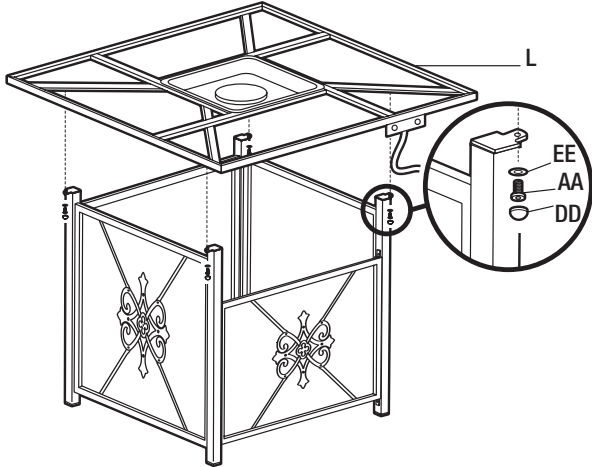


6 Attaching the LP support

- Attach the LP support (Q) to the door panel (P) using four ¼ in. x 15 mm bolts (AA) and washers (EE). Do not over tighten.

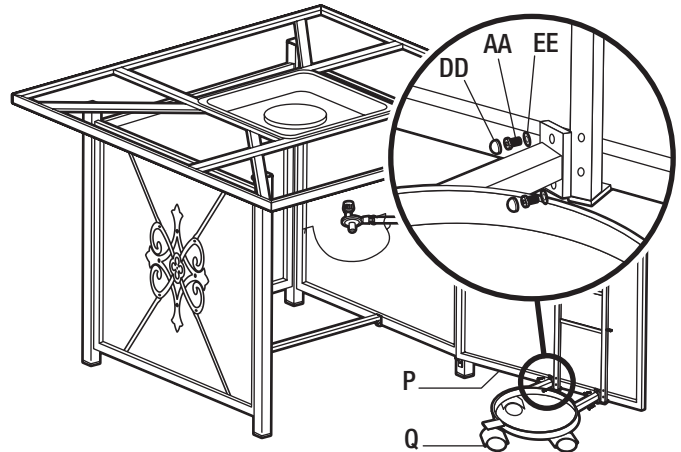


7 Placing the gas tank

- Place a gas tank (not included) onto the LP support (Q).

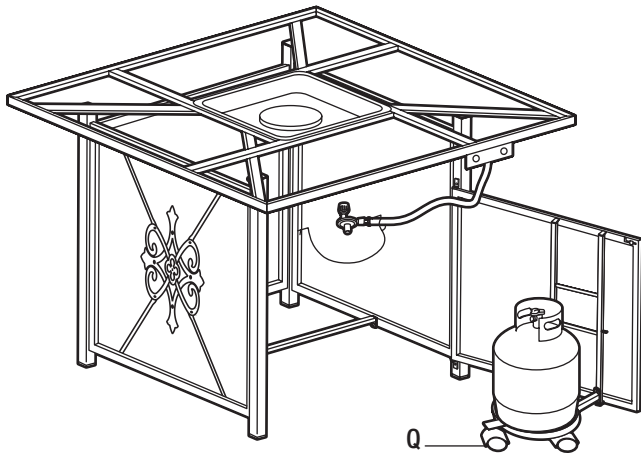

8 Connecting the gas tank


- Attach the metal rings attached to the LP regulator hose (D) into the holes of the door panel (P) and secure with nuts (FF). Then use the hex wrench (CC) to screw the ¼ in. x 5 mm nut on the gas tank. Connect the regulator hose (D) to the tank. Screw the black handle clockwise to tighten. Turn the handle counterclockwise to remove. The hose must point down. Check that the valve is turned all the way clockwise to the "OFF" position.

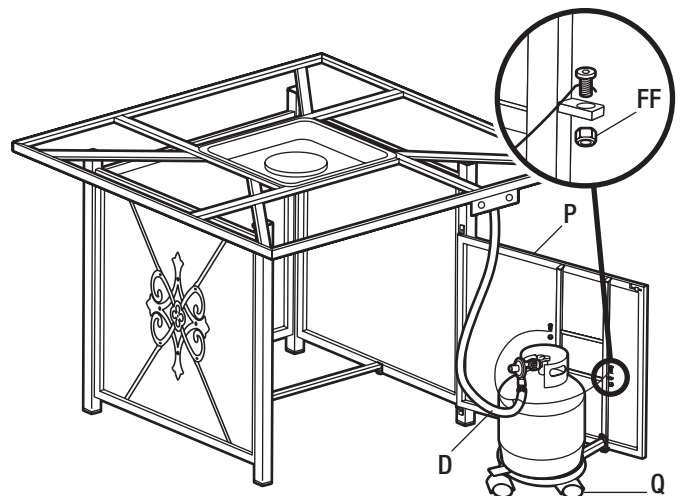

Assembly (continued)


9 Tightening bolts and placing the tiles

- After making any necessary adjustments to the parts, use the hex wrench (CC) to tighten all bolts (AA and BB). Tighten each bolt a few revolutions at a time. Repeat until all bolts are tight. Do not over tighten. Over tightening may strip bolts. Cover all bolts with covers (DD). See the illustrations in steps 1 - 8 for proper placement of the bolt covers (DD).
- Note the clear bumpers spaced evenly throughout the inside of the table top. Carefully place tiles (R) inside the table top, resting on the clear bumpers.

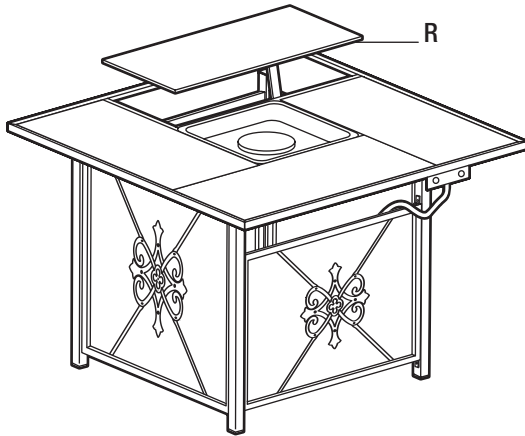

10 Placing the lava rocks

- Pour the lava rocks (J) into the burner. Completely cover the burner.
- Remove the cardboard cover (1) from the ignition well.

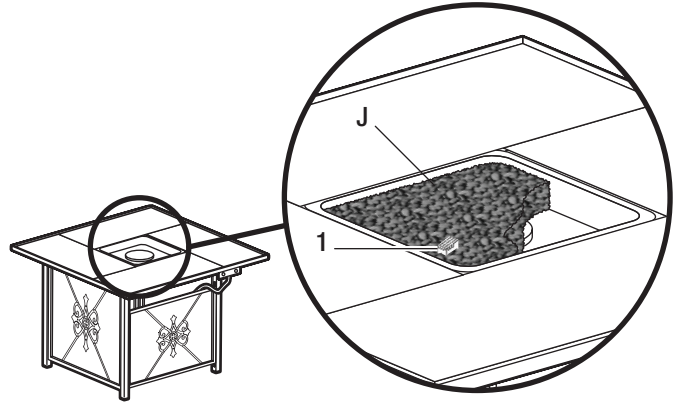


11 Testing for leaks

- Open the tank valve. Apply a solution of soapy water to the tank-regulator connection and to the valve-hose connection to check for leaks. If soap bubbles continue to form, the connection has a leak. If a leak is found, close the tank valve and tighten all connections.



WARNING: Never use a flame to check for leaks.

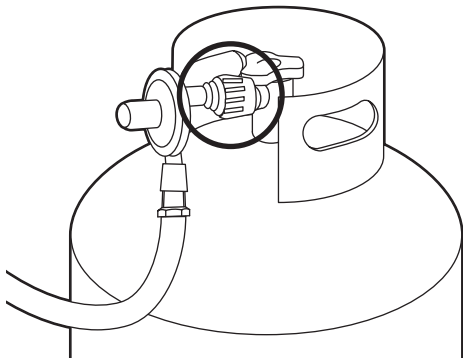

12 Installing the battery

- Make sure the control knob is in the "OFF" position. Unscrew the push button cap on the ignition module located on the control panel to access the battery compartment. The ignition module requires one Alkaline AAA size battery (1.5V). The negative (-) end goes in first.



WARNING: Dispose of battery safely. May explode or leak if charged or disposed of in fire.

(1.5V)
AAA BATTERY
COMPARTMENT
INSTALL (-) SIDE
FIRST




Lighting a Fire




WARNING: If these instructions are not followed exactly, a fire or explosion may result causing property damage, personal injury or loss of life.

1. Make sure the control knob is in the “OFF” position. Open the tank valve all the way.
2. Push in the igniter button. You will hear a slight clicking sound. With the igniter button pushed in, push and turn the control knob to the “ON” position. The fire should light within a few seconds. Once the flame is lit, release the igniter button and continue to hold the control knob in for 10 to 15 seconds. Release the control knob. The control knob should pop back out and then remain lit. If the fire does not light, turn the knob to the “OFF” position and wait five (5) minutes before trying again.
3. To turn down the flame, push the control knob in slightly and turn to Medium (medium flame) or Low (small flame).
4. To shut down the fire pit, turn the control knob to the “OFF” position and turn off the tank valve.

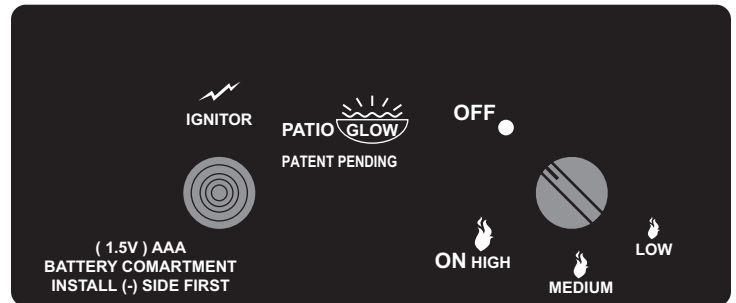

FLAME APPEARANCE

Ensure the flame appears as this image shows:

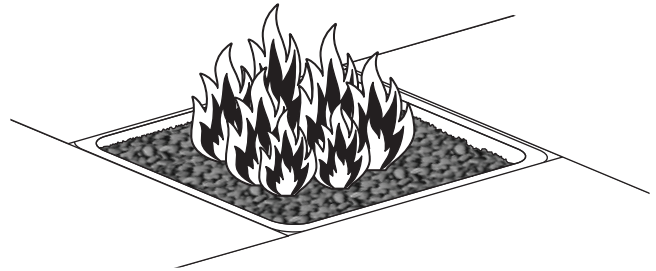

Care and Cleaning

To clean the burner, use a soft brush after the burner has cooled completely. Never use a vacuum cleaner on the burner. It is recommended that the fire pit be stored indoors during the winter if it will be subjected to freezing temperatures. The LP cylinder must be disconnected and removed from the appliance before the appliance can be stored indoors.

Troubleshooting

Problem	Probable Cause	Solution
The burner does not light.	There is no propane gas at the burner.	Check that the gas tank valve is open. Turn the control knob to the "ON" position and push the control knob in. Make sure the tank has propane gas.
	There is no spark at the electrode.	Check that the AAA battery is installed with the negative (-) end first and has a charge. Check that the wire is connected to the ignition module. Check that the electrode is not cracked or broken.
The burner does not stay lit after lighting.	The thermocouple is not in the flame.	Check that the tip of the thermocouple is even with the top of the ignition well. Remove any lava rocks from the ignition well.
	The thermocouple connection at the main control valve is loose.	Tighten the thermocouple nut at the back of the valve.
	There are no lava rocks on the burner.	Cover the burner with lava rocks per the instructions.



Questions, problems, missing parts? Before returning to the store,
call Hampton Bay Customer Service
8 a.m.-6 p.m., EST, Monday-Friday

1-855-HD-HAMPTON

HAMPTONBAY.COM


Retain this manual for future use.



Item #1000051056
Model #S5-BRH00800

USE AND CARE GUIDE

NILES PARK INSIDE ROCKER

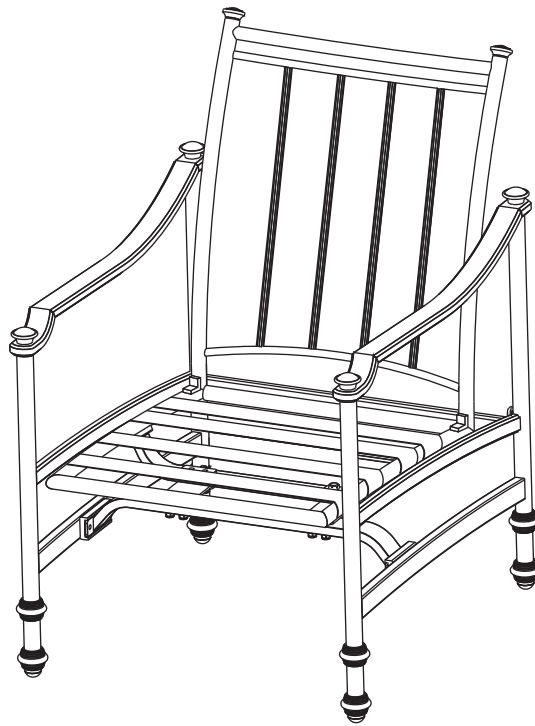

Questions, problems, missing parts? Before returning to the store,
call Hampton Bay Customer Service
8 a.m. - 6 p.m., EST, Monday - Friday

1-855-HD-HAMPTON

HAMPTONBAY.COM

THANK YOU

We appreciate the trust and confidence you have placed in Hampton Bay through the purchase of this rocker.

We strive to continually create quality products designed to enhance your home.

Visit us online to see our full line of products available for your home improvement needs.

Thank you for choosing Hampton Bay!

Table of Contents

Table of Contents.....	2	Assembly.....	5
Warranty	2	Maintenance	6
What is Covered	2	Care and Cleaning	6
What is Not Covered	2	Troubleshooting	6
Pre-Assembly	3		
Planning Assembly.....	3		
Hardware Included.....	3		
Package Contents.....	4		

Warranty

3 Year Frame / 2 Year Fabric Limited Warranty

What is Covered

We warrant the frame to be free of manufacturing defects to the original purchaser for three years and the fabric for two years.

What is Not Covered

It remains the customer's responsibility for freight and packaging charges to and from our service center. This warranty does not cover commercial use, hardware, acts of nature, fire, freezing and abusive use. In addition, purchased parts are not covered under this warranty. We reserve the right to make substitutions with similar merchandise, if the model in question is no longer in production.

Contact Customer Care at 1-855-HD-HAMPTON or visit www.HamptonBay.com.

Pre-Assembly

PLANNING ASSEMBLY

Identify all parts packed in the carton against the parts list. Remove all protective materials. Place parts on a non-abrasive surface to avoid scratching. If you are missing any parts or are unsure how to proceed with the assembly, call our Customer Service Team at 1-855-HD-HAMPTON. Do not attempt assembly if any parts are missing or damaged.


Two people may be required to assemble the rocker.

Damage to welds or frames resulting from over tightened bolts or improper assembly is not covered under our warranty. Please read all instructions carefully before assembly. If you have any questions regarding your assembly, call our Customer Service Team at 1-855-HD-HAMPTON.

HARDWARE INCLUDED




NOTE: Hardware not shown to actual size.

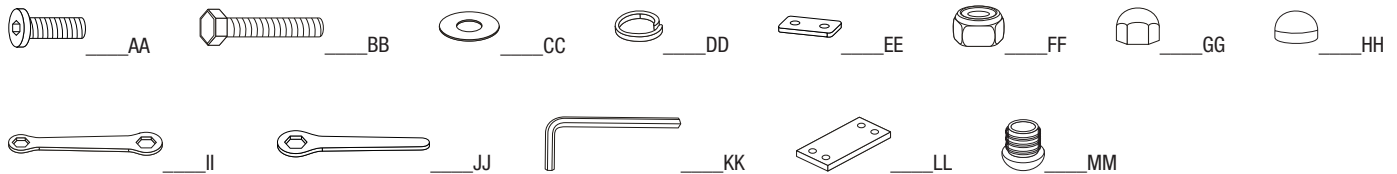

Part	Description	Order Part #	Quantity
AA	1/4 in. x 20 mm Bolt	HW0036	8
BB	5/16 in. x 40 mm Bolt	HW0794	4
CC	Ø6.5 x 1.0 mm Spring Washer	HW0004	8
DD	Ø8.0 x 2.3 mm Spring Washer	HW0003	4
EE	Metal Plate	HW0686	4
FF	5/16 in. Nut	HW0015	4
GG	Bolt Cover	HW0028	8
HH	Bolt Cover	HW0105	8
II	Wrench-1	HW0008	1
JJ	Wrench-2	HW0007	1
KK	Hex Wrench	HW0006	1
LL	Rocker Plate (Preassembled)	G0314	2
MM	Foot Cap (Preassembled)	FC0033	4

Pre-Assembly (continued)

PACKAGE CONTENTS

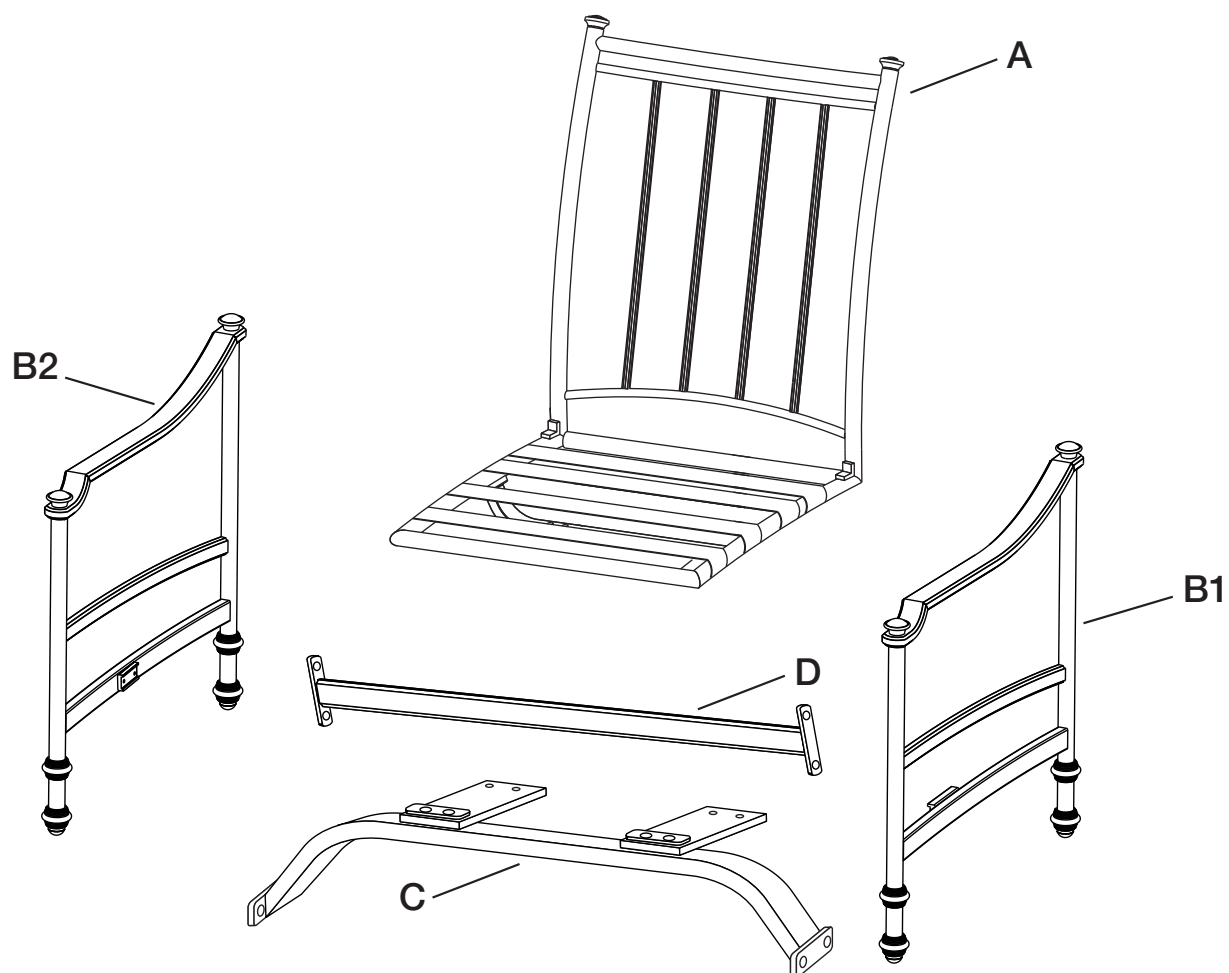

Part	Description	Order Part #	Quantity
A	Chair Frame	AR19764	1
B1	Left Leg	AR19765	1
B2	Right Leg	AR19766	1
C	Support Bar	AR19767	1
D	Leg Support	AR19768	1


Assembly



ASSEMBLY NOTE: The “Left” and “Right” legs are determined facing the rocker, not sitting in the rocker. We recommend two people work together to assemble this item. Make sure arrows from both the “U” bar and rocker assembly are pointing in the same direction!


1 Attaching the leg

- Attach the leg support (D) to the chair legs (B1 and B2) by using the 1/4 in. x 20 mm bolts (AA).
- Guide the bolts through the holes in the leg support (D), into the pre-drilled holes in the chair (B1 and B2).
- Hand tighten only.

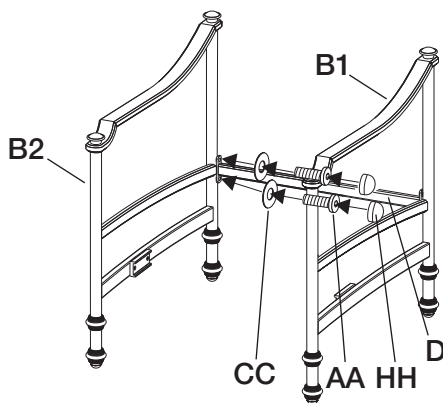


2 Attaching the support bar

- Attach the support bar to the chair legs by using the 1/4 in. x 20 mm bolts (AA) and the Ø6.5 x 1.0 mm spring washers (CC).
- Guide these bolts through the holes in the support bar (C), into the pre-drilled holes in the chair (B1 and B2).
- Hand tighten only. Do not over tighten. Over tightening may strip bolts.

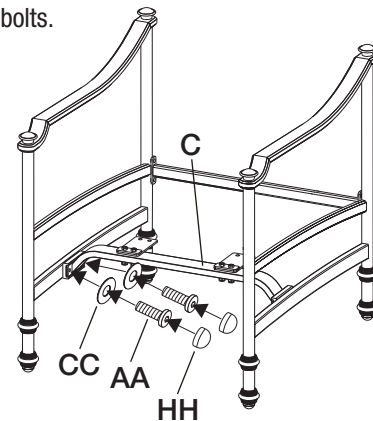

3 Setting the chair frame

- Set the chair frame (A) on the rocker assembly with the front of the seat facing you and the arrows on the “U” bar pointing towards you. This is very important for a safe, balanced rocking motion.
- If the chair frame has been properly positioned on the rocker assembly, all arrows on the “U” bar and rocker assembly will be pointing in the same direction.
- Adjust alignment of the holes of support bar (C) and “U” bar.
- Insert a metal plate (EE).
- Guide the 5/16 in. x 40 mm bolts (BB) through the holes of metal plate, “U” bar, and support bar from the top side of metal plate (EE).
- Add a Ø8.0 x 2.3 mm spring washer (DD) and a nut (FF) to each bolt (CC).
- Hand tighten only. Repeat the same procedure on the other side.
- Tighten all nuts and bolts with the hex wrenches provided and cover all bolts (AA, BB and CC) with bolt covers (GG and HH).

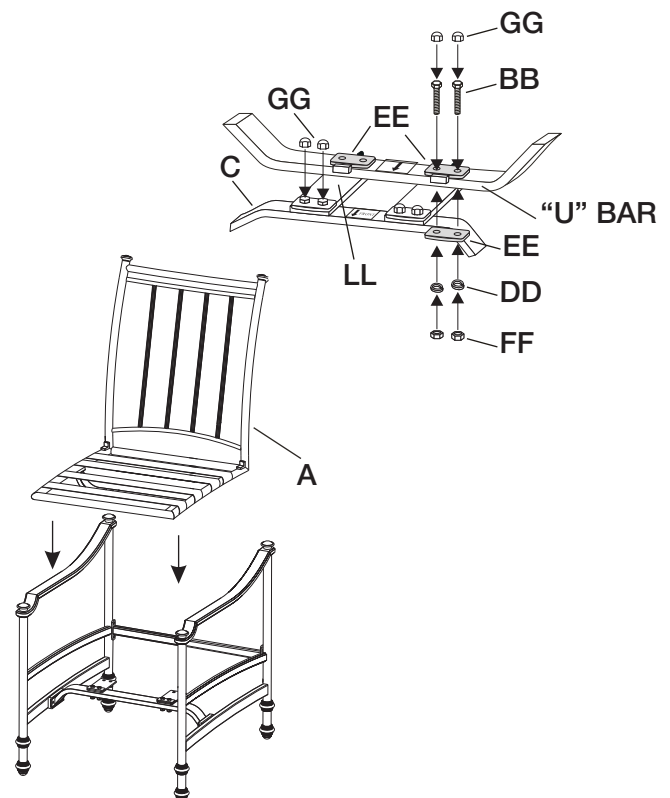

Maintenance

FRAME:

Periodically clean and dry thoroughly. Be sure to drain any water accumulated inside the frames. To thoroughly drain the frames, remove the foot caps and tilt the frames, if necessary, to remove all water. This is critical. Water allowed to accumulate inside the frames and then exposed to sub-freezing temperatures can cause damage to the frame tubing. Such damage is not covered under the warranty. Always clean, drain, and dry thoroughly before storing for the winter. For best results, always store or cover your furniture when not in use. We recommend commercially available outdoor furniture covers. Any small nicks or scratches can be covered with a light application of touchup paint.

FABRIC (CUSHIONS/SLINGS):

The best way to maintain the beauty of cushions and slings is to store them in a dry area and out of the elements when not in use or cover with commercially available outdoor furniture covers.

Care and Cleaning

FRAME:

Use mild soap and warm water. Do not use abrasive materials, cleansers, or bleach products. Rinse with clean water and dry thoroughly.

FABRIC (CUSHIONS/SLINGS):

Wipe minor spills immediately. Clean with mild soap, warm clean water, and a soft cloth. Do not use abrasive materials, cleansers, or bleach products. Although fabric has been treated to resist stains, occasional use of commercially available fabric cleaners may be necessary. Follow the manufacturer's instructions.

Troubleshooting

If your chair is not rocking properly, double-check your assembly procedure, especially Step 2. If the chair rocks too far forward or is difficult to rock backwards, you have probably installed the seat frame backwards on the rocker assembly.



Questions, problems, missing parts? Before returning to the store,
call Hampton Bay Customer Service
8 a.m. - 6 p.m., EST, Monday - Friday

1-855-HD-HAMPTON

HAMPTONBAY.COM

Retain this manual for future use.