

nstruction Manua

Sku # 1002500014

Model: SEYI710019THD

IMPORTANT: Please read this instruction carefully before assembly and save these instruction for future use.

ASSEMBLY:

- Place the base unit on a flat surface. Place the smaller wreath on top of the base unit, and align the wreath center ring to the hole at the top of the base unit. Connect the base, poles, and the top lantern as shown on the left. Connect the pieces by inserting into the bottom section and twist clockwise slightly until locked.
- Locate the hook on the top lantern piece, and hang the bigger wreath with bow on this hook. Find the male light string connector from the top lantern, and the female connector from the wreath. Connect the electrical connectors together, making sure they are in the correct orientation.
- Shape the wreaths by straightening the pine branches and point them in the same clockwise direction. Shift branches and decorations to fill any gaps.
- There is a battery box for each of the two wreaths. Open the lid of the battery boxes by releasing the locks. Insert the required number of AA batteries* into the compartment, making sure that the batteries are in the correct orientation. Close the lid with the tabs.
- Press the button on the battery box once for timer mode, twice to turn the lights constantly on, and a third time to turn the lights off or reset the timer. The built-in timer mode causes the lights to turn on and off in a cycle: on for 6 hours then off for 18. The user should initially turn on the lights at a specific time of their choice, and then the lights will turn on every day at approximately the same time.
- Replace batteries when the lights become dim. Remove batteries from unit when it is not used.

* Use AA batteries or equivalent. Batteries not included.

STORAGE:

- Remove batteries from the two battery boxes on the 2 wreaths.
- Disconnect the light string connector between the bigger wreath and the top lantern piece. Remove the bigger wreath from the hook of the top lantern piece.
- Disconnect the base, poles, and the top lantern by twisting counter-clockwise slightly from the bottom section.
- Store in original carton. Do not store in direct sunlight, in a damp area, or in an area where the temperature exceeds

Troubleshooting

If the lights do not work:

- In cold temperatures, lithium AA batteries must be used. Otherwise, the life-span of the batteries will be greatly reduced, or the lights will not turn on at all.
- Ensure the batteries are new and are inserted correctly into the battery box.
- If a bulb is not working, replace the faulty bulb as shown in the figures below. Use the replacement bulbs provided.











Spare hulbs

CAUTION:

Read all instructions and warning tags carefully.

- This decoration is for indoor and covered entry use. Do not place in uncovered area where there is prolonged exposure to sunlight or where rain/snow accumulates.
- Do not place near gas or electric heaters, radiators, fireplaces, candles or other similar sources of heat.

Do not use candles on the decoration.

- Do not install near fountains, bathtubs, sinks, or other wet areas.
 Remove batteries from product at end of season before storing to avoid battery leakage and corrosion.
 This is a Christmas decoration. This is not a toy. Keep out of the hands of small children.

- For festive use only, not intended for consecutive use over 90 days each season.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

 10) Children should be supervised to ensure that they do not play with the appliance.

 11) The supply cord cannot be replaced. If the cord is damaged the appliance should be scrapped.

- 12) Do not dispose batteries in fire or other similar sources of heat.
- Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries, or equivalent.

Please read assembly instructions. The parts for this product have been carefully inspected and packed. If you have any questions or problems regarding this product, please call our toll-free helpdesk at 1-800-919-6564, available 7 days a week, 24 hours a day.