

Garden Planter

Advantages of Using the Garden Planter

- Easy twisting action makes a perfect hole for bulbs and bedding plants
- Long handle prevents bending so you can plant while standing
- Guaranteed Forever!

Operating Instructions

1. For best results, moisten soil before planting.
2. Position the Garden Planter where plant or bulb is to be placed.
3. Step down on side foot bar and twist to cut hole to desired depth.
4. Pull up and tap to remove core.

Tips for Successful Bulb Planting

Choose your location for planting carefully. Bulbs need spring sun, so don't plant where they will be shaded by trees. Bulbs do best in well-drained soil with some organic material and fertilizer mixed in.

The best time to plant bulbs is after the first frost in your area. After digging hole to the recommended depth, place bulb with pointed top up and root end down. Cover with soil and add 3" of mulch to preserve moisture and protect bulbs, then water well.

Refer to the planting directions of each bulb type for exact planting depth and spacing, or contact your local nursery for information. Generally, large bulbs can be planted 6" apart and 8" deep. Smaller bulbs can be planted 3" apart and 5" deep.