




SKU #1002 590 038 (12 in.)  
#1002 631 145 (18 in.)  
#1002 590 033 (24 in.)  
UPC #847658001474 (12 in.)  
#847658001481 (18 in.)  
#847658001498 (24 in.)

## USE AND CARE GUIDE

---

### LED CORNER LIGHT (WHITE FINISH)

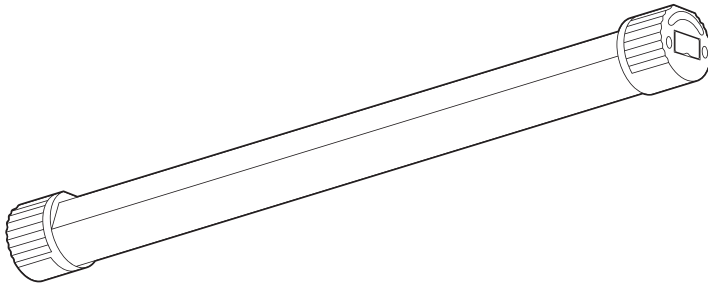

Questions, problems, missing parts? Before returning to the store,  
call Commercial Electric Customer Service  
8 a.m. - 7 p.m., EST, Monday - Friday, 9 a.m. - 6 p.m., EST, Saturday

1-877-527-0313

HOMEDEPOT.COM

---

#### THANK YOU

*We appreciate the trust and confidence you have placed in Commercial Electric through the purchase of this LED corner light. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs.*

*Thank you for choosing Commercial Electric!*

# Table of Contents

Safety Information ..... 2  
Limited Warranty ..... 3  
Pre-Installation ..... 3  
Installation – Corner Mount ..... 5

Installation – Horizontal Mount ..... 6  
Installation – Vertical Mount ..... 7  
Plugging-In and Linking Lights ..... 8

## Safety Information

Read all instructions carefully before you begin this installation. Save the instructions for further reference.

### RATINGS

- The 12 in. fixture with SKU# 1002590038 is rated at 120V, 60Hz, 8.3W.
- The 18 in. fixture with SKU# 1002631145 is rated at 120V, 60Hz, 11W.
- The 24 in. fixture with SKU# 1002590033 is rated at 120V, 60Hz, 14.4W.

1. Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
2. This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC Rules and ICES-005 of the IC Rules. These limits are designed to provide reasonable installation protection. This equipment generates and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving area.
  - Increase the separation between the equipment and the receiver.
  - Connect the equipment into a different outlet and circuit from the receiver outlet and circuit.
  - Consult the dealer or an experienced radio/TV technician for help.
3. Consult a local licensed electrician or electrical contractor if you are not sure about the installation.

4. Deviation from the assembly instructions may result in a risk of fire or electric shock.
5. The National Electrical Code (NEC) does not permit cords to be concealed where damage to insulation may go unnoticed. To prevent fire danger, do not run the cord behind walls, ceilings, soffits, or cabinets where it may be inaccessible for examination. Cords should be visually examined periodically and immediately replaced when any damage is noted.
6. This light is for household use only.
7. To reduce the risk of fire, electric shock, or injury to persons use only insulated staples or plastic ties to secure cords. Route and secure cords so that they will not be pinched or damaged when the cabinet is pushed to the wall.
8. Do not operate this fixture with a missing or damaged cover or housing.
9. The LED source cannot be replaced.
10. Do not stare directly into LED source.
11. Do not dismantle or alter this fixture.



**WARNING:** Ensure the electricity is turned off at the main circuit breaker or fuse box. Do not attempt to install the fixture with the power on.



**CAUTION:** For indoor and dry location use only.



**CAUTION:** Do not mount this fixture near a heat source as it may damage this fixture.



**CAUTION:** This product is NOT DIMMABLE.

## Limited Warranty

The manufacturer warrants this product to be free from defects in materials and workmanship for a period of five (5) years from date of purchase. This warranty applies only to the original consumer purchaser and only to products used in normal use and service. If this product is found to be defective, the manufacturer's only obligation, and your exclusive remedy, is the repair or replacement of the product at the manufacturer's discretion, provided that the product has not been damaged through misuse, abuse, accident, modifications, alterations, neglect or mishandling. This warranty shall not apply to any product that is found to have been improperly installed, set-up, or used in any way not in accordance with the instructions supplied with the product. This warranty shall not apply to a failure of the product as a result of an accident, misuse, abuse, negligence, alteration, or faulty installation, or any other failure not relating to faulty material workmanship. The manufacturer specifically disclaims any liability and shall not be liable for any consequential or incidental loss or damage, including labor/expense costs involved in the replacement or repair of said product.

Contact the Customer Service Team at 1-877-527-0313 or visit [www.HomeDepot.com](http://www.HomeDepot.com).

## Pre-Installation

### PLANNING INSTALLATION

Read all instructions completely before you begin this installation. Compare all parts with the Hardware Included and Package Contents lists. If any part appears missing or damaged, do not install this product. Contact Customer Service at 1-877-527-0313.

### TOOLS REQUIRED



Phillips  
screwdriver

### HARDWARE INCLUDED




**NOTE:** Hardware shown to actual size.



Part	Description	Quantity
AA	Mounting Template	1
BB	Left Clip (1 extra)	2
CC	Right Clip (1 extra)	2
DD	Screw (2 extra)	4

## Pre-Installation (continued)

### PACKAGE CONTENTS

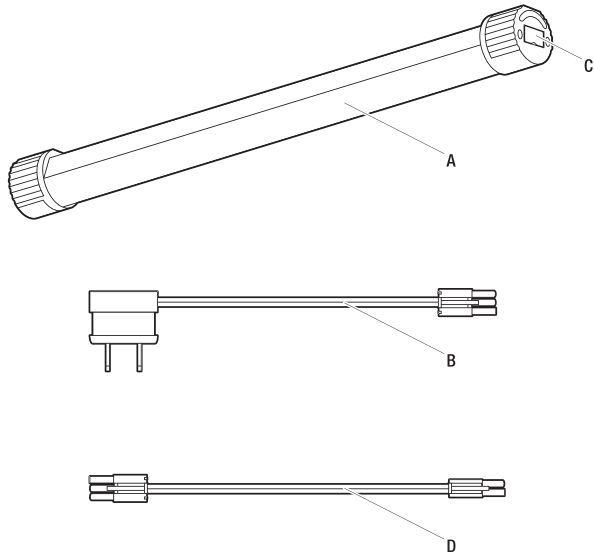


Part	Description	Quantity
A	Light Fixture	1
B	5 ft. Power Cord	1
C	End Cap (preassembled to Light Fixture (A))	1
D	18 in. Extension Cord	1

## Installation – Corner Mount

### 1 Marking the installation location


- Select a suitable dry mounting location (for indoor use only). Make sure the mounting surface is capable of supporting the fixture.
- Use the enclosed mounting template (AA) to mark the appropriate screw hole locations. Ensure the longest edge of the mounting template is attached firmly to the cabinet edge.

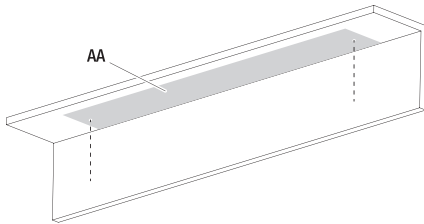

### 2 Installing the clips

- Install the left and right clips (BB and CC) in the marked locations with two mounting screws (DD).

**IMPORTANT:** The screws (DD) must be installed to the side holes of the clips, not the middle hole.


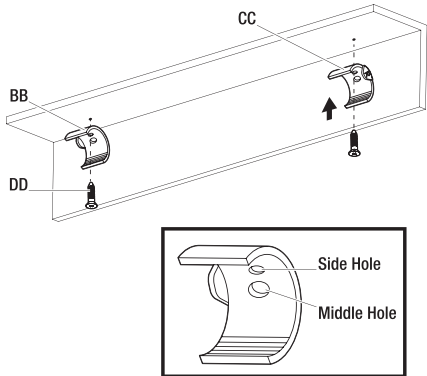


### 3 Installing the fixture

- Install the fixture (A) inside the clips (BB and CC). Rotate the fixture to the desired angle.

**IMPORTANT:** Make sure the small clip goes to the slot (1) in the end cap.


- Proceed to the Plugging-in and Linking Lights section on page 8 of this document.

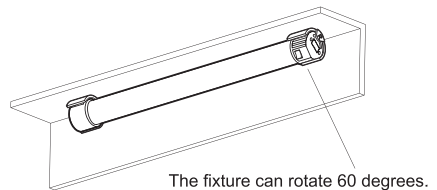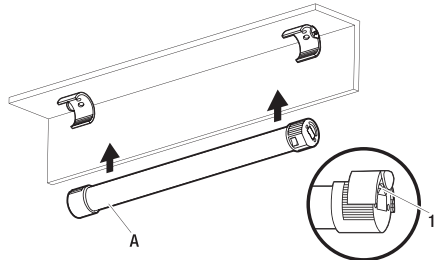

# Installation – Horizontal Mount

## 1 Marking the installation location


- Select a suitable dry mounting location (for indoor use only). Make sure the mounting surface is capable of supporting the fixture.
- Use the enclosed mounting template (AA) to mark the appropriate screw hole locations.

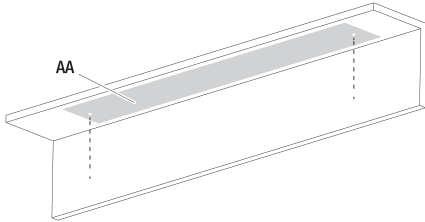

## 2 Installing the clips

- Install the left and right clips (BB and CC) in the marked locations with mounting screws (DD).

**IMPORTANT:** The screws (DD) must be installed in the middle hole of the clip, not the side hole.


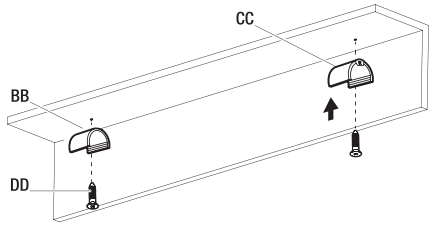


## 3 Installing the fixture

- Install the fixture (A) inside the clips (BB and CC). Rotate the fixture to the desired angle.

**IMPORTANT:** Make sure the small clip goes to the slot (1) in the end cap.


- Proceed to the Plugging-In and Linking Lights section on page 8 of this document.

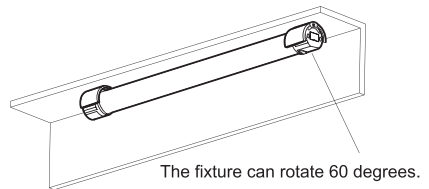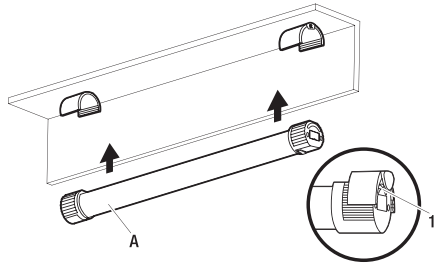

# Installation – Vertical Mount

## 1 Marking the installation location

- Select a suitable dry mounting location (for indoor use only). Make sure the mounting surface is capable of supporting the fixture.
- Use the enclosed mounting template (AA) to mark the appropriate screw hole locations.

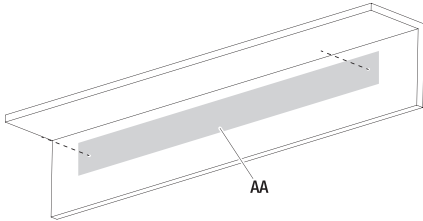


## 2 Installing the clips

- Install the left and right clips (BB and CC) in the marked locations with mounting screws (DD).



**IMPORTANT:** The screws (DD) must be installed in the middle hole of the clip, not the side hole.

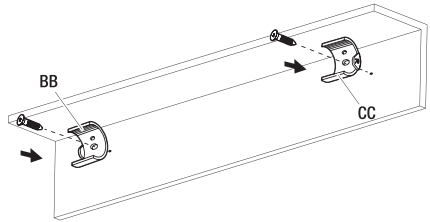



## 3 Installing the fixture

- Install the fixture (A) inside the clips (BB and CC). Rotate the fixture to the desired angle.



**IMPORTANT:** Make sure the small clip goes to the slot (1) in the end cap.

- Proceed to the Plugging-In and Linking Lights section on page 8 of this document.

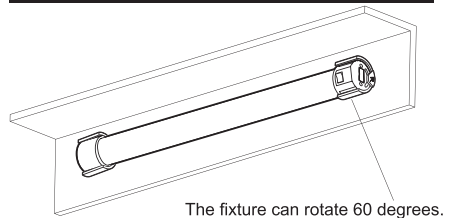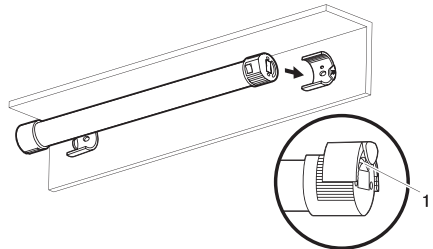

## Plugging-In and Linking Lights




**CAUTION:** Do not attempt to attach additional fixtures to the existing system without unplugging the power cord from the electrical outlet or disconnecting the electricity at the electrical power panel.

**NOTE:** Number of fixtures that can be linked together:



- 12 in. - A maximum of 11 fixtures can be connected together.
- 18 in. - A maximum of 8 fixtures can be connected together.
- 24 in. - A maximum of 7 fixtures can be connected together.


1. Attach the 5 ft. (1.52 m) power cord (B) with the plug and 3-pin quick connector to the fixture closest to the outlet.
2. Attach the 18 in. (45.72 cm) extension cord (D) with link connectors on both ends. It is used to connect the light fixture to the next one in your chain. Link to the adjacent fixture only. See the diagram below to see how the 2-pin and 3-pin plugs are intended to be used.
3. Remove the end cap (C) from the light to use the 18 in. extension cord (D).
4. Plug the fixture into a 120V/60Hz outlet. Turn on the switch to light the fixture.
5. To install additional fixtures, first follow the mounting instructions. Once installed, attach the extension cord between the last fixture (previously installed) and the new one.
6. When adding additional fixtures to an existing system of linked fixtures, the power cord is not required. Only the first fixture in the chain needs to be connected to the power with the power cord.

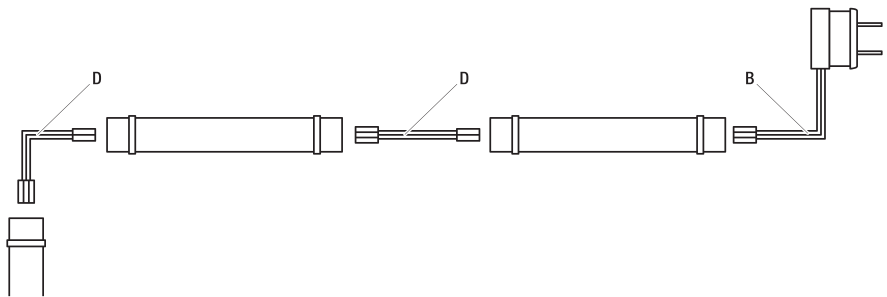




# Luminous Intensity Distribution


12 in. LED Corner Light ( 57401-WH):

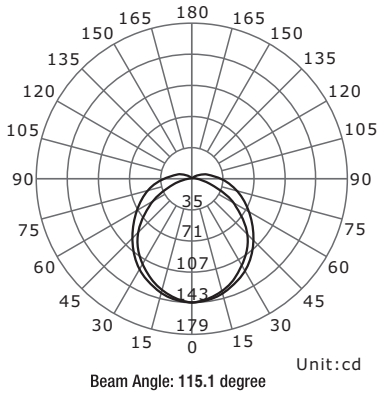

18 in. LED Corner Light ( 57402-WH):

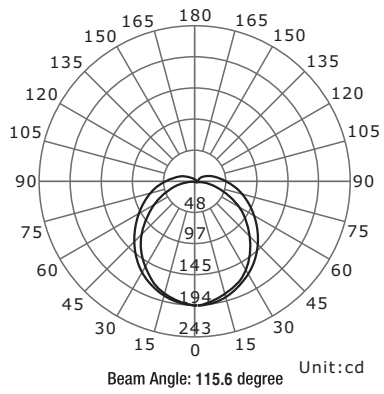

24 in. LED Corner Light ( 57403-WH):

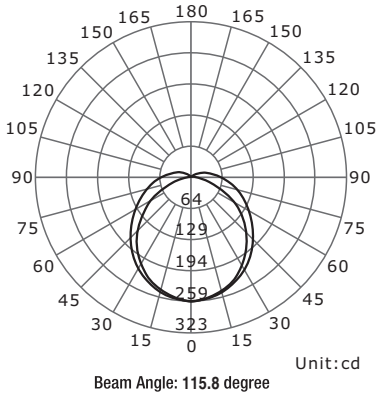







Questions, problems, missing parts? Before returning to the store,  
call Commercial Electric Customer Service  
8 a.m. - 7 p.m., EST, Monday-Friday, 9 a.m. - 6 p.m., EST, Saturday

**1-877-527-0313**

**HOMEDEPOT.COM**

Retain this manual for future use.